

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bulelink](#) /

› [Bulelink G10 Vacuum Cleaner Battery Instruction Manual](#)

Bulelink G10

Bulelink G10 Vacuum Cleaner Battery Instruction Manual

Model: G10 | Brand: Bulelink

INTRODUCTION

This instruction manual provides essential information for the safe and efficient use, installation, and maintenance of your Bulelink G10 Vacuum Cleaner Battery. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INSTRUCTIONS

Always follow these safety precautions to prevent damage to the battery, vacuum cleaner, or personal injury:

- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a battery. Do not store batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- Do not subject batteries to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use any charger other than that specifically provided for use with the equipment.
- Keep batteries out of the reach of children.
- Dispose of used batteries promptly and according to local regulations.
- Ensure the battery is fully inserted and locked into the vacuum cleaner before operation.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Bulelink G10 Vacuum Cleaner Battery
- 1 x Instruction Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge the battery. Connect the Bulelink G10 vacuum cleaner (with the battery installed) to its charging dock or power adapter. The charging indicator on the vacuum cleaner will show the charging status. A full charge typically takes 3-4 hours.

2. Battery Installation

To install the battery into your Bulelink G10 vacuum cleaner:

1. Ensure the vacuum cleaner is powered off and unplugged from any power source.
2. Locate the battery compartment on your Bulelink G10 vacuum cleaner. This is typically on the main body of the vacuum.
3. Align the battery with the compartment, ensuring the connection terminals match.
4. Gently slide the battery into the compartment until it clicks securely into place. Do not force the battery.
5. To remove the battery, press the release button (if present) and slide the battery out.



This image shows the Bulelink G10 vacuum cleaner battery pack. It features a dark grey casing with a blue button on one side and connection terminals on the top surface, designed for easy integration with the vacuum cleaner.

OPERATING

Battery Usage

Once the battery is installed and charged, your Bulelink G10 vacuum cleaner is ready for use. The battery powers the vacuum cleaner, providing cordless operation. Monitor the battery indicator on your vacuum cleaner to understand the remaining charge. Recharge the battery when the indicator shows low power to ensure optimal performance.

MAINTENANCE

Cleaning the Battery

Wipe the exterior of the battery with a clean, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the battery terminals are clean and free of dust or debris for optimal connection.

Battery Storage

If storing the battery for an extended period (more than one month), charge it to approximately 50-60% capacity. Store it in a cool, dry place away from direct sunlight and extreme temperatures. Recharge the battery every 3-6 months to prevent deep discharge, which can reduce battery life.

Battery Life Optimization

- Avoid completely draining the battery before recharging.
- Do not expose the battery to extreme heat or cold.
- Use only the original Bulelink charger or compatible charging system.

TROUBLESHOOTING

If you encounter issues with your Bulelink G10 Vacuum Cleaner Battery, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Battery not charging	Charger not connected properly. Faulty charger or power outlet. Battery terminals are dirty. Battery is too hot or too cold.	Ensure charger is securely plugged into the vacuum and power outlet. Try a different power outlet or charger (if available). Clean battery terminals with a dry cloth. Allow battery to reach room temperature before charging.
Vacuum cleaner not powering on (battery related)	Battery is not fully charged. Battery not properly installed. Battery is faulty.	Charge the battery fully. Re-install the battery, ensuring it clicks into place. If issues persist, contact Bulelink customer support.

Problem	Possible Cause	Solution
Reduced operating time	Battery is aging. Operating in high-power mode continuously. Battery not fully charged.	Battery capacity naturally decreases over time. Use standard mode for general cleaning. Ensure battery is fully charged before each use.

SPECIFICATIONS

Feature	Detail
Brand	Bulelink
Model	G10 (Vacuum Cleaner Battery)
Battery Type	Rechargeable Lithium-ion (Specific voltage/capacity not provided)
Dimensions (L x W x H)	18 x 9 x 4.4 cm (approx.)
Weight	560 g (approx.)
Included Items	1 x Battery Pack
First Available Date	June 15, 2025

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your original vacuum cleaner purchase or visit the official Bulelink website. If you have any questions or require assistance, please contact Bulelink customer service.

For further assistance, you may also refer to the main instruction manual of your Bulelink G10 Vacuum Cleaner.