

Wodgreat S0532GB

Wodgreat MP3 Player with Bluetooth 5.0 (Model S0532GB) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the Wodgreat MP3 Player, Model S0532GB. This portable music player features Bluetooth 5.0 connectivity, a 1.8-inch screen, and supports various audio formats. It also includes functions such as FM radio, voice recording, e-book reading, video playback, and image viewing.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Wodgreat MP3 Player (Model S0532GB)
- Earphones
- USB Charging Cable
- User Manual
- 32GB TF Card (pre-installed or included separately)



Image: Contents of the Wodgreat MP3 Player package.

3. PRODUCT OVERVIEW

The Wodgreat MP3 Player is designed for portability and ease of use. It features a 1.8-inch screen and a tactile button interface.



Image: Front and side view of the Wodgreat MP3 Player.

Button Functions

Easy to Use-Buttons Guide

M: Up/Menu

*Short press to enter the menu

◀ :Left/Previous

*When playing music, short press to select the last music; Long press to rewind the music

▶▶ :Confirm/Play or Pause

*Long press to turn off or turn on the MP3

▶ :Right/Next

*When playing music, short press to select the next song, Long press to fast forward the music

VOL: Volume/Down/Return

*Short press to return to the previous step, Long press to enter the volume adjustment menu
Press ◀ or ▶ to choose

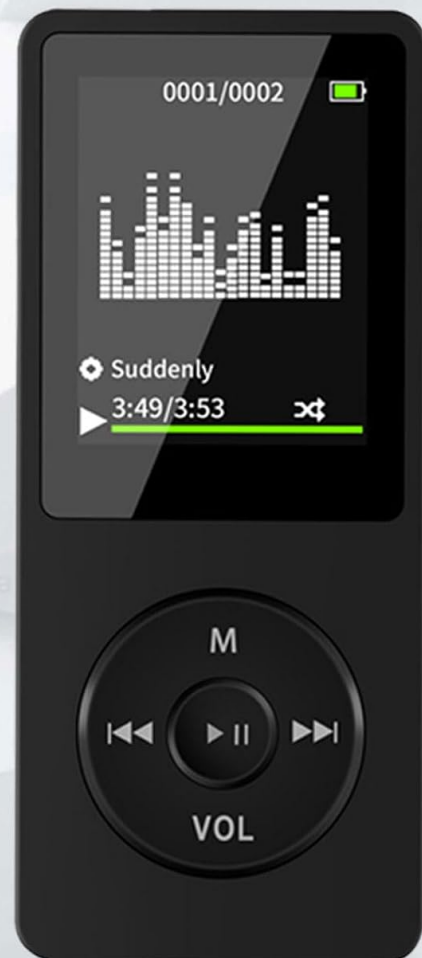


Image: Guide to the MP3 player's button controls.

- **M (Menu)**: Short press to enter the main menu.
- **Left/Previous (◀◀)**: Short press to select the previous track during playback. Long press to rewind.
- **Play/Pause/Confirm (▶■ ■)**: Short press to play or pause. Long press to power on or off the MP3 player.
- **Right/Next (▶▶)**: Short press to select the next track during playback. Long press to fast forward.
- **VOL (Volume/Return)**: Short press to return to the previous step. Long press to enter the volume adjustment menu. Use Left/Previous (◀◀) or Right/Next (▶▶) to adjust volume.

4. SETUP

4.1. Charging the Device

Before initial use, fully charge the MP3 player. Connect the provided USB charging cable to the player's charging port and a USB power source (e.g., computer USB port, USB wall adapter). The battery indicator on the screen will show charging status.

30H Long Battery Life

1.8inch TFT color screen with adjustable backlight



Image: MP3 player charging via USB connection.

4.2. Loading Music and Files

To transfer files to the MP3 player:

1. Connect the MP3 player to your computer using the USB cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop music files, videos, images, or e-books directly into the player's storage or designated folders.
4. Safely eject the device from your computer before disconnecting the USB cable.

4.3. Inserting a MicroSD Card

The player comes with a 32GB TF (MicroSD) card. It supports expansion up to 128GB. To insert or replace the card:

1. Locate the MicroSD card slot on the side of the player.
2. Gently insert the MicroSD card into the slot until it clicks into place.
3. To remove, push the card inward until it springs out.

Large Capacity Storage

32GB

*Included

32GB TF Card,
stores over 4000 songs and E-books

128GB

*NOT Included

Expandable up to 128GB



Image: Illustration of the MP3 player's expandable storage capacity.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Power On:** Long press the Play/Pause/Confirm (▶■ ■) button.
- **Power Off:** Long press the Play/Pause/Confirm (▶■ ■) button.

5.2. Basic Navigation

Use the M (Menu) button to access the main menu. Navigate through menu options using the Left/Previous (◀◀) and Right/Next (▶▶) buttons. Press Play/Pause/Confirm (▶■ ■) to select an option. Press VOL to go back to the previous screen.

5.3. Music Playback

The player supports MP3, WMA, OGG, WAV, APE, FLAC, AAC-LC, and ACELP audio formats, providing high-fidelity sound reproduction.

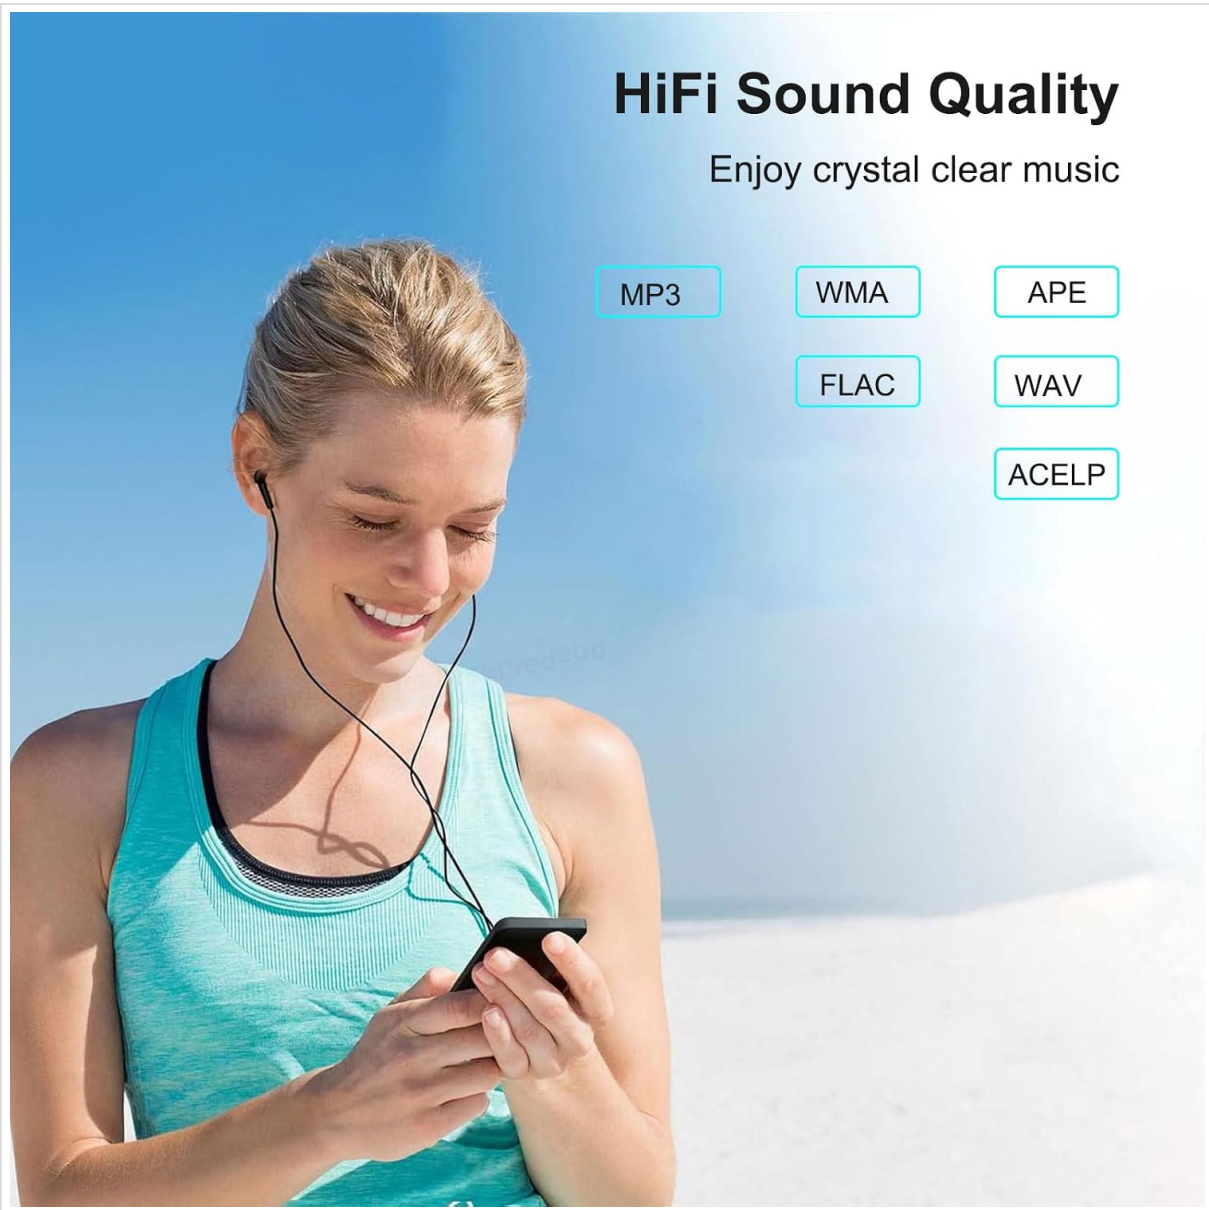


Image: HiFi sound quality and supported audio formats.

From the main menu, select 'Music' to browse your audio files. During playback, you can choose from various modes:

- **Sequential Play:** Plays tracks in order.
- **Playlist Loop:** Repeats the current playlist.
- **Single-Track Repeat:** Repeats the current song.
- **Shuffle Mode:** Plays tracks in a random order.

5.4. Bluetooth Connection

The MP3 player features Bluetooth 5.0 for stable and fast connections to Bluetooth headphones or speakers. It cannot connect to mobile phones or tablets.



Wireless Bluetooth 5.0

More stable connection, enjoy music freely

||↓ Sequential Play

↺ Loop Single

↻ Loop All

↻ Shuffle Repeat



Image: Bluetooth 5.0 connectivity and music playback modes.

1. From the main menu, select 'Bluetooth'.
2. Turn on Bluetooth on the MP3 player.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The player will scan for available devices. Select your device from the list to pair.

5.5. FM Radio

To listen to FM radio:

1. Connect wired earphones to the player; they act as the antenna.
2. From the main menu, select 'FM Radio'.
3. Use the navigation buttons to scan for stations or manually tune to a frequency.

FM Radio & Simple Recording

Listen to FM radio and record it anytime, anywhere



Image: FM Radio interface and recording function.

5.6. Voice Recorder

The player includes a voice recording function.

1. From the main menu, select 'Recorder'.
2. Follow the on-screen prompts to start, pause, save, or play recordings.

5.7. E-Book Reader

The player supports e-books in TXT format.

1. From the main menu, select 'E-Book'.
2. Browse and select your TXT files to read.

5.8. Video Playback & Image Viewer

The 1.8-inch screen allows for viewing videos and pictures.



Image: Multifunctional capabilities of the MP3 player.

1. From the main menu, select 'Video' or 'Picture'.

2. Navigate to your desired file and press Play/Pause/Confirm (▶■■) to view.

6. MAINTENANCE

6.1. Cleaning

Wipe the device with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.

6.2. Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Charge the device regularly, but avoid overcharging for extended periods.
- If storing the device for a long time, charge it to about 50% capacity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Cannot connect to Bluetooth device.	Bluetooth device not in pairing mode; player too far from device.	Ensure Bluetooth device is in pairing mode and within range. Re-attempt pairing. Note: Player cannot connect to phones/tablets.
Music files not recognized.	Unsupported file format; files not transferred correctly.	Ensure files are in supported formats (MP3, WMA, OGG, WAV, APE, FLAC, AAC-LC, ACELP). Re-transfer files.
FM Radio not working.	Earphones not connected.	Connect wired earphones; they serve as the antenna.

8. SPECIFICATIONS

- **Model Name:** S0532GB
- **Brand:** Wodgreat
- **Screen Size:** 1.8 Inches
- **Connectivity Technology:** Bluetooth 5.0
- **Memory Storage Capacity:** 32 GB (expandable up to 128 GB via MicroSD card)
- **Supported Audio Formats:** MP3, WMA, OGG, WAV, APE, FLAC, AAC-LC, ACELP
- **Supported E-Book Format:** TXT
- **Special Features:** Built-In Speaker, Hi-Res Audio, FM Radio, Voice Recorder, Video Playback, Image Viewer
- **Item Weight:** 2.89 ounces (approx. 82 grams)
- **Package Dimensions:** 4.41 x 2.91 x 1.42 inches

9. WARRANTY AND SUPPORT

The Wodgreat MP3 Player is covered by a 3-month return and exchange policy and a 2-year warranty. For any questions or issues during use, please contact customer support. Responses are typically provided within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official Wodgreat website.