

momyeasy 1501

MOMYEASY Baby Food Maker Instruction Manual

Model: 1501

1. SAFETY INFORMATION

Please read all instructions carefully before using the MOMYEASY Baby Food Maker. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, flat, heat-resistant surface.
- Do not immerse the main unit in water or other liquids.
- Keep hands and utensils away from the blade during operation to prevent injury.
- Unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the appliance with a damaged cord or plug. Contact customer support for assistance.
- This appliance is intended for household use only.
- Ensure the lid is securely locked before operating the blending function.
- Exercise caution when handling hot steam and hot food. Use oven mitts if necessary.

Choose Healthier, Choose Safer



Image: Safety design features including dual-layer insulation, smart lock, and anti-slip handle.

2. PRODUCT OVERVIEW

The MOMYEASY Baby Food Maker is an all-in-one appliance designed to simplify the preparation of nutritious baby food. It combines steaming, blending, bottle warming, and sterilizing functions.



Image: The MOMYEASY Baby Food Maker with its main components visible.

Key Components:

- **Main Unit:** Houses the motor, heating element, and control panel.
- **Blending Cup:** Transparent cup for steaming and blending food. Made of Tritan material.
- **Blade Assembly:** Detachable stainless steel blade for chopping and pureeing.
- **Steamer Basket:** Used to hold food for steaming.
- **Lid:** Secures the blending cup and prevents splashes.
- **Water Tank:** Located in the main unit for steaming and sterilizing.
- **Control Panel:** Touch-sensitive interface for selecting functions and adjusting settings.

Food Steaming

instead the traditional steamer, can steam any meat, cooked vegetables, fruits



Image: Internal components including the steamer basket and water tank.

3. GETTING STARTED (SETUP)

3.1 Initial Cleaning

1. Before first use, wash the blending cup, blade assembly, steamer basket, and lid with warm soapy water. Rinse thoroughly and dry.
2. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.

3.2 Assembly

1. Place the main unit on a stable, dry surface.
2. Insert the blade assembly into the blending cup.
3. Place the steamer basket into the blending cup (if steaming).
4. Secure the lid onto the blending cup, ensuring it clicks into place.
5. Place the assembled blending cup onto the main unit, aligning it correctly until it locks.

3.3 Filling the Water Tank

1. Open the water tank cover on the main unit.
2. Fill the water tank with distilled or purified water up to the MAX line. Do not overfill.
3. Close the water tank cover securely.

Self-Cleaning Magic—Zero Scrubbing, 100% Baby-Safe!

More Time for Baby, Less Time Scrubbing



**Quick
Cleaning**



**100%
Baby-Safe**



**Self
Clean**



Image: Filling the water tank for steaming or sterilizing.

4. OPERATING INSTRUCTIONS

The MOMYEASY Baby Food Maker offers multiple functions for preparing baby food. Refer to the control panel for function selection.

From Kitchen Chaos to Happy Meals

All-in-One Blender: Fast, Compact & Baby-Safe



Rapid Cooking

Nutrient-rich meals
ready in 20 minutes



Versatile Textures

Supports chewing
swallowing development



Space-Saving Design

50% smaller than
traditional blenders

Image: The touch control panel with functions like Auto Blend, Warm, Clean, Manual Blend, Sterilize, and Steam.

Your browser does not support the video tag.

Video: A demonstration of the MOMYEASY Baby Food Maker's various functions, including adding water, adding vegetables, steaming, auto blending, manual blending, pouring, bottle warming, sterilizing pacifiers, and auto cleaning.

4.1 Steaming Food

1. Prepare ingredients by washing, peeling, and chopping them into small, uniform pieces (approximately 1 cm cubes).

2. Place the chopped ingredients into the steamer basket within the blending cup.
3. Ensure the water tank is filled to the appropriate level.
4. Place the lid on the blending cup and secure the blending cup to the main unit.
5. Press the 'Steam' button on the control panel. The default steaming time will be displayed.
6. Adjust the steaming time using the '+' and '-' buttons if needed. Refer to a steaming guide for recommended times based on food type.
7. The appliance will automatically begin steaming. It will beep when the steaming cycle is complete.

360° Anti-Scald Safety Design



- ✓ **Dual-Layer Insulation**
Blocks heat during cooking – safe to touch!



- ✓ **Smart Lock Mechanism**
Alerts if misaligned – prevents accidental opening



- ✓ **Anti-Slip Heat-Resistant Handle**
Secure grip, zero risk of burns

Image: The food maker actively steaming ingredients, with the 'Steam' function highlighted on the control panel.

4.2 Blending Food

After steaming, you can blend the food directly in the same cup.

4.2.1 Auto Blend

1. Once steaming is complete, remove the steamer basket (if used) and transfer the steamed food directly into the blending cup.
2. Ensure the lid is securely closed.
3. Press the 'Auto Blend' button. The appliance will automatically blend the food to a smooth consistency.
4. The blending will stop automatically when complete.

4.2.2 Manual Blend

1. Follow steps 1 and 2 from Auto Blend.
2. Press and hold the 'Manual Blend' button for desired blending duration. Release the button to stop.
3. Repeat short pulses until the desired texture is achieved. This allows for fine, medium, or coarse textures.

momyeasy



VS



✓ Anti-Splash Lid → Zero Mess, Zero Stress



✓ 3-Stage Texture Control → Fine → Medium → Coarse (4M–12M+)



✓ Nutri Lock Steam Tech → Retains 90%+ Natural Nutrients



Image: Illustration of manual blend for texture control (fine, medium, coarse) and auto blend for convenience.

4.3 Bottle Warming

1. Ensure the water tank is filled to the appropriate level.
2. Place the baby bottle (without the lid) into the blending cup.
3. Add water to the blending cup, ensuring the water level is below the bottle's rim and covers the milk level.
4. Place the lid on the blending cup and secure it to the main unit.
5. Press the 'Warm' button. The default warming time will be displayed.
6. Adjust the warming time using the '+' and '-' buttons as needed.
7. The appliance will automatically begin warming. It will beep when the warming cycle is complete.
8. Always check the milk temperature before feeding the baby.

Bottle Warmer

Built-in milk warming program,
instead of the traditional way of milk
warming, multi-purpose machine



Image: The appliance warming a baby bottle, demonstrating its multi-purpose functionality.

4.4 Sterilizing

The sterilizing function is suitable for small items like pacifiers or bottle nipples.

1. Ensure the water tank is filled to the appropriate level.
2. Place the items to be sterilized into the steamer basket within the blending cup.
3. Place the lid on the blending cup and secure it to the main unit.

4. Press the 'Sterilize' button. The appliance will begin the sterilization cycle.
5. The appliance will beep when the sterilization cycle is complete. Allow items to cool before handling.

5. CLEANING AND MAINTENANCE

5.1 Daily Cleaning

1. Always unplug the appliance before cleaning.
2. Wash the blending cup, blade assembly, steamer basket, and lid with warm soapy water after each use. These parts are dishwasher safe.
3. Wipe the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. Ensure all parts are thoroughly dry before reassembling or storing.

5.2 Self-Cleaning Function

The appliance features a self-cleaning function for the water tank.

1. Ensure the water tank is filled to the MAX line with clean water.
2. Place the empty blending cup (without food) onto the main unit and secure the lid.
3. Press the 'Clean' button on the control panel. The appliance will run a cleaning cycle.
4. After the cycle, empty any remaining water from the tank and blending cup.

1 Machine, 5 Appliances Replaced



Image: The self-cleaning function in action, circulating water within the blending cup.

5.3 Descaling the Water Tank

To maintain optimal performance, descale the water tank regularly (e.g., once a month or as needed based on water hardness).

1. Mix 50ml of white vinegar with 100ml of water.
2. Pour the mixture into the water tank.
3. Let it sit for 30 minutes to 1 hour.
4. Run a steam cycle with the vinegar solution (without food).
5. Empty the tank and rinse thoroughly with clean water. Run 2-3 cycles with clean water to remove any vinegar residue.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem/Error Code	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Error Code E1 (Secure Lock Alert)	Blending cup or lid not correctly assembled/locked.	Reposition the blending cup and/or lid until it clicks securely into place.
Error Code E3 (Low Water Alert)	Water tank is empty or below minimum level.	Refill the water tank to the MAX line.
Food not blending smoothly.	Too little liquid; food pieces too large; overfilling.	Add a small amount of water or breast milk/formula. Chop food into smaller pieces. Do not exceed the MAX fill line. Use manual blend for better control.
Steaming takes too long or no steam.	Insufficient water in tank; mineral buildup.	Check water tank level. Perform descaling if necessary.



Stage-Perfect Nutrition for Every Age

From First Bites to Toddler Favorites



4–6 Months+

Smooth Purees – Gentle on delicate tummies



7–9 Months+

Homemade Blends – Soft textures for early chewing



10 Months+

Chunky Recipes – Encourages self-feeding

Image: Visual representation of error codes E1 (Secure Lock Alert) and E3 (Low Water Alert) on the display.

7. SPECIFICATIONS

Feature	Detail
Model Name	BFP1501
Power Source	Corded Electric
Wattage	300 watts
Product Dimensions	4.7"D x 9.8"W x 8.6"H
Item Weight	5.17 pounds

Feature	Detail
Blade Material	Stainless Steel
Special Features	Auto Shut Off, Safety Lock
Material Safety	BPA-Free Tritan material

8. WARRANTY AND SUPPORT

MOMYEASY products are designed for quality and reliability. For warranty information, product registration, or technical support, please refer to the contact details provided with your purchase or visit the official MOMYEASY website.

Please retain your proof of purchase for any warranty claims.

© 2025 MOMYEASY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question