

[Manuals.plus](#) /

› [GOURMETmaxx](#) /

› GOURMETmaxx Mr. Magic Power+ 400W Mixer - Instruction Manual

GOURMETmaxx 15525

GOURMETmaxx Mr. Magic Power+ 400W Mixer - Instruction Manual

Model: 15525

1. INTRODUCTION

Thank you for choosing the GOURMETmaxx Mr. Magic Power+ 400W Mixer. This versatile appliance is designed for quick and efficient preparation of smoothies, shakes, sauces, purees, and more. Its compact design and powerful motor make it an ideal addition to any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1: GOURMETmaxx Mr. Magic Power+ 400W Mixer, black and silver design.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before operating the appliance.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the power base, cord, or plug in water or other liquids.
- Keep hands and utensils away from the moving blades during operation to prevent injury.
- The blades are sharp. Handle the cross blade attachment with extreme care during assembly, disassembly, and cleaning.
- This appliance is not intended for blending hot liquids. Allow hot ingredients to cool before blending.
- Do not blend ice cubes directly. The appliance is not designed for this purpose and may be damaged.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before

cleaning.

- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

3. PRODUCT COMPONENTS

The GOURMETmaxx Mr. Magic Power+ Mixer comes as a 4-piece set, including the following components:

1. **Powerbase (400W):** The main unit containing the motor.
2. **Cross Blade Attachment:** Stainless steel blades for blending and chopping.
3. **500ml Blending Cup:** The primary container for ingredients.
4. **To-Go Lid:** For sealing the blending cup, allowing for portability.

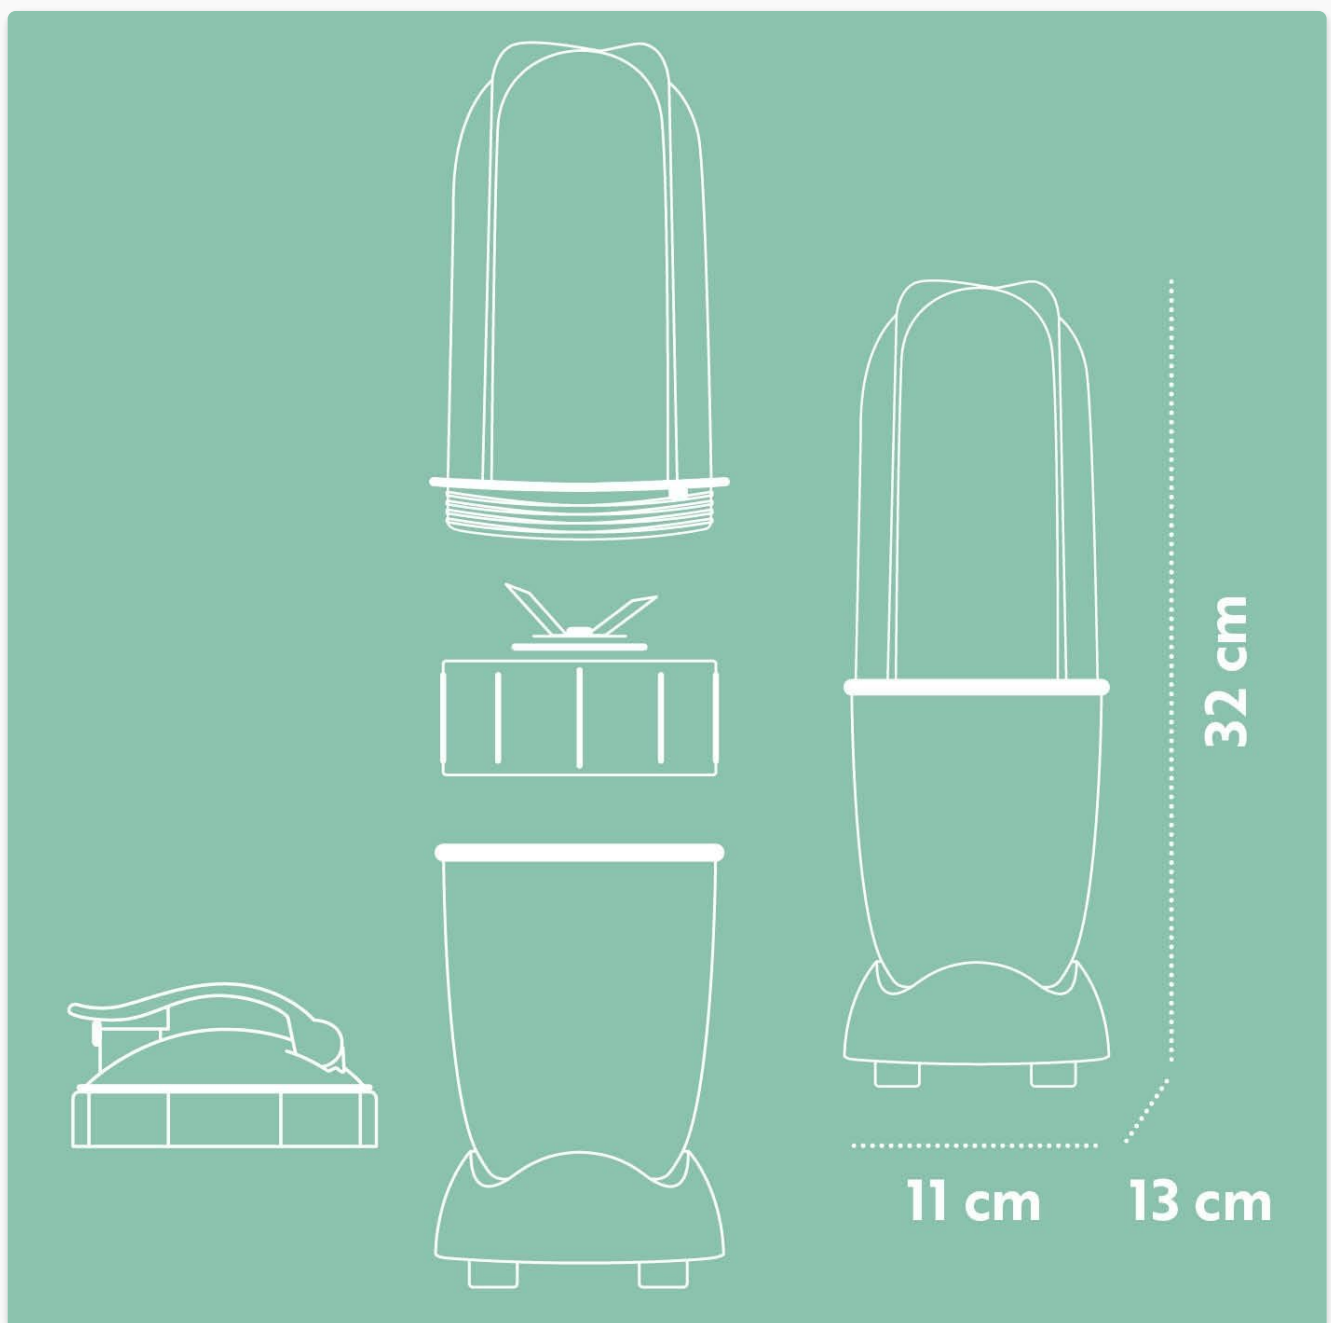


Image 2: Exploded view showing the Powerbase, Blending Cup, Cross Blade Attachment, and To-Go Lid.

4. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (blending cup, cross blade attachment, and To-Go lid) with warm soapy water, then rinse and dry thoroughly.

1. Place the Powerbase on a clean, dry, and stable surface.
2. Add your desired ingredients into the 500ml Blending Cup. Do not overfill beyond the maximum fill line.
3. Carefully attach the Cross Blade Attachment to the open end of the Blending Cup. Twist clockwise until it is securely fastened.
4. Invert the assembled Blending Cup (with the blade attachment facing down) and place it onto the Powerbase. Align the tabs on the cup with the slots on the Powerbase and twist clockwise to lock it into place.

5. OPERATING INSTRUCTIONS

The GOURMETmaxx Mr. Magic Power+ Mixer offers 8 functions for various culinary tasks, including mixing, stirring, chopping, beating, and pureeing.

1. Ensure the Blending Cup is securely locked onto the Powerbase.
2. Plug the appliance into a suitable electrical outlet.
3. To start blending, press down firmly on the top of the Blending Cup. The motor will activate.
4. To stop blending, release the pressure on the Blending Cup. The motor will stop.
5. For best results, use short pulses rather than continuous operation. Do not operate the mixer continuously for more than 1 minute at a time. Allow the appliance to cool down for at least 3 minutes between cycles to prevent overheating.
6. Once blending is complete, unplug the appliance.
7. Carefully remove the Blending Cup from the Powerbase by twisting counter-clockwise.
8. Unscrew the Cross Blade Attachment from the Blending Cup. You can then attach the To-Go Lid if you wish to take your beverage with you.



Image 3: Blending cup filled with fresh fruits and berries, ready for mixing.



Image 4: A user pressing down on the blending cup to activate the mixer.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your GOURMETmaxx Mr. Magic Power+ Mixer.

- Always unplug the appliance before cleaning.
- Wipe the Powerbase with a damp cloth. Do not immerse the Powerbase in water or any other liquid.
- The Blending Cup and To-Go Lid are dishwasher safe for convenient cleaning.
- Carefully rinse the Cross Blade Attachment under running water immediately after use. Use a brush to remove any food residue. Exercise extreme caution due to the sharp blades.
- Ensure all parts are completely dry before reassembling or storing the appliance.
- Store the mixer in a dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Blending Cup not correctly assembled or locked.	Check power connection; Ensure Blending Cup is securely twisted and locked onto the Powerbase.
Ingredients not blending smoothly.	Too little liquid; Overfilled cup; Ingredients are too large or dense.	Add more liquid; Do not exceed the maximum fill line; Cut ingredients into smaller pieces. Gently shake the cup (while unplugged) to redistribute contents.
Leakage from the Blending Cup.	Cross Blade Attachment not securely tightened.	Ensure the Cross Blade Attachment is twisted clockwise until it is firmly sealed to the Blending Cup.
Burning smell or motor stops.	Overheating due to continuous operation or overloading.	Unplug immediately. Allow the appliance to cool down for at least 15-20 minutes. Reduce load or use shorter blending cycles.

8. TECHNICAL SPECIFICATIONS

- **Brand:** GOURMETmaxx
- **Model:** 15525
- **Power:** 400 Watts
- **Capacity:** 500 Milliliters
- **Dimensions (L x W x H):** 11.4 x 11.4 x 30 cm
- **Weight:** 1.41 Kilograms
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Blade Material:** Stainless Steel
- **Functions:** 8 (Mix, Stir, Chop, Beat, Puree, etc.)
- **Special Feature:** Easy to clean (Blending Cup and To-Go Lid are dishwasher safe)

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical support or have questions not covered in this manual, please contact GOURMETmaxx customer service or the point of purchase.

