

SEYVUM CYCPHT01

SEYVUM 20V MAX 20-inch Cordless Pole Hedge Trimmer Instruction Manual

Model: CYCPHT01

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe operation, assembly, maintenance, and troubleshooting of your SEYVUM 20V MAX 20-inch Cordless Pole Hedge Trimmer. Please read this manual thoroughly before using the product and retain it for future reference.

General Safety Warnings

- Always wear appropriate personal protective equipment, including eye protection, gloves, and hearing protection, during operation.
- Ensure the work area is clear of bystanders, especially children and pets.
- Inspect the trimmer for any damage before each use. Do not operate if damaged.
- Keep hands and feet away from the cutting blades at all times.
- The tool features a dual-switch design for safety; both the safety lock and trigger must be pressed simultaneously to activate the trimmer.
- Always remove the battery pack before making any adjustments, changing accessories, or storing the tool.

2. PACKAGE CONTENTS

Carefully unpack all components and ensure all items are present and undamaged. If any parts are missing or damaged, contact SEYVUM customer service.

- 1 x Cordless Hedge Trimmer Head
- 1 x Telescopic Pole
- 1 x Power Grip with Battery Slot
- 2 x 2.0Ah Batteries
- 1 x Fast Charger

- 1 x Shoulder Strap
- 1 x Blade Cover
- 1 x User Manual (this document)



Image 2.1: All components included in the SEYVUM 20V MAX 20-inch Cordless Pole Hedge Trimmer package.

3. SETUP AND ASSEMBLY

3.1 Charging the Batteries

Before first use, fully charge both 2.0Ah batteries. The charger is designed for fast charging.

1. Connect the fast charger to a standard power outlet.
2. Insert a 2.0Ah battery into the charger. The indicator light on the battery will show charging status.
3. Allow approximately 2 hours for a full charge. The battery features overload and temperature

protection for safety and longevity.



Image 3.1: Detailed view of the 2.0Ah battery, highlighting its protection features and charging time.

3.2 Assembling the Pole Hedge Trimmer

Follow these steps to assemble the trimmer:

1. Attach the trimmer head to the telescopic pole. Ensure it clicks securely into place.
2. Connect the power grip with the battery slot to the other end of the telescopic pole. Verify a secure connection.
3. Insert a fully charged 2.0Ah battery into the power grip until it locks.
4. Attach the shoulder strap to the designated loop on the pole. Adjust the strap for comfortable weight distribution.



Image 3.2: Labeled components of the SEYVUM pole hedge trimmer for assembly reference.

4. OPERATING INSTRUCTIONS

4.1 Adjusting Pole Length and Trimmer Head Angle

- **Telescopic Pole:** The pole extends from 7.5 ft to 9 ft. To adjust, unlock the pole mechanism, extend or retract to the desired length, and lock it securely. This allows for a total reach of up to 15 feet when combined with user height, eliminating the need for a ladder for many tasks.
- **Adjustable Trimmer Head:** The trimmer head can be adjusted from 0-135° with 6 distinct positions. Press the angle adjustment button (refer to Image 3.2) and pivot the head to the desired angle for trimming high branches, side branches, or low shrubs. Release the button to lock the head in position.

TELESCOPIC EXTEND POLE

- Adjustable pole for any height
- reach higher
- no ladder needed

9ft

7.5ft-9ft

Image 4.1: Demonstrating the telescopic pole in use for reaching high hedges.

ADJUSTABLE TRIMMER HEAD

For multi-angle trimming



Image 4.2: The trimmer head's multi-angle adjustment feature for versatile trimming.

4.2 Starting and Stopping the Trimmer

- To start the trimmer, simultaneously press the power safety button and the on/off trigger (refer to Image 3.2).
- To stop the trimmer, release the on/off trigger.

4.3 Trimming Techniques

- The 20-inch hardened steel double-acting blades are designed for smooth, precise cutting.
- The trimmer can cut branches up to 5/8 inch thick. Do not attempt to cut thicker branches, as this may damage the tool or cause injury.
- Use a sweeping motion to trim hedges and shrubs. For best results, trim small amounts at a time.
- For dense growth, make several passes, gradually reducing the length.



Image 4.3: The 20-inch dual-action blade effectively trimming a hedge, demonstrating its cutting capacity.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hedge trimmer.

5.1 Blade Care

- After each use, remove the battery and clean the blades with a stiff brush to remove sap, leaves, and debris.
- Apply a light machine oil or blade lubricant to the blades to prevent rust and ensure smooth operation.
- Always store the trimmer with the blade cover in place to protect the blades and prevent accidental injury.

5.2 Battery Care

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store batteries in a discharged state for extended periods. Recharge them periodically if not in use.

- The batteries are equipped with overload and temperature protection; however, avoid exposing them to excessive heat or physical damage.

5.3 General Cleaning and Storage

- Wipe down the tool's exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the trimmer in a secure, dry location, out of reach of children. The removable pole design allows for easier storage.

6. TROUBLESHOOTING

If you encounter issues with your SEYVUM pole hedge trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or improperly inserted Safety lock and trigger not pressed simultaneously Tool or battery overheating	Ensure battery is fully charged and securely inserted. Press both the safety lock and trigger at the same time. Allow tool and battery to cool down.
Poor cutting performance	Blades are dull or dirty Attempting to cut branches too thick	Clean and lubricate blades. If dull, consider professional sharpening. Only cut branches up to 5/8 inch thick.
Excessive vibration	Damaged or bent blades Loose connections	Inspect blades for damage; replace if necessary. Check all pole connections for tightness.

For issues not listed here or if solutions do not resolve the problem, please contact SEYVUM customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	SEYVUM
Model Number	CYCPHT01
Power Source	Battery Powered (20V MAX)
Blade Length	20 Inches
Blade Material	Hardened Steel
Max Cutting Capacity	5/8 Inches
Motor Type	Brushless Motor
Motor Speed	1500 SPM (Strokes Per Minute)

Feature	Specification
Motor Power	300W
Battery Type	Lithium-ion
Battery Capacity	2 x 2.0Ah
Battery Charging Time	Approx. 2 Hours per battery
Approx. Working Time	Up to 25 minutes per battery (continuous use)
Pole Extension Range	7.5 ft to 9 ft
Trimmer Head Adjustment	0-135° (6 positions)
Item Weight	9.9 Pounds
Product Dimensions	6.1"L x 6.3"W x 37.6"H (compacted)

2.0^{AH} X2

LARGE CAPACITY BATTERY

- Over-charge protection
- Over-heating protection
- Over-discharge protection
- Over-current protection
- Over-voltage protection

Charging Time:
2 Hours

Working Time:
30 Mins (at Least)

Image 7.1: Illustration of the powerful brushless motor technology.

8. WARRANTY AND SUPPORT



8.1 Warranty Information

SEYVUM offers a **12-month promise** for this product, covering manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty claims, or to order replacement parts, please contact SEYVUM customer support through the retailer where the product was purchased or visit the official SEYVUM website for contact information.

Related Documents - CYCPHT01

	<p>Seyvum LB-8189 20V Cordless Leaf Blower Instruction Manual</p> <p>Instruction manual for the Seyvum LB-8189 20V Max Cordless Leaf Blower, covering safety guidelines, operation, assembly, and technical data.</p>
	<p>SEYVUM 20V MAX* Cordless Chainsaw CS-BM11 Instruction Manual</p> <p>Comprehensive instruction manual for the SEYVUM 20V MAX* Cordless Chainsaw, Model CS-BM11. Includes safety instructions, intended use, operating procedures, maintenance, cleaning, storage, function description, specifications, battery pack information, and charger guide for optimal use and care.</p>