



[Manuals.plus](#) /

> [BTSEURY](#) /

> BTSEURY Digital Camera User Manual - Model BTSEURY9rw3gqat1n-11

BTSEURY BTSEURY9rw3gqat1n-11

BTSEURY Digital Camera User Manual

Model: BTSEURY9rw3gqat1n-11

1. INTRODUCTION

Thank you for purchasing the BTSEURY Digital Camera. This manual provides detailed instructions for the proper use, setup, and maintenance of your camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The BTSEURY Digital Camera is a portable device designed for capturing high-quality images and videos. Key features include:

- **48MP Image Resolution:** Capture detailed photographs.
- **1080P FHD Video Recording:** Record clear, high-definition videos.
- **16X Digital Zoom:** Magnify subjects for closer shots.
- **Anti-Shake Function:** Reduces blur from camera movement.
- **Built-in Fill Light:** Improves photo quality in low-light conditions.
- **Timed Photography:** Set a timer for self-portraits or group photos (2s, 5s, 10s).
- **Motion Detection Recording:** Automatically starts recording when motion is detected.
- **11 Filter Options:** Apply various creative effects to your photos.
- **2.4-inch Display Screen:** For framing shots and reviewing content.

2.1 Camera Components and Controls



Figure 1: Front view of the BTSEURY Digital Camera. Shows the lens, flash, and microphone.



Figure 2: Rear view of the BTSEURY Digital Camera. Displays the 2.4-inch screen and control buttons on the right side, including zoom (W/T), power, OK, menu, and directional buttons.



Figure 3: Close-up of the camera's rear control buttons. Details the 'W' and 'T' buttons for zoom, power button, 'OK' button surrounded by directional controls, and dedicated buttons for menu and playback.

3. SETUP

3.1 Charging the Battery

The camera has a built-in 400mAh polymer battery. Before first use, fully charge the camera.

1. Connect the provided USB cable to the camera's USB port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once charging is complete, the indicator light will turn off or change color.

3.2 Inserting a Memory Card

The camera supports a small memory card (MicroSD) up to 128GB (not included). A memory card is required to save photos and videos.

1. Locate the memory card slot on the side of the camera.
2. Insert the MicroSD card into the slot with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card until it springs out.

3.3 Powering On/Off

- **To Power On:** Press and hold the Power button (usually marked with a circle and a vertical line) until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

4. OPERATING THE CAMERA

4.1 Taking Photos

1. Turn on the camera. It will typically start in photo mode.
2. Frame your shot using the 2.4-inch display screen.
3. Press the Shutter button (usually located on top of the camera) halfway to focus, then fully to capture the image.

Photo Settings:

- **Digital Zoom (16X):** Use the 'W' (Wide) and 'T' (Telephoto) buttons on the back of the camera to zoom in or out.
- **Timed Photography:** Access the menu, navigate to timer settings (2s, 5s, 10s), and select your desired delay.
- **Filters:** The camera offers 11 filter options (e.g., black and white, sunset, warm tones). Access these through the menu to apply creative effects.
- **Anti-Shake:** This feature is automatically enabled to help reduce blur.
- **Fill Light:** The built-in fill light activates automatically in low-light conditions or can be manually controlled via the menu.

4.2 Recording Videos

1. Switch the camera to video recording mode (refer to your camera's on-screen interface or a dedicated mode button).
2. Press the Shutter button to start recording. A timer or indicator will appear on the screen.
3. Press the Shutter button again to stop recording.

Video Settings:

- **Motion Detection Recording:** Enable this feature in the video settings menu. The camera will automatically begin recording when it detects movement within its field of view.

4.3 Playback and Review

- Press the Playback button (often indicated by a triangle icon) to enter playback mode.
- Use the directional buttons to navigate through your photos and videos.
- Press the 'OK' button to view a selected item or play a video.

- To delete an item, select it and press the Delete button (often indicated by a trash can icon). Confirm deletion when prompted.

4.4 Camera Settings

Access the camera's main menu by pressing the Menu button. Here you can adjust various settings:

- **White Balance:** Auto, Sunny, Cloudy, Incandescent, Fluorescent.
- **Scene Selection:** Auto, Landscape, Portrait.
- **Image Resolution:** Select from 9 available resolutions.
- **Screen Brightness:** Adjust the display brightness (8 levels).
- **Volume Level:** Adjust system sounds (7 levels).
- **Auto Screen Off:** Set the time for the screen to turn off automatically when idle.
- **Date/Time:** Set the current date and time.
- **Language:** Select your preferred language.
- **Format Memory Card:** Erase all data on the memory card. *Caution: This action is irreversible.*

5. MAINTENANCE

5.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- Do not use strong detergents or solvents.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) and remove the memory card.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; battery not charged.	Charge the camera's battery fully.
Cannot take photos/videos.	No memory card inserted; memory card full; memory card error.	Insert a compatible MicroSD card. Check available space. Format the card (<i>data will be lost</i>) or try a different card.
Images are blurry.	Camera shake; dirty lens; subject too close/far.	Hold the camera steady. Clean the lens. Ensure subject is within focus range.
Screen is blank or frozen.	System error.	Press and hold the Power button for 10 seconds to force a restart. If issue persists, contact support.

7. SPECIFICATIONS

Feature	Detail
Item Type	Digital Camera
Material	ABS
Battery Capacity	400mAh Polymer Battery (Built-in)
Memory Card Support	Maximum 128GB MicroSD Card (Not Included)
Display Screen	2.4 Inch
Functions	Photo Taking, Video Recording, Album Playback
White Balance	Auto, Sunny, Cloudy, Incandescent, Fluorescent
Scene Selection	Auto, Landscape, Portrait
Digital Zoom	16X
Dimensions (Approx.)	97x57x25mm / 3.82x2.24x0.98in
Screen Brightness	8 Levels
Volume Level	7 Levels
Weight (Approx.)	230g / 8.11oz
Model Number	BTSEURY9rw3gqat1n-11

8. PACKAGE CONTENTS

The following items are included in your product package:

- 1 x BTSEURY Digital Camera (Built-in Battery)
- 1 x Instruction Manual (This document)
- 1 x Lanyard
- 1 x USB Cable



Figure 4: BTSEURY Digital Camera and its included accessories: a lanyard and a USB charging cable.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official BTSEURY website. Please retain your proof of purchase for warranty claims.