

[Manuals.plus](#) /

› [Leapwell](#) /

› Leapwell Portable CD Player L-CD202 User Manual

Leapwell L-CD202

Leapwell Portable CD Player L-CD202 User Manual

Model: L-CD202

1. INTRODUCTION

Thank you for purchasing the Leapwell Portable CD Player L-CD202. This compact and versatile audio device offers multiple playback options including CD, Bluetooth, FM Radio, USB, AUX, and Optical modes. Designed for both portability and high-fidelity sound, it features a retro aesthetic, an LCD screen, and a rechargeable battery. Please read this manual carefully to ensure proper use and to fully enjoy your new CD player.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Leapwell Portable CD Player
- Remote Control
- USB-C Charging Cable
- 3.5mm AUX Cable
- User Manual



Image: Contents of the Leapwell Portable CD Player package, including the player, remote, and cables.

3. PRODUCT OVERVIEW

The Leapwell L-CD202 features a classic retro design with modern functionalities. Familiarize yourself with the main components and controls:

- **CD Compartment:** Top-loading design with a translucent dust cover.
- **LCD Screen:** Displays current mode, track information, and time.
- **Control Buttons:** Play/Pause, Skip Forward/Backward, Mode, Power.
- **Volume Knob:** Rotatable knob for precise volume adjustment.
- **Integrated Speakers:** HiFi speakers with independent sound cavity for enhanced audio.
- **Connectivity Ports:** USB-C (charging), AUX-in, USB-A (playback), Optical-out.



Image: Detailed view of the player's controls, display, and design elements.



Image: Various perspectives of the Leapwell Portable CD Player, highlighting its compact form factor.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device using the provided USB-C cable and a 5V-2A power adapter (not included). The charging indicator on the LCD screen will show charging status.

4.2 Powering On/Off

Press the orange power button on the device to turn it on or off. The red power button on the remote control puts the device into standby mode; it does not fully power off the unit. To fully power off, use the button on the device itself.

5. OPERATING MODES

The L-CD202 supports 7 playback modes. Press the 'M' (Mode) button on the device or remote to cycle through the modes.



Image: The player's display indicating the selection of different playback modes.

5.1 CD Playback Mode

1. Open the translucent dust cover.

2. Place a CD (CD, CD-R, CD-RW) onto the spindle, label side up.
3. Close the dust cover.
4. Select CD mode using the 'M' button. The player will automatically begin reading and playing the CD.
5. Use the Play/Pause, Skip Forward/Backward buttons on the device or remote to control playback.



Image: The CD player with its cover open, ready for CD insertion.

5.2 Bluetooth Mode

The L-CD202 supports both Bluetooth receiving and transmitting modes.

5.2.1 Bluetooth Receiving Mode (Connect to Phone/Tablet)

1. Select Bluetooth mode on the CD player. The LCD screen will display a Bluetooth icon, indicating it's ready for pairing.
2. On your mobile device (phone, tablet), enable Bluetooth and search for available devices.
3. Select "Leapwell L-CD202" from the list to pair. Once connected, you can stream audio from your device to the CD player's speakers.

5.2.2 Bluetooth Transmitting Mode (Connect to External Speakers/Headphones)

1. Ensure your external Bluetooth speaker or headphones are in pairing mode.
2. Select Bluetooth mode on the CD player.
3. The CD player will automatically search for and connect to nearby Bluetooth audio devices. Once connected, audio from the CD player will be transmitted to the external device.



Image: Demonstrates Bluetooth connectivity with headphones and a smartphone.

5.3 FM Radio Mode

1. Select FM Radio mode using the 'M' button.
2. To automatically scan and store FM stations, press and hold the 'Play/Pause' button for an extended period until the scanning process begins. The player will save available stations.
3. Use the Skip Forward/Backward buttons to navigate through the stored stations.

5.4 USB Playback Mode

1. Insert a USB flash drive containing MP3 or WMA audio files into the USB-A port.
2. Select USB mode using the 'M' button. The player will automatically detect and begin playing audio files.
3. Note: The USB playback function is basic. It plays all tracks in sequence and may not display folder structures or total track numbers. The order of playback for folders may not be alphabetical.

5.5 AUX Input Mode

1. Connect an external audio device (e.g., smartphone, MP3 player) to the AUX-in port using the provided 3.5mm AUX cable.
2. Select AUX mode using the 'M' button.
3. Control playback and volume from your external device.

5.6 Optical Output Mode

The L-CD202 features an integrated optical interface for high-quality digital audio output.

1. Connect the Optical-out port of the CD player to a compatible decoder or audio receiver using an optical fiber cable (not included).
2. Select Optical mode using the 'M' button.
3. Enjoy lossless audio playback through your connected audio system.



Image: Illustrates the optical connection to an external audio system.

5.7 AB Repeat Mode

This mode allows you to repeat a specific section of a track.

1. During CD or USB playback, press the 'AB' button once to set the starting point (A).
2. Press the 'AB' button again to set the ending point (B). The section between A and B will repeat.
3. Press the 'AB' button a third time to cancel the repeat function.

6. CHARGING AND BATTERY

The L-CD202 features a built-in 4000mAh rechargeable battery, providing approximately 4.5 to 5 hours of playback time on a full charge. A full charge typically takes about 3 hours.

- **Charging:** Connect the USB-C cable to the player and a 5V-2A power adapter for optimal charging speed. Charging via a computer's USB port is possible but will be significantly slower.
- **Usage During Charging:** The device can be used while charging.
- **Battery Life:** To prolong battery life, disconnect the power supply when the device is not in prolonged use.



Image: Visual representation of the player's battery life and charging time in a portable setting.

7. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Ensure the CD compartment is free of dust and debris. The translucent dust cover helps protect the optical unit.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts to prevent damage to internal components.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; incorrect power button usage.	Charge the device fully. Ensure you are using the orange power button on the device, not the red standby button on the remote.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly; anti-skip protection mechanism engaged.	Clean the CD. Ensure it is inserted correctly. Avoid strong vibrations.
Cannot connect via Bluetooth.	Device not in pairing mode; external device too far or not in pairing mode.	Ensure the CD player is in Bluetooth mode. Put your external device into pairing mode and keep it within range.
FM radio not finding stations.	Automatic scan not initiated correctly.	In FM mode, press and hold the 'Play/Pause' button for an extended period to start the automatic station scan.
USB playback issues (e.g., incorrect order).	Basic USB file management.	The USB function is basic and may not support complex folder structures or alphabetical sorting. Ensure files are MP3/WMA.

Problem	Possible Cause	Solution
Poor audio quality from built-in speakers.	Expectations for compact speakers; external interference.	For enhanced audio, connect to external speakers or headphones via Bluetooth, AUX, or Optical output.

9. SPECIFICATIONS

Feature	Detail
Model Name	L-CD202
Connectivity Technology	AUX, Bluetooth, Optical, USB
Special Features	Bluetooth, Anti-skip Protection, Portable, Rechargeable
Supported Audio Formats	CD, CD-R, CD-RW, MP3, WMA
Number of Discs	1
Analog RGB Input	3.5mm Jack, Optical
Headphone Jack	3.5mm Jack
Battery Type	1 Lithium Ion battery (included)
Average Battery Life	5 Hours
Item Dimensions (LxWxH)	18.5L x 14.5W x 6.3H cm
Item Weight	636 Grams
Manufacturer	Leapwell
Country of Origin	China

10. WARRANTY AND SUPPORT

The Leapwell Portable CD Player L-CD202 comes with a 1-year manufacturer's warranty. For technical support or customer service, please refer to the contact information provided on the product packaging or the official Leapwell website. Leapwell offers permanent technical support and professional 24/7 customer service.