

[Manuals.plus](#) /

› [AMERLIFE](#) /

› AMERLIFE 4-Piece Farmhouse Living Room Table Set with Electric Fireplace TV Stand User Manual

## AMERLIFE CFT031+CCS002

# AMERLIFE 4-Piece Farmhouse Living Room Table Set

Model: CFT031+CCS002

## INTRODUCTION

---

Thank you for choosing the AMERLIFE 4-Piece Farmhouse Living Room Table Set. This set includes a 70-inch TV Stand with a 33-inch electric fireplace, a coffee table, and two end tables, each equipped with a charging station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture set.



Image: The complete AMERLIFE 4-Piece Farmhouse Living Room Table Set, featuring the TV stand with fireplace, coffee table, and two end tables, arranged in a living room.

## SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always place the furniture on a flat, stable surface.
- Do not overload the TV stand or shelves. Refer to the specifications for maximum weight recommendations.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the electric fireplace.
- Do not block air vents of the fireplace.
- Ensure all electrical connections for the fireplace and charging stations are properly grounded and meet local electrical codes.
- Unplug the fireplace and charging stations from the power outlet before cleaning or performing any maintenance.
- Keep children and pets away from the fireplace when it is operating.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x 70-inch Farmhouse TV Stand
- 1 x 33-inch Electric Fireplace Insert
- 1 x Coffee Table
- 2 x End Tables with Charging Stations
- Assembly Hardware Kit
- Assembly Guide
- Remote Control for Electric Fireplace

## SETUP AND ASSEMBLY

---

Assembly is required for all furniture pieces. It is recommended to have two people for assembly. Tools required: Allen Key, Screwdriver (not included).

### TV Stand Assembly

Follow the clear and detailed assembly instructions included in your package. Ensure all screws are tightened securely. The TV stand is designed to accommodate TVs up to 80 inches and has a maximum weight recommendation of 250 lbs.



*Image: Detailed dimensions of the 70-inch TV stand, showing measurements for width, depth, height, and the 33-inch fireplace insert. It also indicates support for TVs up to 80 inches and a 250 lbs weight capacity.*

## Coffee Table and End Tables Assembly

Assemble the coffee table and two end tables according to the provided instructions. These tables feature a rustic barn door X-shaped design.



*Image: Detailed dimensions for the coffee table (40"W x 21.6"D x 17.9"H) and end tables (15.4"W x 17.3"D x 25"H).*

## Fireplace Installation

The 33-inch electric fireplace is detachable and designed to fit into the designated opening of the TV stand. Carefully slide the fireplace into place and secure it as per the assembly guide. Ensure the power cord is accessible and not pinched.

## Charging Station Setup

Each end table includes an ETL-certified charging station with 2 AC outlets and 2 USB ports. A 4.9ft extension

cord is provided for flexible placement. Plug the extension cord into a standard wall outlet.



**120V/12A**  
[2 AC Outlets]



**5V/2A**  
[2 USB Ports]



**Power Cord**  
4.9 Feet

*Image: An end table showcasing its integrated charging station with two AC outlets and two USB ports, along with the 4.9-foot power cord.*

## OPERATING INSTRUCTIONS

### Electric Fireplace Operation

The electric fireplace can be operated via the touch screen controls on the unit or the included remote control.

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Flame Colors:** Select from 6 flame colors. Note that L7 is a cyclic gradient color.
- **Brightness:** Adjust flame brightness through 5 levels.
- **Timer:** Set the operating timer from 0.5 to 6 hours.
- **Temperature Adjustment:** Adjust the heat setting from 64°F to 82°F (18°C to 28°C). The fireplace provides 1400W of high power heating, suitable for areas up to 400 sq. ft.
- The fireplace can be used with or without the heating function, allowing for year-round ambiance.

# Lifelike Flames

via Touch Screen & Remote



Note: L7 is a cyclic gradient color

**33**  
Inch Wide

**30min-6h**  
Timer

**64-82 °F**  
Heat Setting

**1400W**  
High Power

**400sq. ft**  
Heating Coverage

*Image: Close-up of the electric fireplace showing touch screen controls, remote control, and various flame color and brightness options.*

## Charging Station Usage

Plug your electronic devices into the 2 AC outlets or 2 USB ports on the end tables for convenient charging. Ensure devices are compatible with the 120V/12A AC outlets and 5V/2A USB ports.


## MAINTENANCE

Regular maintenance will help prolong the life and appearance of your furniture set.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Dust regularly with a dry, soft cloth.
- **Fireplace:** Ensure the fireplace vents are clear of dust and debris. Do not attempt to clean the interior of the fireplace.
- **Electrical Components:** Periodically check power cords for any signs of damage. If damaged, discontinue use and contact customer support.
- **Adjustable Shelves:** The TV stand features adjustable glass shelves. Adjust their height as needed by

repositioning the shelf pins.

### HIDDEN LARGE CABLE HOLES

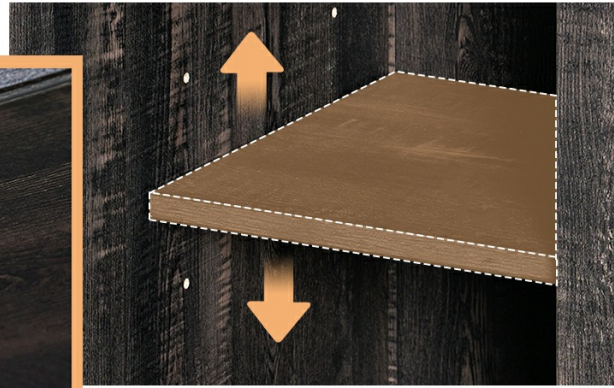

### ADJUSTABLE SHELVES

Image: Close-up showing the hidden large cable holes for organization and the adjustable shelves within the TV stand cabinets.

## TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord loose, circuit breaker tripped.	Check if the fireplace is plugged in securely. Verify the wall outlet is functional. Reset the circuit breaker if necessary.
No heat from fireplace.	Heat function off, thermostat setting too low, air vents blocked.	Ensure the heat function is activated. Increase the temperature setting. Clear any obstructions from the air vents.
Charging station not working.	No power, extension cord loose, device not compatible.	Check if the end table's extension cord is plugged into a live outlet. Ensure your device is properly connected and compatible with the charging station's specifications.
Furniture wobbles after assembly.	Screws not fully tightened, uneven floor.	Ensure all assembly screws are tightened. Use furniture pads or shims under the legs to level the furniture on uneven floors.

## SPECIFICATIONS

- **Brand:** AMERLIFE
- **Model Name:** Living room table sets
- **Model Number:** CFT031+CCS002
- **Color:** Dark Oak
- **Material:** Engineered Wood
- **Number of Items:** 4 (TV Console, Coffee Table, 2 End Tables)

- **TV Console Dimensions (W x D x H):** 70" x 17" x 33.2"
- **Fireplace Dimensions (W x H):** 33" x 17.6"
- **Coffee Table Dimensions (W x D x H):** 40" x 21.6" x 17.9"
- **End Table Dimensions (W x D x H):** 15.4" x 17.3" x 25"
- **Item Weight:** 210 Pounds (total set)
- **Maximum Weight Recommendation (TV Stand):** 300 Pounds
- **Fireplace Heating Coverage:** Up to 400 sq. ft.
- **Fireplace Power:** 1400W
- **Charging Station:** 2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
- **Power Cord Length (End Tables):** 4.9 ft
- **Assembly Required:** Yes
- **Tools Recommended For Assembly:** Allen Key, Screwdriver
- **Indoor Outdoor Usage:** Indoor only

## WARRANTY AND SUPPORT

---

This AMERLIFE product comes with a 1-year warranty. For any questions, missing parts, or assistance with assembly or operation, please contact AMERLIFE customer service. Clear and detailed assembly instructions are included with your purchase, and hassle-free after-sales service is available.

Please retain your proof of purchase for warranty claims.