

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tineco](#) /

› [Tineco iCarpet Spot Cleaner Instruction Manual SC050900SA](#)

Tineco SC050900SA

Tineco iCarpet Spot Cleaner Instruction Manual

Model: SC050900SA

IMPORTANT SAFETY INSTRUCTIONS

Before operating the Tineco iCarpet Spot Cleaner, please read all instructions carefully. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Use only as described in this manual.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids.
- Unplug from outlet when not in use and before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The Tineco iCarpet Spot Cleaner is a powerful and versatile corded spot cleaner designed for effective stain removal on carpets, upholstery, and other surfaces. Its lightweight and compact design ensures easy maneuverability and storage.

Key Features:

- **Powerful Suction:** 300W brush motor with over 45W suction power for deep cleaning.
- **Dual Tools:** Specialized tools for both soft and hard surfaces.
- **Lightweight & Compact:** Weighs 7.4 lbs (3.36 kg) for easy portability and storage.
- **2-in-1 Water Tank:** Combined clean water fill and dirty water empty function for convenience.
- **Pre-Treatment Solution:** Included to loosen and lift tough stains and odors.
- **4.75ft Rubber Hose:** Provides flexible access to tight spots and hard-to-reach areas.
- **Corded Design:** Ensures continuous power for uninterrupted cleaning sessions.

WHAT'S INCLUDED

Verify that all components are present in the package:

- 1 x Tineco iCarpet Spot Cleaner Unit
- 1 x Care and Deep Cleaning Solution
- 1 x Pre-treatment Formula
- 1 x Rubber Hose
- 1 x Multi-surface Brush

What's Included



Care & Deep cleaning solution



Pre-treat formula



Rubber Hose



Multi-surface Brush



Image: All items included in the Tineco iCarpet Spot Cleaner package.

SETUP

1. **Unpack the Unit:** Carefully remove all components from the packaging.
2. **Attach the Hose:** Connect the rubber hose securely to the main unit's hose port. Ensure it clicks into place.
3. **Fill the Clean Water Tank:**
 - Remove the 2-in-1 water tank from the unit.
 - Open the clean water tank cap.

- Fill with warm water (max 60°C/140°F) up to the MAX fill line.
- Add the recommended amount of Tineco cleaning solution to the clean water tank. Do not overfill.
- Securely close the cap and reinsert the tank into the unit.



2-in-1 Water Tank

Fill with clean water, empty dirty water, all in one go

Image: Demonstrates filling the clean water tank and emptying the dirty water tank.

4. **Select and Attach Cleaning Tool:** Choose the appropriate cleaning tool (e.g., multi-surface brush) for your task and attach it to the end of the hose.

OPERATING INSTRUCTIONS

Pre-Treatment (Optional but Recommended):

For tough stains, pre-treat the area with the included pre-treatment formula.

1. Spray the pre-treatment solution directly onto the stain.
2. Allow it to sit for 5-10 minutes to loosen the stain. Do not let it dry.



Pre-treatment solution

Loosens and lifts tough stains and odors with ease

Image: Applying pre-treatment solution to a stained carpet.

Spot Cleaning:

- Power On:** Plug the unit into a grounded electrical outlet. Press the power button to turn on the cleaner.
- Apply Solution:** Hold the cleaning tool over the stain. Press the trigger on the tool to spray cleaning solution onto the stained area.
- Scrub and Extract:** Gently scrub the stain with the brush on the cleaning tool. Release the trigger and slowly pull the tool over the wet area to extract the dirty solution. Repeat as necessary until the stain is removed and the extracted water appears clean.
- Dry the Area:** After cleaning, continue to extract any remaining moisture from the cleaned area by pulling the tool over it without pressing the spray trigger. This helps to speed up drying time.
- Power Off:** Once cleaning is complete, turn off the unit and unplug it from the outlet.



Powerful suction for deep cleaning

Image: Demonstrating powerful suction during deep cleaning on a carpet.



Dual tools for multiple surfaces cleaning

Image: Illustrates the versatility of dual tools for cleaning multiple surfaces.



4.75ft(145cm) Rubber Hose

Image: User cleaning a carpet stain with the extended rubber hose.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Tineco iCarpet Spot Cleaner.

1. Empty and Clean the Dirty Water Tank:

- After each use, remove the dirty water tank.
- Pour out the dirty water and rinse the tank thoroughly with clean water.
- Allow the tank to air dry before reassembling.

2. Clean the Cleaning Tool:

- Remove the cleaning tool from the hose.
- Rinse the tool under running water to remove any debris or residue.
- Ensure the nozzle is clear of blockages.

3. Clean the Hose:

- Periodically, run clean water through the hose to flush out any residue.
- Ensure the hose is completely dry before storing to prevent odors.

4. **Store Properly:** Store the unit in a dry, cool place. The compact design allows for easy storage.



Image: The lightweight and compact design of the cleaner allows for easy storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Unit not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
No spray/Low spray	Clean water tank empty; nozzle clogged; pump issue.	Refill clean water tank. Clean the spray nozzle. Contact customer support if pump issue persists.

Problem	Possible Cause	Solution
Poor suction	Dirty water tank full; hose/tool clogged; tank not seated correctly.	Empty dirty water tank. Clear any blockages in the hose or tool. Ensure dirty water tank is securely in place.
Leaking	Water tanks not sealed properly; hose connection loose.	Ensure both clean and dirty water tanks are securely closed and seated. Check hose connections.

SPECIFICATIONS

- Model Number:** SC050900SA
- Wattage:** 300W
- Suction Power:** Over 45W
- Clean Water Tank Capacity:** 800 mL (approx.)
- Dirty Water Tank Capacity:** 600 mL (approx.)
- Hose Length:** 4.75 ft (145 cm)
- Item Weight:** 7.4 lbs (3.36 kg)
- Power Source:** Corded Electric
- Certifications:** CE & GS Certified

WARRANTY AND SUPPORT

The Tineco iCarpet Spot Cleaner comes with a **2-year warranty** from the date of purchase, covering manufacturing defects under normal household use.

For warranty claims, technical support, or replacement parts, please contact Tineco Customer Service:

- Website:** www.tineco.com
- Email:** Refer to your product registration or packaging for specific regional email support.
- Phone:** Refer to your product registration or packaging for specific regional phone support.

Please have your model number (SC050900SA) and proof of purchase ready when contacting support.