

**Xiaomi 25028PC03G**

# Poco C71 4G LTE User Manual

Model: 25028PC03G

## INTRODUCTION

This user manual provides essential information for the operation and maintenance of your Poco C71 4G LTE smartphone. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize its lifespan. Keep this manual for future reference.

The Poco C71 is designed for a smooth and seamless user experience, featuring a powerful octa-core processor, an immersive 6.88-inch 120Hz display, and a long-lasting 5200mAh battery. It includes advanced features such as a 32MP AI dual camera system and secure dual identification methods.

## WHAT'S IN THE Box

- Poco C71 Smartphone
- USB Cable
- Phone Case
- SIM Tray Ejector

## DEVICE OVERVIEW



Figure 1: Front and rear view of the Poco C71 smartphone, highlighting the display, camera module, and branding.



Figure 2: Side view of the Poco C71 smartphone, showing the slim profile and button placement.

## SETUP

---

### 1. Inserting SIM Card and microSD Card

1. Locate the SIM tray on the side of the device.
2. Insert the SIM tray ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts are facing down.
4. Carefully reinsert the tray into the device.

### 2. Initial Power On and Setup

1. Press and hold the Power button until the device vibrates and the screen turns on.
2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account sign-in, and security settings (fingerprint/face unlock).

### 3. Charging the Device

Connect the provided USB cable to the phone's charging port and the other end to a compatible 15W power adapter. Plug the adapter into a power outlet. The device supports 15W fast charging.

## OPERATING INSTRUCTIONS

### Display and Navigation

- The 6.88-inch display features a 120Hz refresh rate for smooth visuals.
- Navigate the interface using touch gestures: tap, swipe, pinch-to-zoom.
- Adjust brightness and display settings in the Settings menu. The display has TÜV Rheinland Low Blue Light certification for eye protection.

### Camera Operation

- The rear camera system features a 32MP main camera with an auxiliary lens.
- The front camera is 8MP and includes a selfie soft aperture function.
- Open the Camera app to select modes such as Photo, Video, Portrait, Night mode, and HDR.
- Tap the screen to focus and use the shutter button to capture images or start/stop video recording.

### Security Features

- **Side Fingerprint Sensor:** Register your fingerprints in the Security settings for quick and secure unlocking.
- **AI Face Unlock:** Set up face recognition for convenient unlocking by looking at the front camera.

### Connectivity

- **Wi-Fi:** Connect to wireless networks via Settings > Network & internet > Wi-Fi. Supports 2.4GHz and 5GHz.
- **Bluetooth:** Pair with Bluetooth devices (e.g., headphones, speakers) via Settings > Connected devices > Bluetooth. Supports Bluetooth 5.3.
- **Mobile Data:** Ensure your SIM card is active for 4G LTE connectivity. Compatible with T-Mobile, Mint, Tello, and other GSM carriers outside the USA. *Note: Not compatible with Verizon, AT&T, Xfinity, Boost, Virgin, Visible, Cricket, or other CDMA carriers.*

**WARNING**

**PLEASE CHECK IF YOUR CARRIER IS COMPATIBLE WITH THE PHONE  
GSM UNLOCKED**

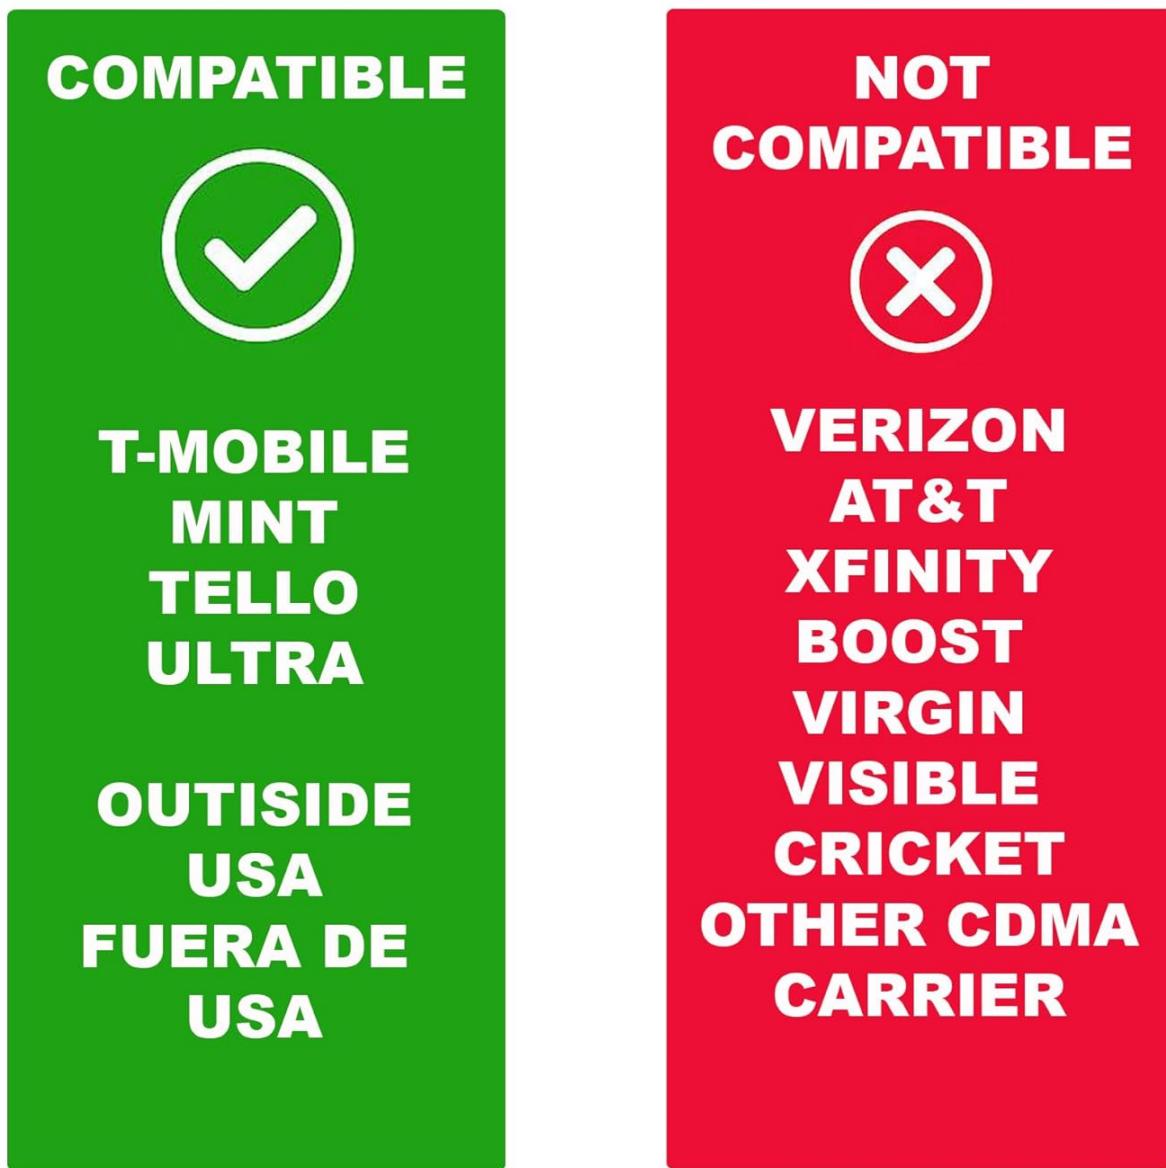


Figure 3: Network compatibility information for the Poco C71, indicating compatible and incompatible carriers.

## MAINTENANCE

- **Software Updates:** Regularly check for system updates to ensure optimal performance and security. Go to Settings > System > System update.
- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the device. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Charge the device using the provided charger.
- **Storage Management:** Periodically clear cache, delete unnecessary files, and manage apps to free up storage space.

## TROUBLESHOOTING

## Device Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to force a restart.

## Network Connectivity Issues

- Verify that your SIM card is properly inserted and active.
- Check if your carrier is compatible with the device (refer to the compatibility section).
- Toggle Airplane Mode on and off.
- Restart the device.

## Camera Malfunction

- Ensure the camera lens is clean and free from obstructions.
- Restart the Camera app or the device.
- If issues persist, check for system updates or consider a factory reset (backup data first).

## Slow Performance

- Close unused applications running in the background.
- Clear cache and temporary files.
- Ensure sufficient storage space is available.
- Restart the device periodically.

## SPECIFICATIONS

Feature	Detail
Model Name	Poco C71
Model Number	25028PC03G
Operating System	Android 15 (Go Edition)
Processor	UNISOC T7250 (Octa-core, Max CPU frequency: 1.8GHz)
Display	6.88 inches, 1640x720 resolution, 120Hz Refresh Rate, 450 nits (typ) brightness
RAM	4 GB (Up to 8GB with memory extension)
Rear Camera	32MP AI Dual Camera
Front Camera	8MP
Battery	5200mAh (typ), 15W Fast Charging
Connectivity	4G LTE, Wi-Fi (2.4GHz   5GHz), Bluetooth 5.3, GPS, Glonass, Galileo, Beidou
Ports	USB, 3.5mm Headphone Jack

Feature	Detail
Security	Side Fingerprint Sensor, AI Face Unlock
Dimensions	8.15 x 3.58 x 2.36 inches (Package)
Weight	14.4 ounces

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Xiaomi support website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Xiaomi customer service through their official channels.