



[Manuals.plus](#) /

> [GRACEALL](#) /

> GRACEALL 2-Burner Electric Infrared Cooktop Model ND-GA19001 User Manual

GRACEALL ND-GA19001

GRACEALL 2-Burner Electric Infrared Cooktop (Model ND-GA19001) User Manual

Comprehensive instructions for setup, operation, and maintenance.

[Introduction](#) [What's in the Box](#) [Safety Instructions](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The GRACEALL 2-Burner Electric Infrared Cooktop (Model ND-GA19001) is a versatile cooking appliance designed for both countertop and built-in use. It features two independent heating zones, precise temperature control, and a sleek ceramic glass surface for easy cleaning. This manual provides detailed instructions to ensure safe and efficient use of your new cooktop.

Key Features:

- **Dual Independent Control:** Each burner operates with its own control panel, allowing for simultaneous cooking at different heat settings.
- **Fast, No-Wait Heating:** Equipped with 1200W (7.5") and 800W (6.3") heating elements and 9 power levels for rapid and precise temperature adjustments.
- **One-Touch Power & Practical Features:** Includes a one-touch max heat activation, Pause function, Keep Warm mode, and a 1-99 minute timer.
- **Sleek Surface, Easy to Clean:** Durable black crystal glass surface resists scratches and simplifies cleaning. A scraper is included for stubborn messes.
- **Simple Plug-In Installation:** Designed for convenience, requiring only a standard 120V outlet. Compatible with both freestanding countertop use and built-in kitchen worktop installation.
- **Universal Cookware Compatibility:** Works with all flat-bottomed cookware, including stainless steel, aluminum, cast iron, and ceramic.

2. WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present and in good condition. If any items are missing or damaged, contact customer support immediately.

- GRACEALL 2-Burner Electric Infrared Cooktop
- Powerful Scraper
- Set of Replacement Parts
- Buffer Tape for Installation
- User Manual (this document)
- Warranty Card

Your browser does not support the video tag.

Video 2.1: Unboxing and overview of the GRACEALL 2-Burner Electric Infrared Cooktop, demonstrating included accessories and initial setup steps.

3. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the cooktop to prevent injury or damage. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the cooktop during use.
- The cooktop surface remains hot after use. Observe the residual heat indicator.
- Do not place flammable materials on or near the cooktop.
- Use only flat-bottomed cookware suitable for electric cooktops.

4. SETUP & INSTALLATION

The GRACEALL cooktop offers flexible installation options: freestanding countertop use or built-in integration into your kitchen worktop.

4.1. Freestanding Countertop Use

1. Place the cooktop on a stable, flat, and heat-resistant surface.
2. Ensure there is adequate clearance around the cooktop for ventilation.
3. Plug the cooktop into a standard 120V AC electrical outlet. No special wiring is required.



Figure 4.1: The cooktop can be used as a freestanding unit or integrated into a countertop.

4.2. Built-in Installation

For built-in installation, professional assistance is recommended to ensure proper cutting and sealing of the countertop.

1. Prepare a cutout in your kitchen worktop with the following dimensions: approximately 19.3 inches (49 cm) in depth and 10.3 inches (26 cm) in width. Ensure the cutout depth is more than 2 inches (5 cm).
2. Apply the provided buffer tape around the edges of the cutout to create a seal and protect the cooktop.
3. Carefully lower the cooktop into the cutout.
4. Secure the cooktop using the included mounting accessories.
5. Plug the cooktop into a standard 120V AC electrical outlet.



Figure 4.2: Built-in installation dimensions and use of buffer tape.

5. OPERATING INSTRUCTIONS

The cooktop features intuitive touch controls for each burner. Refer to the control panel diagram for button identification.



Figure 5.1: Overview of the control panel with various functions.

5.1. Powering On/Off

1. To turn on a burner, press the **ON/OFF** button for the desired heating zone. The display will show "0".
2. To turn off a burner, press the **ON/OFF** button again. The display will show "H" (for hot) until the surface cools.
3. To turn off the entire cooktop, ensure both burners are off.

5.2. Adjusting Heat Levels

1. After turning on a burner, use the **+** or **-** buttons to select a power level from 1 to 9.
2. For maximum heat, press the **PEAK** button. This activates the highest power level instantly.

5.3. Timer Function

1. With a burner active, press the **TIMER** button.
2. Use the **+** or **-** buttons to set the desired cooking time (1-99 minutes).
3. The burner will automatically turn off once the timer expires.

5.4. Keep Warm Function

1. To activate the Keep Warm function, press the **KEEP WARM** button for the active burner.
2. This mode maintains a low, consistent heat to keep food warm without overcooking.

5.5. Pause Function

1. To temporarily pause cooking, press the **PAUSE** button.
2. Press the **PAUSE** button again to resume cooking at the previous settings.



Figure 5.2: The Pause function allows temporary interruption of cooking.

5.6. Child Safety Lock

1. To activate the Child Safety Lock, press and hold the **LOCK** button for 2 seconds. This prevents accidental operation.
2. To deactivate, press and hold the **LOCK** button again for 2 seconds.

Your browser does not support the video tag.

Video 5.3: Demonstration of cooktop controls, including power, heat adjustment, and safety lock.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your cooktop. Always ensure the cooktop is completely cool before cleaning.

1. Allow the cooktop to cool down completely after use. The "H" indicator will turn off when it's safe to touch.
2. For light spills, wipe the ceramic glass surface with a damp cloth and mild detergent.
3. For stubborn, stuck-on messes, use the provided scraper at a 45-degree angle to gently lift residue. Follow with a cooktop cleaner and a soft cloth.
4. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
5. Clean the stainless steel body with a soft, damp cloth.

Two Installation Methods

All Flatted Cookware Friendly

Ultra-Quiet Cooking

How to Maintain


Effortlessly Clean with Black Crystal Ceramic

Clean Your Electric Stove After Every Culinary Creation.

Come with a Scraper and
5 Stainless Razor blades



Step 1 Wait the element to cool down.

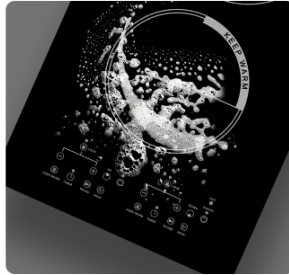

Step 2 Spray with cooktop cleaner.



Step 3 Carefully remove the stain with a scrape.



Step 4 Clean by wiping with a damp sponge.

Figure 6.1: Cleaning process for the ceramic cooktop surface.

7. TROUBLESHOOTING

If you encounter issues with your GRACEALL cooktop, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in; power outage; child lock activated.	Ensure the cooktop is securely plugged into a working 120V outlet. Check circuit breaker. Deactivate child lock by pressing and holding the LOCK button for 2 seconds.
Burner not heating.	Incorrect power level selected; cookware not suitable.	Increase the power level using the + button. Ensure you are using flat-bottomed cookware.
Display shows "H" after turning off.	Residual heat.	This is normal. The "H" indicates the surface is still hot. Wait for it to disappear before cleaning or touching.
Cooktop emits unusual odor during first use.	New appliance burn-off.	This is normal for new appliances and will dissipate after a few uses. Ensure good ventilation.

8. SPECIFICATIONS

Feature	Detail
Brand	GRACEALL
Model Number	ND-GA19001

Feature	Detail
Material	Ceramic, Glass, Stainless Steel
Heating Elements	2 (Radiant, Sealed)
Power (Large Burner)	1200W (7.5" / 200mm)
Power (Small Burner)	800W (6.3" / 165mm)
Total Wattage	2000 watts
Voltage	120 Volts (AC)
Controls Type	Touch
Product Dimensions (D x W x H)	20.47"D x 11.42"W x 2.24"H
Recommended Use	Indoor & Outdoor
Special Features	Keep Warm, One-click Boots Up, Pause & Go, Security Lock, Timer

9. WARRANTY & CUSTOMER SUPPORT

Your GRACEALL 2-Burner Electric Infrared Cooktop comes with a manufacturer's warranty. Please refer to the included Warranty Card for specific terms and conditions.

For technical assistance, troubleshooting, or warranty claims, please contact GRACEALL customer support:

Website: [Visit the GRACEALL Store on Amazon](#)

Email: [Insert Customer Support Email Here]

Phone: [Insert Customer Support Phone Number Here]

Please have your model number (ND-GA19001) and purchase date ready when contacting support.