

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VIAFLY](#) /

› VIAFLY V10 Ultra Cordless Vacuum Cleaner User Manual

## VIAFLY V10 Ultra

# VIAFLY V10 Ultra Cordless Vacuum Cleaner User Manual

Model: V10 Ultra | Brand: VIAFLY

## 1. INTRODUCTION

The VIAFLY V10 Ultra Cordless Vacuum Cleaner is designed for efficient and convenient cleaning across various surfaces. Featuring a powerful motor, long-lasting battery, and versatile attachments, it provides a comprehensive cleaning solution for your home.

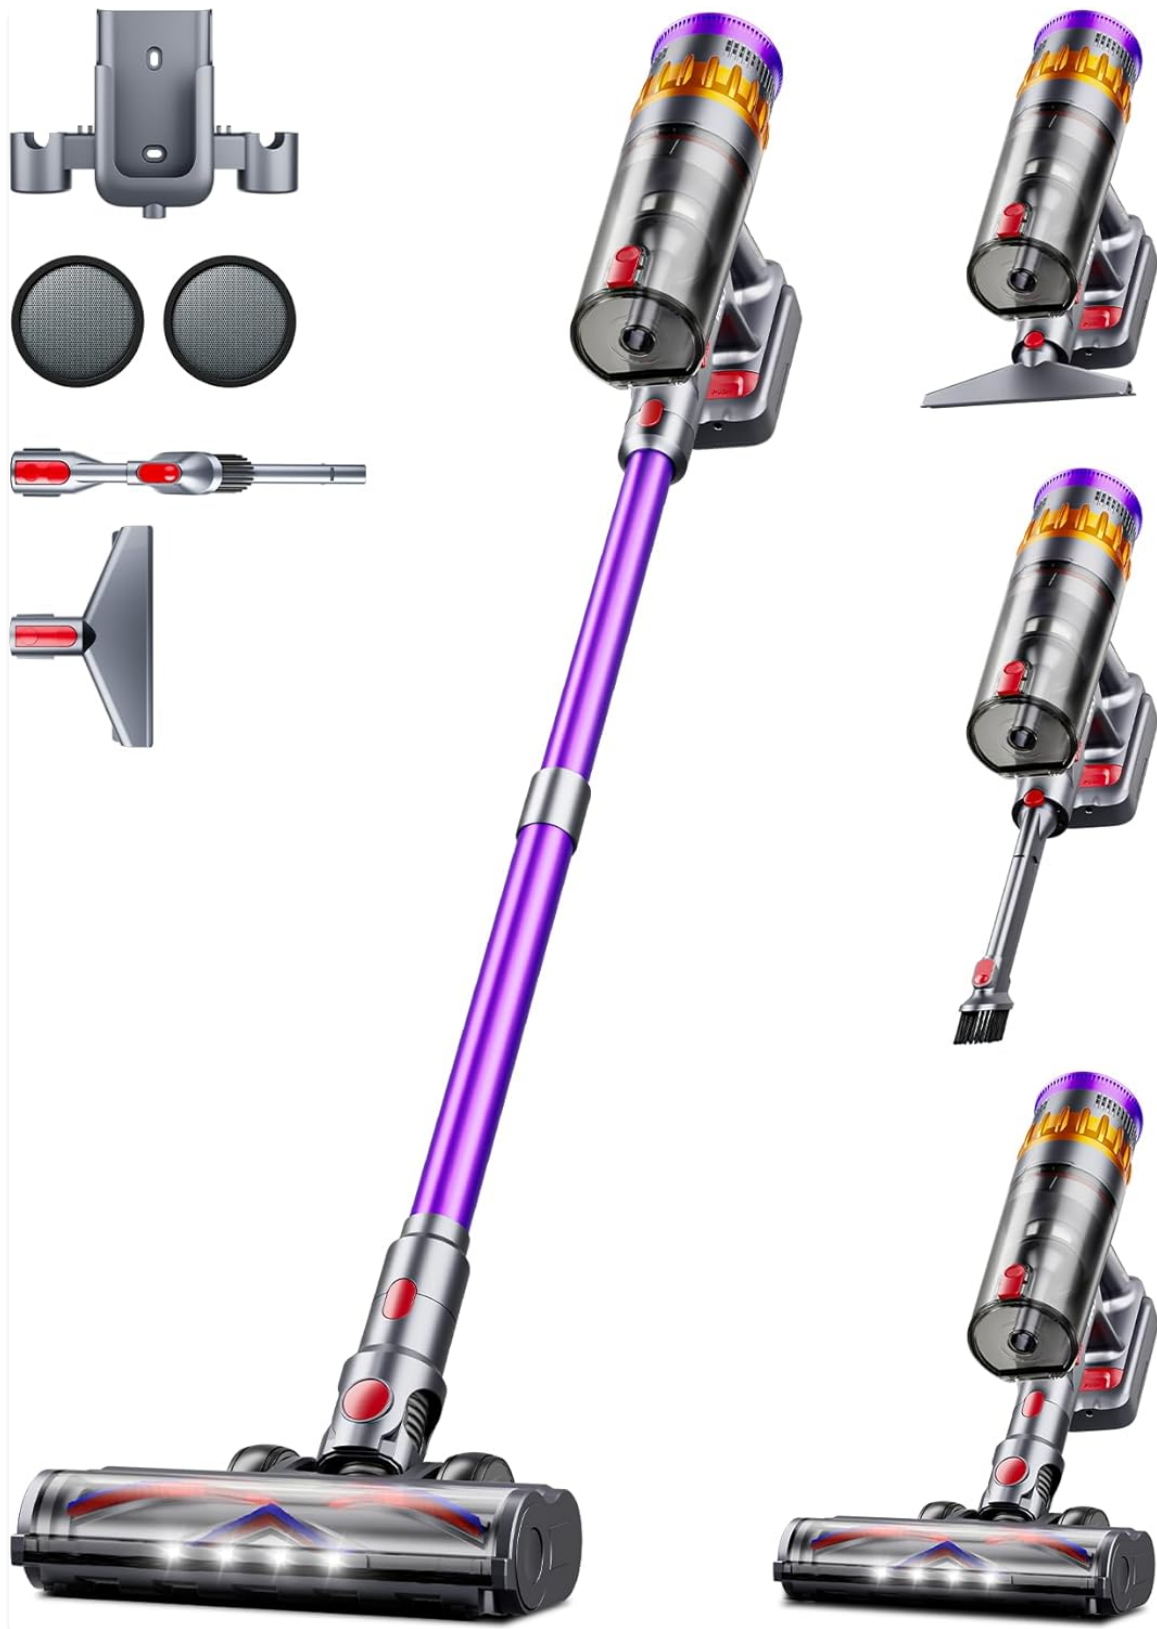


Figure 1: VIAFLY V10 Ultra Cordless Vacuum Cleaner and included accessories.

## 2. PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- Cordless Vacuum Cleaner (Main Unit)
- Removable Battery
- Floor Brush
- HEPA Filter (2 included)

- 2-in-1 Brush
- Sofa Brush
- Telescopic Pole
- Adapter
- Wall Mount
- User Manual
- Quick Guide

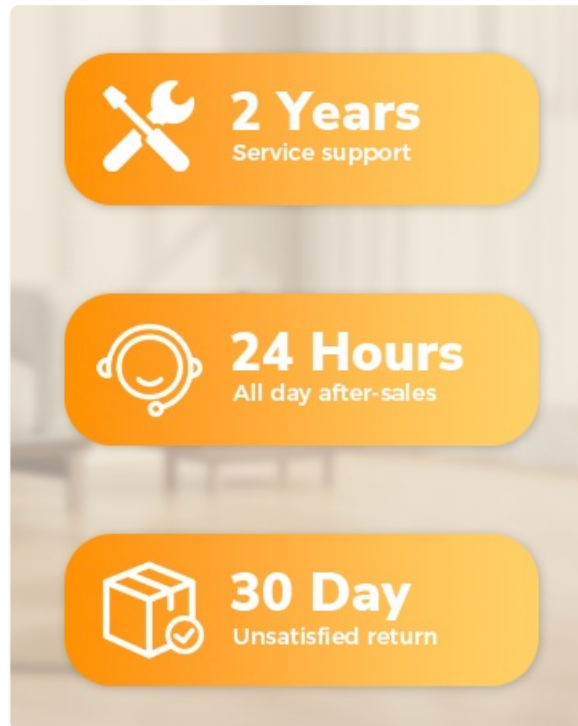


Figure 2: All components included in the package.

### 3. PRODUCT OVERVIEW

The VIAFLY V10 Ultra features a modular design for versatile cleaning. Key components include:

- **Main Unit:** Houses the 550W brushless motor, 1.6L dust cup, and smart LED touch screen.
- **Telescopic Pole:** Adjustable for reaching high or low areas.
- **Floor Brush:** V-shaped anti-tangle bristles with 6 LED lights for illuminating dark areas.
- **Removable Battery:** 8\*2800mAh capacity for extended runtime.
- **Attachments:** 2-in-1 brush and sofa brush for specialized cleaning.



Figure 3: The vacuum can be configured as a handheld or stick vacuum.

## 4. SETUP

### 4.1 Assembly

1. Insert the telescopic pole into the main unit until it clicks securely.
2. Attach the desired cleaning head (e.g., floor brush) to the other end of the telescopic pole until it clicks.
3. Ensure the removable battery is fully charged before first use.

### 4.2 Charging

The vacuum can be charged via its wall mount or by directly plugging the adapter into the removable battery.

- **Wall Mount Charging:** Install the wall mount in a convenient location. Connect the adapter to the wall mount, then hang the vacuum. The battery will charge automatically.
- **Direct Battery Charging:** Remove the battery from the main unit and plug the adapter directly into the battery's charging port.

A full charge takes approximately 4 hours and provides up to 70 minutes of runtime in Min Mode.



Figure 4: Wall-mounted charging and storage solution.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off and Suction Modes

Press the power button on the main unit to turn the vacuum on or off. Use the responsive LED touch screen to switch between 3 suction modes: Min, Mid, and Max. The screen also displays battery status and fault prompts.

# All-in-one LED Display



Figure 5: The smart LED touch screen for control and monitoring.

## 5.2 Self-Standing Design

The vacuum features a self-standing design, allowing it to remain upright without support. This provides convenience during cleaning breaks or storage.

## Self-Standing Design

Easy to stand upright without support



Figure 6: The vacuum's self-standing capability.

### 5.3 Using Attachments

The telescopic pole and various attachments allow for versatile cleaning:

- **Floor Brush:** Ideal for all floor types, including carpet and hard floors. Its flexible design allows for 0°-180° lateral steering and 0°-90° vertical rotation. The LED lights illuminate dust in dark areas.
- **2-in-1 Brush:** Use for dusting surfaces, cleaning keyboards, or delicate items.
- **Sofa Brush:** Designed for upholstery, pet hair on furniture, and car interiors.

## 48KPA Powerful Suction



Figure 7: Vacuum in action, demonstrating powerful suction on various debris.

## 6. MAINTENANCE

### 6.1 Emptying the Dust Cup

The 1.6L dust cup can be emptied with a single click. Position the dust cup over a trash receptacle and press the release button to open the bottom flap.

# Easy to Use



Figure 8: Easy one-click dust cup emptying.

## 6.2 Cleaning/Changing Filters

The vacuum features an 8-layer advanced filtration system with HEPA filters. Regularly clean or replace filters to maintain optimal suction and air quality.

- Twist and pull to remove the filter assembly from the main unit.
- Tap out loose dust or rinse washable components (refer to the Quick Guide for specific washable parts).
- Ensure all parts are completely dry before reassembling.

## 8-Layer Filtration System

 99.99% Filtration



Figure 9: Exploded view of the 8-layer filtration system.

### 6.3 Anti-Tangle Floor Brush Maintenance

The V-shaped bristle design helps prevent hair tangles. If hair or debris accumulates, detach the brush head and use the included cleaning tool to remove any wrapped hair.

## V-shaped Anti-tangle Brush

Combination of soft and hard brushes



Figure 10: Detail of the anti-tangle brush roll.

## 7. SPECIFICATIONS

Feature	Detail
Brand	VIAFLY
Model Name	V10 Ultra cordless vacuum cleaner
Motor Power	550W Brushless Motor
Suction Power	Up to 48KPa
Runtime	Up to 70 minutes (Min Mode)
Battery Capacity	8*2800mAh (Removable Lithium-ion)
Charging Time	Approx. 4 hours

Dust Cup Capacity	1.6 Liters
Filtration System	8-Layer with HEPA Filter
Noise Level	≤ 62 dB
Special Features	Self-standing design, LED touch screen, Anti-tangle LED floor brush, Adjustable extension tube
Product Dimensions	11"L x 10"W x 49"H
Item Weight	6 pounds