

Manuals.plus /
› Panasonic /
› Panasonic Lamdash Palm-in LITE 3-Blade Men's Shaver ES-P330U-A Instruction Manual

Panasonic ES-P330U-A

Panasonic Lamdash Palm-in LITE 3-Blade Men's Shaver ES-P330U-A
Instruction Manual

Model: ES-P330U-A

- Overview
- Safety
- Contents
- Features
- Setup
- Operation & Support
- Maintenance
- Troubleshooting
- Specifications
- Warranty

1. PRODUCT OVERVIEW

The Panasonic Lamdash Palm-in LITE ES-P330U-A is a compact and powerful 3-blade men's electric shaver designed for a smooth and comfortable shave. Its ergonomic palm-sized design incorporates advanced Lamdash shaving technology, making it ideal for both daily use at home and convenient travel. This shaver supports USB Type-C charging and features a waterproof design for easy cleaning.

パームインシリーズから、3枚刃が登場。

LAMDASH PALM IN LITE



○写真はイメージです。

Image: The Lamdash Palm-in LITE series, showcasing three distinct color options for the shaver.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this appliance to prevent injury to yourself and others, and to avoid damage to the product. Keep this manual for future reference.

- Do not use the shaver if the outer foil or blades are damaged, as this may cause skin injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not disassemble, repair, or modify the shaver yourself. Contact an authorized service center for repairs.
- Keep the USB cable and charging port dry. Do not handle the USB cable with wet hands.
- Do not use or store the shaver in direct sunlight, high temperatures, or high humidity.
- Ensure the shaver is fully dry before charging.
- Only use the provided USB cable for charging. When using overseas, a country-specific plug adapter may be required (sold separately).

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Panasonic Lamdash Palm-in LITE Shaver Unit (ES-P330U-A)
- Semi-hard Carrying Case
- USB Type-C Charging Cable
- Dedicated Shaver Oil
- Cleaning Brush



持ち運びに便利な
キャリングケース付き。

○写真のモデルはES-P330U-Hです。○写真はイメージです。

Image: The shaver and its semi-hard case, highlighting its portability for travel.

4. PRODUCT FEATURES

The ES-P330U-A shaver is equipped with several advanced features for an optimal shaving experience:

- **3-Blade Lamdash Technology:** Experience a close and gentle shave with Panasonic's advanced 3-blade system, designed to capture and cut various beard types effectively.
- **Palm-sized Ergonomic Design:** Compact and comfortable to hold, allowing for easy maneuverability and precise control during shaving.
- **High-Speed Linear Motor:** Delivers approximately 13,000 strokes per minute for a powerful and consistent shave, even on thick beards.
- **Wet/Dry Shaving:** Fully waterproof (IPX7 standard) for convenient dry shaving or refreshing wet shaving with foam or gel, even in the shower.

- **Foam Making Mode:** Generates rich foam directly from your shaving gel or soap for a smoother, more comfortable wet shave.
- **USB Type-C Charging:** Modern and convenient charging via a standard USB Type-C cable, making it easy to charge at home or on the go.
- **3-Level Battery Indicator:** Clearly displays the remaining battery charge, allowing you to know when to recharge.
- **Switch Lock Function:** Prevents accidental power-on, ideal for travel.
- **International Voltage Compatibility:** Supports AC100-240V for worldwide use (requires a separate plug adapter for different regions).



手のひらサイズに、
ラムダッシュ3枚刃テクノロジーを凝縮。

○写真のモデルはES-P330U-Hです。○写真はイメージです。

Image: The shaver held in a hand, illustrating its compact, palm-sized design.



3枚刃システム
アゴ下トリマー刃新搭載で
長いくせヒゲをカット。

○写真のモデルはES-P330U-Hです。○写真はイメージです。

Image: Detailed view of the 3-blade cutting system.

主な機能




高速リニアモーター
(約13,000ストローク/分)



ラムダッシュ
AI ※1



スイッチ
ロック

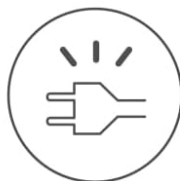

3段階
電池残量表示



お風呂でも
剃れる




泡メイキング
モード



防水設計
IPX7基準※2



本体まるごと
清潔水洗い※3

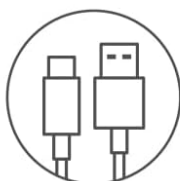

USB充電対応
[Type-C]
(USB電源
アダプター別売)



2時間
急速充電



海外・国内両用
AC100-240V※4
(別売品 USB電源
アダプター使用時)

日本製

(刃・本体のみ)

※1 ヒゲの濃さや、シェーバーヘッド内部のヒゲグズによって、センサーが反応(駆動音の変化)しない場合がありますが、異常ではありません。

※2 IPX7基準(水深1メートルに30分間水に浸けても有害な影響を生じる量の水の浸入がない)検査をクリアしています。

※3 USBケーブルは除く。

※4 海外でご使用の場合には、国や地域に合わせて別途プラグアダプターをお買い求めください。

○イラストはイメージです。

Image: Pictorial representation of the shaver's main functions and capabilities.

5. SETUP AND INITIAL USE

5.1 Charging the Shaver

1. Ensure the shaver is turned off and completely dry before charging.
2. Connect the provided USB Type-C cable to the charging port on the shaver.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer.
4. The battery indicator light will illuminate to show charging status. A full charge typically takes approximately 2 hours.
5. Once fully charged, disconnect the USB cable.



USB充電 [Type-C] に対応。

○写真のモデルはES-P330U-Hです。○写真はイメージです。

Image: The shaver connected to a USB Type-C charging cable.

5.2 Initial Checks

- Before first use, ensure the shaver is fully charged.
- Check that the outer foil and blades are securely attached and undamaged.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off

- To turn on the shaver, slide the power switch upwards.
- To turn off the shaver, slide the power switch downwards.

6.2 Shaving Technique

For best results, hold the shaver at a right angle to your skin and move it slowly against the direction of beard growth. Apply gentle pressure; the shaver is designed to cut effectively without excessive force.

Dry Shaving:

- Ensure your face is clean and dry.

- Shave before washing your face, as skin tends to swell after washing.

Wet Shaving (with foam/gel):

- Apply shaving foam or gel to your face.
- You can use the shaver's foam making mode for convenience.
- Shave as usual, rinsing the shaver head under running water periodically to remove lather and stubble.



電池残量が3色でわかる。



○写真のモデルはES-P330U-Hです。○写真・イラストはイメージです。

Image: The shaver's battery indicator light, showing a green light for sufficient charge.

6.3 Using the Switch Lock

- To activate the switch lock, slide the power switch to the 'OFF' position and then engage the lock mechanism (refer to the diagram on the shaver if available).
- To unlock, disengage the lock mechanism and then slide the power switch to 'ON'.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your shaver.

7.1 Daily Cleaning (Water Washable)

1. After each use, turn off the shaver.
2. Remove the outer foil frame.
3. Rinse the outer foil frame and the inner blades thoroughly under running water to remove stubble and debris.
4. You can also use the cleaning brush to gently remove stubborn hairs from the inner blades and shaver body.
5. Shake off excess water and allow the parts to air dry completely before reattaching the outer foil frame.

7.2 Oiling the Blades

Apply a small drop of the dedicated shaver oil to each inner blade once a week or as needed to maintain smooth operation and blade sharpness.

1. After cleaning and drying the blades, apply one drop of oil to each inner blade.
2. Run the shaver for a few seconds to distribute the oil.
3. Wipe off any excess oil from the outer foil.

7.3 Blade and Foil Replacement

The outer foil and inner blades are precision components that wear out over time. For optimal shaving performance, it is recommended to replace them periodically. Replacement parts can be purchased from authorized Panasonic retailers or service centers.

8. TROUBLESHOOTING

If you encounter any issues with your shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted. Switch lock is engaged.	Charge the shaver. Disengage the switch lock.
Poor shaving performance.	Blades/foil are dull or dirty. Insufficient battery charge.	Clean the blades and foil. Apply oil. Replace blades/foil if worn. Charge the shaver fully.
Shaver stops during use.	Battery is low.	Recharge the shaver.
Charging indicator not working.	Cable not properly connected. Faulty USB adapter.	Ensure cable is securely connected. Try a different USB adapter or port.

If the problem persists after trying these solutions, please contact Panasonic customer support.

9. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Panasonic
Model Number	ES-P330U-A
Power Source	Rechargeable Battery
Charging System	USB Type-C
Number of Blades	3
Head Type	Reciprocating
Product Weight	Approx. 130g (excluding cap)
Dimensions (H x W x D)	6.0 x 7.1 x 4.2 cm (excluding cap)
Battery Life	Approx. 14 days (based on 3 minutes of use once a day)
Waterproof	IPX7 Standard
International Voltage	AC100-240V (requires separate plug adapter)

Feature	Specification
Blade Material	Stainless Steel
Included Components	Semi-hard case, USB cable, dedicated oil, cleaning brush

10. WARRANTY AND SUPPORT

10.1 Manufacturer's Warranty

This Panasonic Lamdash Palm-in LITE shaver comes with a **12-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover:

- Damage caused by improper use, accident, or neglect.
- Normal wear and tear of consumable parts such as outer foils and inner blades.
- Damage caused by unauthorized repairs or modifications.

10.2 Customer Support

For technical assistance, warranty service, or to purchase replacement parts, please contact Panasonic customer support through their official website or the contact information provided in your product packaging. When contacting support, please have your model number (ES-P330U-A) and proof of purchase readily available.

© 2026 Panasonic Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F594NTSN>

More documents and user manuals: <https://manuals.plus/>