

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [DUMOS](#) /

> [DUMOS TV Stand Dresser with 5 Fabric Storage Drawers \(Model DUMOS-TV5BC\) - Instruction Manual](#)

## DUMOS DUMOS-TV5BC

# DUMOS TV Stand Dresser with 5 Fabric Storage Drawers (Model DUMOS-TV5BC) - Instruction Manual

Brand: DUMOS

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your DUMOS TV Stand Dresser with 5 Fabric Storage Drawers, Model DUMOS-TV5BC. Please read all instructions carefully before assembly and use to ensure safe and proper functionality.

## SAFETY INFORMATION

---

- **Anti-Tip Device:** Always install the included anti-tip device to secure the dresser to the wall. This prevents accidental tipping, especially in households with children.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the top shelf (66 lbs) and individual drawers (11 lbs for large, 7 lbs for small). Overloading can cause structural damage or injury.
- **Stable Placement:** Place the unit on a flat, level surface to ensure stability. Adjust the feet as necessary to prevent wobbling.
- **Proper Use:** This unit is designed as a TV stand and storage dresser. Avoid climbing on or hanging from the unit.
- **Assembly:** Ensure all bolts and fasteners are securely tightened during assembly. Periodically check and re-tighten as needed.

## PARTS LIST

---

Before beginning assembly, verify that all parts are present and undamaged. Refer to the diagram below for identification.

# Size Information

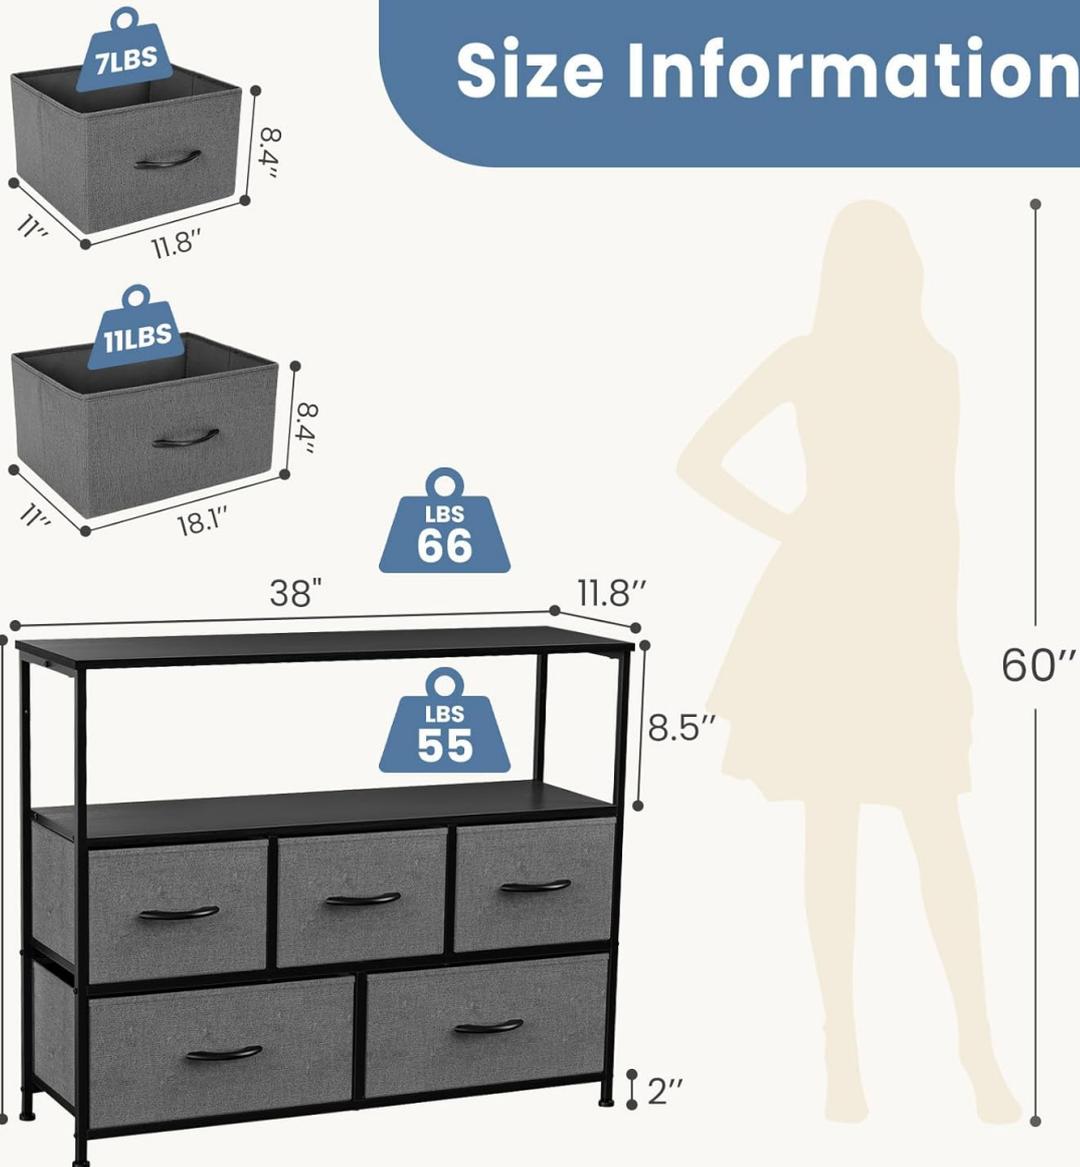


Image: Comprehensive diagram showing all components of the DUMOS TV Stand Dresser, including metal frames, wooden boards, fabric drawers, and hardware.

- **A:** Side Frame (x1)
- **B:** Side Frame (x1)
- **C:** Middle Frame (x2)
- **D:** Middle Frame (x1)
- **E:** Cross Tube (x2)
- **F:** Cross Tube (x3)
- **G:** Middle Board (x1)
- **H:** Top Board (x1)
- **I:** Expanded Drawer (x5) - (3 small, 2 large)
- **J:** Base Board for Drawer (x5) - (3 small, 2 large)
- **K:** Drawer Handle (x5)
- **Hardware:** Bolts (various sizes), Allen wrench, adjustable feet.

## ASSEMBLY INSTRUCTIONS

Follow these steps for proper assembly. An installation video is also available for visual guidance.

Your browser does not support the video tag.

Video: Official DUMOS TV Stand Dresser Installation Guide. This video demonstrates each assembly step visually.

### 1. Step 1: Install Adjusting Feet

Install the 4 adjusting feet to the bottom of the Side Frames (A & B). Ensure they are securely tightened.



## SPACIOUS STORAGE

Board Capacity **66LBS**

Drawer Capacity **11/7LBS**



### 5 Large Drawers

Each one could hold

- Toy
- Diapers
- Snacks
- Grocery

T-shirts 12-15

Suits 7-10

Image: Close-up of a hand screwing an adjustable foot into the base of a metal side frame.

### 2. Step 2: Connect Side Frames with Cross Tubes

Use Bolts (2)\*10 to attach Cross Tube (F) to the top of the Side Frames (A & B). Note: Side Frames (A & B) should face the same direction, with holes facing backward.

### 3. Step 3: Install Middle Frame (D) to Cross Tubes (E&F)

Install Middle Frame (D) to the Cross Tubes (E & F) using Bolts (2)\*4. Ensure all connections are firm.

### 4. Step 4: Install Middle Frame (C) to Cross Tube (E)

Install Middle Frame (C)\*2 to the Cross Tube (E) with Bolts (2)\*4. These frames will support the smaller drawers.

### 5. Step 5: Install Middle Board (G)

Install the Middle Board (G) to the Side Frames (A & B) with Bolts (5)\*4 and to the Middle Frame (C)\*2 with Bolts (4)\*2. This forms the shelf above the smaller drawers.

#### 6. Step 6: Attach Top Board (H)

Attach the Top Board (H) to the frame, and tighten the Bolts (3)\*5. This completes the main structure of the unit.

#### 7. Step 7: Assemble Drawers (I & J)

Place Base Board for Drawer (J) into the expanded Drawer (I), and install the Drawer Handle (K) with Bolts (7)\*2. Install the two Drawers (I)\*2 in the same way. Repeat for all 5 drawers.

#### 8. Step 8: Install Anti-Tip Device

If you need to fix the Dresser TV Stand to the wall, drill holes in the wall with an electric drill, then insert Expansion Tube (9)\*2 and fix the Dresser TV Stand with Bolts (8)\*2. This is a crucial safety step.

#### 9. Step 9: Insert Drawers

Put the installed drawers (K & I) into the frame in turn. Ensure they slide smoothly.



Image: The completed DUMOS TV Stand Dresser with all drawers in place, showcasing its functional design.

## OPERATING INSTRUCTIONS


---

Your DUMOS TV Stand Dresser is designed for versatile storage and media display.

- **Drawer Use:** The 5 fabric drawers are ideal for organizing clothing, accessories, media, or other household items. Pull handles gently to open and push firmly to close.

- **Top Shelf:** The top wooden shelf can accommodate a TV up to 45 inches or serve as a display area for decorative items, lamps, or other electronics.
- **Middle Shelf:** The open middle shelf provides additional space for media devices, books, or decorative accents.
- **Versatile Placement:** This unit can be used in living rooms, bedrooms, dorms, or entryways as a TV stand, dresser, or general storage unit.

## Upgraded breathable 3 layers fabric material

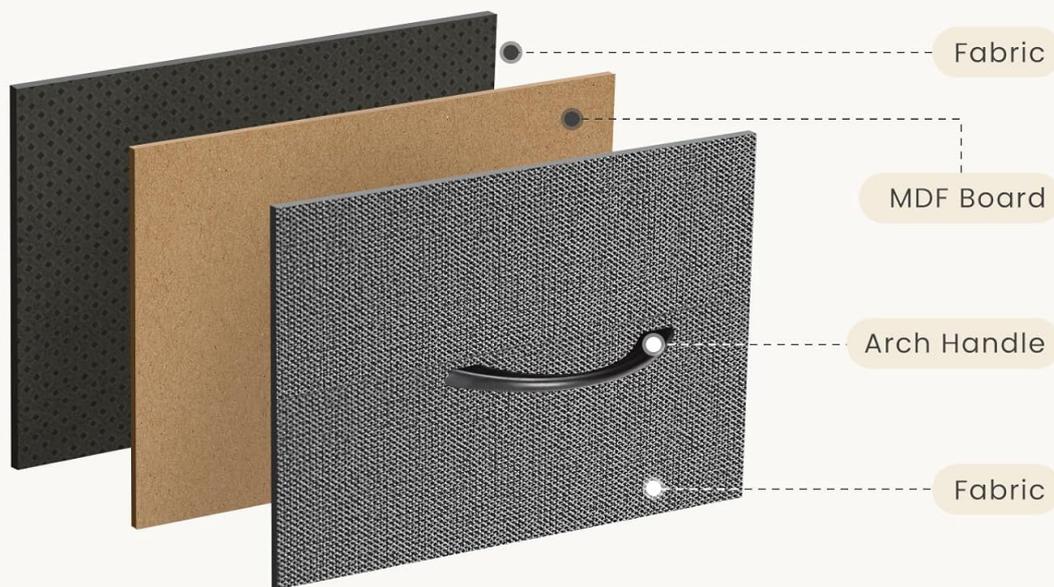

Wear resistant



Good load bearing



Breathable



Easy to clean

Image: The TV stand dresser integrated into a living space, demonstrating its use for a television and storage.

## MAINTENANCE

- **Cleaning Frame:** Wipe the metal frame and wooden shelves with a soft, damp cloth. Avoid harsh chemicals that may damage the finish.
- **Cleaning Drawers:** The fabric drawers can be spot cleaned with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Regular Checks:** Periodically inspect all bolts and connections to ensure they remain tight. Retighten if necessary to maintain stability.
- **Avoid Moisture:** Keep the unit away from excessive moisture or direct sunlight to prevent warping or fading of materials.

## TROUBLESHOOTING

---

- **Unit is Wobbly:**
  - Ensure the unit is on a flat surface.
  - Adjust the leveling feet at the bottom of the frame until stable.
  - Check all assembly bolts and tighten any loose connections.
- **Drawers Do Not Slide Smoothly:**
  - Ensure the drawer base board (J) is fully inserted and flat within the fabric drawer (I).
  - Verify that the middle frames (C & D) are correctly installed and not bent.
  - Ensure drawers are not overloaded, which can cause them to sag.
- **Missing Parts:**
  - Refer to the Parts List and contact customer support if any components are missing.

## SPECIFICATIONS

---

Feature	Detail
Brand	DUMOS
Model Name	TV Stand Dresser with 5 Fabric Storage Drawers
Item Model Number	DUMOS-TV5BC
Product Dimensions	11.8"D x 39.4"W x 31.9"H
Color	Grey
Material	Wood, Metal, Fabric
Number of Drawers	5
Item Weight	31.3 pounds
Assembly Required	Yes
Max TV Size	Up to 45 inches
Top Board Capacity	66 lbs
Drawer Capacity (Large)	11 lbs
Drawer Capacity (Small)	7 lbs

# Sturdy Structure

Small while still offer a stable support



Anti-Tilt Device



1.5MM Thickened  
Tube Frame



End-Stop Design

Image: Visual representation of the dresser's dimensions and weight limits for various components.

## WARRANTY & SUPPORT

For any questions, concerns, or assistance with your DUMOS TV Stand Dresser, please contact our customer support team. We are committed to ensuring your satisfaction.

- **Customer Service:** Refer to your purchase documentation or the DUMOS official website for contact information.
- **Warranty:** This product comes with a standard manufacturer's warranty. Please retain your proof of purchase for any warranty claims.