



Manuals.plus /

› Sonew /

› Sonew Cold Shoe Mount Adapter for Action Cameras (X4, X3, X2) User Manual

Sonew Sonewsgb6d0mwhn

Sonew Cold Shoe Mount Adapter for Action Cameras (X4, X3, X2) User Manual

INTRODUCTION

Thank you for choosing the Sonew Cold Shoe Mount Adapter. This manual provides essential information for the proper installation, operation, and maintenance of your new accessory. Please read this guide thoroughly before use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

Key Features

- **Durable Construction:** Crafted from high-strength aluminum alloy using CNC integrated technology, ensuring durability and resistance to wear and drops.
- **Seamless Compatibility:** Specifically designed for X4, X3, and X2 series action cameras, providing a precise fit without obstructing camera buttons.
- **Accessory Integration:** Features reserved 1/4-inch screw holes at the bottom for easy connection to selfie sticks, tripods, and other accessories.
- **Versatile Accessory Connection:** The cold shoe interface allows for attaching external accessories such as fill lights and microphones.
- **Compact and Portable:** Lightweight design for easy transport, fitting comfortably in a camera bag.

Package Contents

- 1 x Sonew Cold Shoe Bracket



Image 1: The Sonew Cold Shoe Mount Adapter, a black L-shaped bracket made of aluminum alloy.

SETUP AND INSTALLATION

1. **Identify Camera Compatibility:** Ensure your action camera is an X4, X3, or X2 series model. The mount is designed for these specific cameras.
2. **Attach to Camera:** Gently slide the cold shoe mount onto the designated cold shoe slot of your action camera. Ensure it is securely seated. The design prevents obstruction of camera buttons.
3. **Connect Base Accessories (Optional):** If using a selfie stick, tripod, or other accessories, align the 1/4-inch screw of the accessory with the reserved hole at the bottom of the cold shoe bracket. Screw it in clockwise until secure.



Image 2: The cold shoe mount adapter securely attached to an action camera, ready for use.

OPERATING INSTRUCTIONS

The Sonew Cold Shoe Mount Adapter serves as an extension for connecting various external accessories to your action camera.

1. **Identify Accessory:** Select the external accessory you wish to attach, such as a fill light, microphone, or other cold shoe compatible device.
2. **Attach Accessory:** Slide the base of your external accessory into the cold shoe interface located on the top of the Sonew mount. Ensure it clicks or slides fully into place for a secure connection.
3. **Verify Stability:** Before active use, gently test the stability of the attached accessory to ensure it is firmly mounted and will not detach during camera operation.

Expand Functionality

The cold shoe interface can connect external accessories such as fill light, microphone, and more for versatile expansion, reliable and practical.



Image 3: A close-up view of the cold shoe interface on the adapter, designed for connecting external accessories.

MAINTENANCE

To ensure the longevity and optimal performance of your Sonew Cold Shoe Mount Adapter, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust and fingerprints. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the aluminum alloy finish.
- **Storage:** Store the mount in a dry, clean environment when not in use, away from extreme temperatures and direct sunlight.
- **Inspection:** Periodically inspect the mount for any signs of wear, damage, or loose connections.

TROUBLESHOOTING

This section addresses common issues you might encounter with the Sonew Cold Shoe Mount Adapter.

- **Mount does not fit camera:** Ensure your camera is an X4, X3, or X2 series model. The mount is specifically designed for these models. Do not force the mount onto an incompatible device.

- **Accessory feels loose on the mount:** Verify that the accessory is fully inserted into the cold shoe interface. Some accessories may have a locking mechanism that needs to be engaged.
- **Mount appears damaged:** If the mount is bent or broken, discontinue use immediately to prevent damage to your camera or accessories. Contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Item Type	Cold Shoe Mount
Material	Aluminum Alloy
Compatibility	For X4, X3, X2 Action Cameras
Item Model Number	Sonewsgb6d0mwhn
Package Dimensions	4.33 x 3.54 x 0.39 inches
Item Weight	0.353 ounces
Special Features	Adjustable (referring to accessory positioning)
Manufacturer	Sonew

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. Please refer to the retailer's return policy or contact Sonew customer support for details regarding warranty coverage and technical assistance.

For further support or inquiries, please visit the official Sonew store or contact their customer service channels.