

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [dbsono](#) /

› [dbsono Wireless Bluetooth Earbuds User Manual](#)

## dbsono T806

# dbsono Wireless Bluetooth Earbuds User Manual


Model: T806

## PRODUCT OVERVIEW

The dbsono Wireless Bluetooth Earbuds (Model T806) are designed to deliver a superior audio experience with powerful sound and reliable performance. Featuring 13mm dynamic drivers, they produce rich Hi-Fi audio with deep bass, making music, podcasts, and calls crisp and immersive. With up to 30 hours of total playtime from the charging case, these earbuds are perfect for all-day use, whether commuting, working out, or relaxing. The intuitive touchscreen controls provide easy access to music, volume, and calls, while the built-in high-sensitivity microphone ensures clear voice quality. Designed with an IPX5 water-resistant rating, they hold up against sweat and light rain, making them a great companion for workouts and outdoor activities.

## WHAT'S INCLUDED

- Wireless Charging Case
- Earbuds (L&R)
- S/M/L Ear Tips (Size M Pre-Installed)
- Lanyard
- Type-C Charging Cable

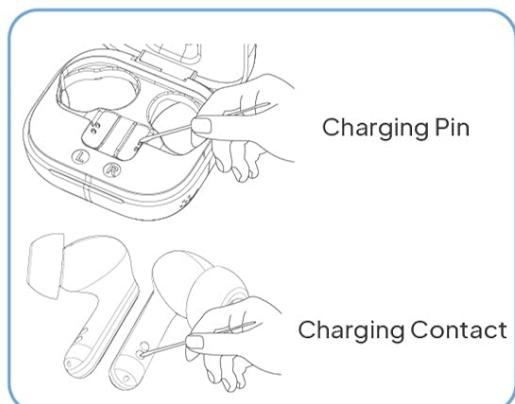

## Keep Charging Points Clean for Reliable Charging

After workouts or exposure to moisture, use a dry cloth or cotton swab to clean the metal contacts on the earbuds and the pins in the case. Keeping these points clean and dry prevents corrosion and charging issues.

Figure 1: All items included in the dbsono Wireless Bluetooth Earbuds package.

## INITIAL SETUP

- Activate Earbuds:** Upon first use, peel off any protective film from the earbuds. Place both earbuds back into the charging case to activate them.
- Automatic Pairing:** Take the earbuds out of the charging case. They will automatically enter pairing mode.
- Connect via Bluetooth:** On your device (smartphone, tablet, PC), open Bluetooth settings and search for "DB T806". Select it to connect.

# First Use Guide


**Put Earbuds back into the Case to Activate**

1




Peel the Protective Film

2

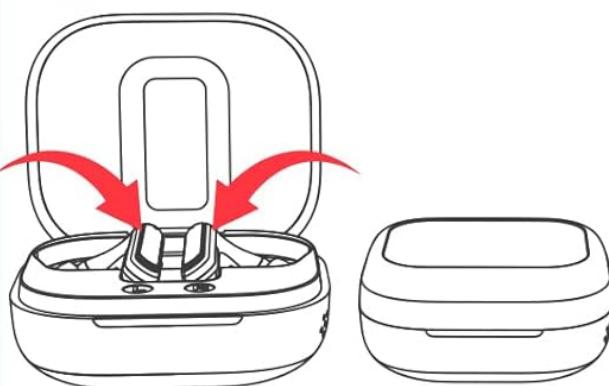

Place the Earbuds back into the Case to Activate them

3

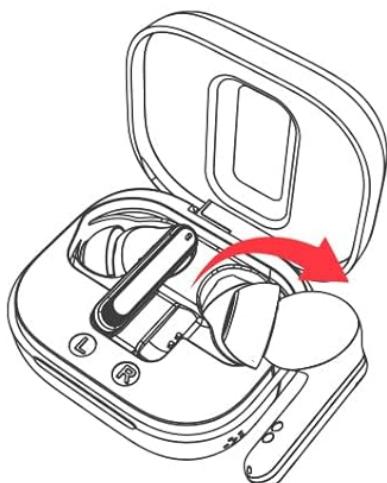

Take Out to Auto-Pair

4



Find & Connect "DB T806"

Figure 2: Visual guide for the initial activation and pairing process.

# Bluetooth 5.4 TWS

One-step Pairing



Figure 3: Bluetooth 5.4 TWS connectivity for seamless pairing.

## OPERATING YOUR EARBUDS

### Smart Touchscreen Controls

The charging case features an intuitive touchscreen display, allowing you to manage various functions directly from the case

without needing your phone. Swipe through different panels for real-time call display, finding your earbuds, volume/brightness adjustment, and more.



Figure 4: Overview of the smart LCD touchscreen functions on the charging case.

## Music Playback

Control your music directly from the earbuds or the charging case touchscreen.

- **Play/Pause:** Double tap L/R earbud.
- **Next Track:** Triple tap R earbud.
- **Previous Track:** Triple tap L earbud.
- **Volume Up:** Long press R earbud.
- **Volume Down:** Long press L earbud.



Figure 5: Managing your music with the touchscreen case and earbud controls.

## Call Management

Handle calls with ease using the earbud controls or the charging case display.

- **Receive Call:** One tap L/R earbud.
- **Reject Call:** Long press 2s L/R earbud.
- **Activate Siri:** Five tap L/R earbud.



Figure 6: Managing incoming calls directly from the charging case display.

## Advanced Features

- **Find My Earbuds:** Use the charging case touchscreen to locate a lost earbud. The display will show options to find the left or right earbud.

## Suitable as a beautiful gift



Valentine's

Birthdays

Christmas

For Dad

For Mom

Figure 7: Using the 'Find My Earphone' feature on the charging case.

- **Camera Assistant:** The smart case can act as a remote shutter for your phone's camera. Open your phone's camera, frame the shot, and tap the case to capture photos.

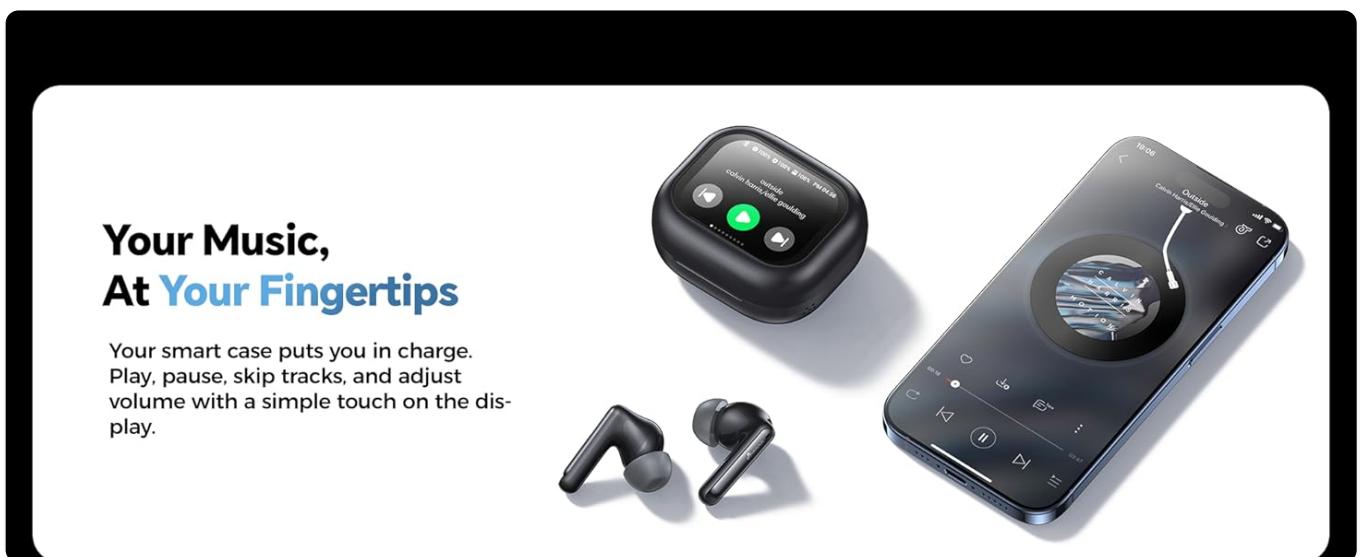


Figure 8: The charging case as a remote camera assistant.

- **Pocket Timer:** Set focus sessions or reminders directly on the case, without getting distracted by your phone.

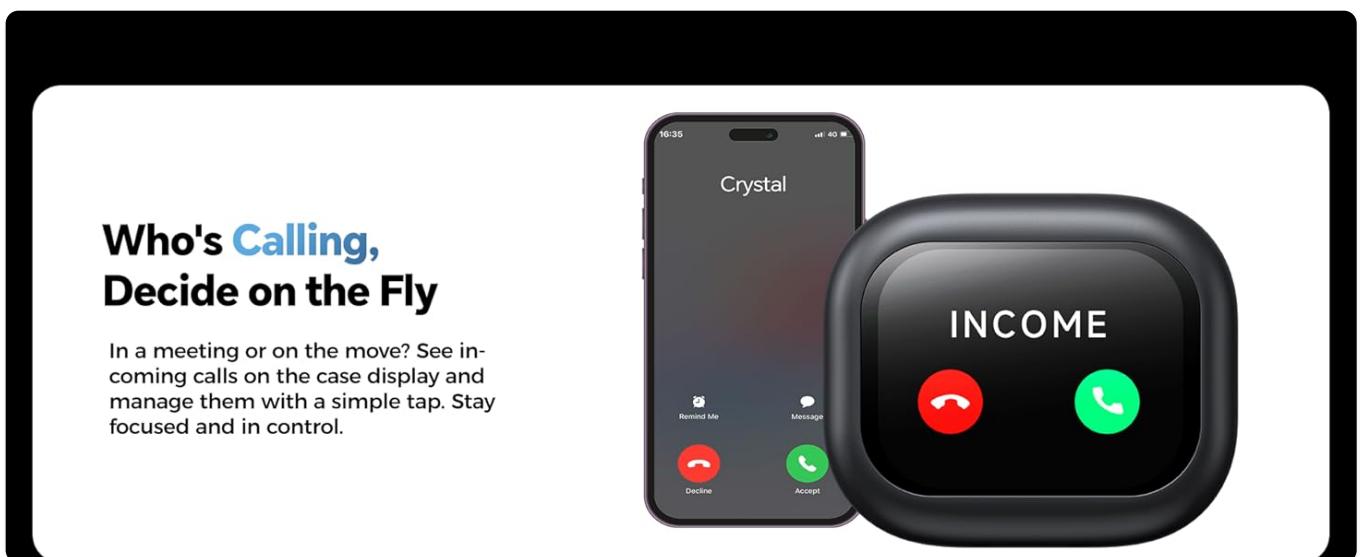


Figure 9: Utilizing the built-in pocket timer for various activities.

## Earbud Button Functions

### The Case That Thinks. And Finds.

Forget searching for apps. Our innovative smart charging case lets you locate a lost earbud directly from its display.



Figure 10: Detailed overview of earbud touch controls.

## CARE AND MAINTENANCE

### Cleaning Charging Points

After workouts or exposure to moisture, use a dry cloth or cotton swab to gently clean the metal contacts on the earbuds and the pins in the case. Keeping these points clean and dry prevents corrosion and ensures reliable charging.

### Your Pocket-Sized Camera Assistant.

The smart case display doubles as a remote shutter. Just open your phone's camera, frame the shot, and tap the case to capture perfect group photos.



Figure 11: Proper cleaning of charging contacts for optimal performance.

### Protective Grille Maintenance

If your earphone sound becomes muffled or quieter than before, use a soft brush or cotton swab to gently remove earwax and dust from the grille. To prevent damage, do not use sharp objects.

## More Than a Case: A Pocket Timer

It's the perfect little tool, always with you. Set focus sessions or reminders directly on the case, without getting distracted by your phone.



Figure 12: Cleaning the earbud's protective grille for clear sound.

## TROUBLESHOOTING

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close the lid, then open it again. Check your device's Bluetooth settings and forget/remove "DB T806" if previously connected, then try pairing again.
No sound from one earbud	Check battery level of both earbuds. Ensure both are properly seated in the charging case. Try resetting the earbuds (refer to full user guide for specific reset instructions).
Charging case display unresponsive	Ensure the charging case is charged. Try connecting it to a power source. If the issue persists, contact customer support.
Poor call quality	Ensure the microphone is not obstructed. Clean the microphone opening. Move closer to your connected device to improve signal strength.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	T806
Bluetooth Version	5.4
Driver Size	13mm
Total Playtime	Up to 30 hours (with charging case)
Water Resistance	IPX5
Control Type	Touch Control
Microphone	Built-in high-sensitivity mic
Charging Time	2.5 Hours

Feature	Detail
Item Weight	0.3 Ounces
Ear Placement	In Ear
Noise Control	Sound Isolation

## **WARRANTY AND SUPPORT**

Your dbsono Wireless Bluetooth Earbuds come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official dbsono website. If you encounter any issues or require technical assistance, please contact dbsono customer support. You may also find additional resources and a full user guide by scanning the QR code provided on the charging case display (if applicable) or by visiting the Amazon support page for this product.

© 2025 dbsono. All rights reserved.