

Vego VWCT201

Vego 2-Zone Sprinkler Timer with Brass Inlet

Model: VWCT201

Brand: Vego

INTRODUCTION

The Vego 2-Zone Sprinkler Timer is designed to automate your garden and lawn watering, providing efficient and flexible irrigation. This dual-channel timer features robust brass inlets for durability and offers programmable schedules, manual watering options, and a rain delay function. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance of your device.

PACKAGE CONTENTS

- Vego 2-Zone Sprinkler Timer
- Instruction Manual

SETUP

1. Battery Installation

The Vego 2-Zone Sprinkler Timer requires two AAA batteries (not included). Locate the battery compartment on the back of the unit, open it, insert the batteries according to the polarity indicators, and securely close the compartment. The LCD display will activate upon successful battery installation.

2. Connecting to Faucet

Attach the brass inlet of the timer to your outdoor faucet. Ensure a tight, leak-free connection. The brass fitting provides enhanced durability and prevents corrosion.

3. Connecting Hoses

Connect your garden hoses to the two outlets at the bottom of the timer. Each outlet corresponds to an independent watering zone. Ensure these connections are also tight to prevent leaks.

Durable & Leak-Proof:



The timer is built with durable brass connectors and features an IP54 waterproof rating, ensuring reliable performance in various outdoor weather conditions.

4. Setting Current Time and Date

1. Turn the dial to 'SET CLOCK'.
2. Use the '+' and '-' buttons to adjust the current time (12H/24H format). Press 'OK' to confirm.
3. Adjust the current day of the week. Press 'OK' to confirm.

Watch this video for a visual guide on how to set up and utilize the Vego 2-Zone Sprinkler Timer, highlighting its robust brass connectors and automated watering functions.

OPERATING INSTRUCTIONS

1. Programming Watering Schedules (Dual-Zone Control)

The timer allows for independent programming of two watering zones. Turn the dial to 'START TIME', 'HOW LONG', or 'HOW OFTEN' to set your desired schedule. Use the 'ZONE' button to switch between Zone 1 and

Zone 2 for individual programming.



This image demonstrates the dual-zone independent control feature, showing how different watering schedules can be applied to separate areas of your yard, such as a lawn (Zone 1, Lawn Mode) and a garden bed (Zone 2, Custom Mode).

Available Modes:

- **Custom Mode:** User-defined start time, duration (1 minute to 3 hours 59 minutes), and frequency (every 2 to 6 days).
- **Garden Bed Mode (V1):** Preset start time (e.g., 6:00 AM), duration (e.g., 3 or 9 minutes), and frequency (e.g., every day or 2 days).
- **Lawn Mode (V2):** Preset start time (e.g., 6:00 AM), duration (e.g., 5 or 29 minutes), and frequency (e.g., every 2 or 3 days).

3 Auto Watering Plans:

Program your own water plan freely.



This image illustrates the three available automatic watering plans: Custom Mode, Garden Bed Mode, and Lawn Mode.

2. Manual Watering

To water manually without affecting your programmed schedule, turn the dial to 'ON'. Press and hold the 'MANUAL' button. Use the '+' and '-' buttons to set the desired manual watering duration. Press 'OK' to start. The timer will automatically revert to its programmed schedule after the manual cycle completes.

Manual Watering: No Resets Needed — Your Schedule Stays.



The timer supports manual watering without disrupting programmed schedules. Simply activate the manual mode to water for a desired duration (1 minute to 8 hours), and your automatic schedule will resume afterward.

3. Rain Delay Function

To pause your watering schedule due to rain, turn the dial to 'ON'. Press the 'DELAY' button. Use the '+' and '-' buttons to select a delay period of 24, 48, or 72 hours. Press 'OK' to confirm. The timer will automatically resume its schedule after the delay period ends.

Delay watering During Rainy Days



Utilize the rain delay function to pause watering for 24, 48, or 72 hours, conserving water and preventing overwatering during rainy periods.

MAINTENANCE

1. Battery Replacement

When the low power alert appears on the LCD display, replace the AAA batteries promptly to ensure continuous operation and prevent data loss. Always use fresh batteries.

2. Cleaning the Inlet Filter

Periodically check and clean the mesh filter located in the brass inlet to prevent debris from clogging the timer and affecting water flow. Remove the timer from the faucet, carefully extract the filter, rinse it under running water, and reinsert it.

3. Winterization

Before the first frost, disconnect the timer from the faucet and hoses. Drain any remaining water from the unit. Store the timer indoors in a dry, protected area to prevent damage from freezing temperatures.

TROUBLESHOOTING

- **No Water Flow:**
 - Check if the faucet is fully open.
 - Ensure batteries are installed correctly and have sufficient charge.
 - Clean the inlet filter for any blockages.
 - Verify that the program is set correctly and the timer is in 'ON' mode.
- **Leaks from Connections:**
 - Tighten all connections to the faucet and hoses.
 - Check for damaged washers and replace if necessary.
- **Incorrect Timing/Program Not Running:**
 - Confirm the current time and date are set accurately.
 - Review your programmed schedules for start times, durations, and frequencies.
 - Ensure the rain delay function is not active if you intend for the program to run.
- **Display Not Working:**
 - Replace the batteries.
 - Ensure the battery compartment is securely closed.

SPECIFICATIONS

Feature	Detail
Brand	Vego
Model Number	VWCT201
Zones	2 Independent Zones
Material	Brass (Inlet), ABS/PA (Body)
Waterproof Rating	IP54
Product Dimensions	6"D x 2.7"W x 5"H
Item Weight	13.76 ounces
Power Source	2 x AAA Batteries (not included)
Programming Options	7-Day Custom, 3 Smart Modes (V1/V2), Rain Delay, Manual Watering

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Vego website. Keep your purchase receipt for warranty claims.

