Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Cosmic Byte /
- > Cosmic Byte Nexus Wireless Controller for PC Instruction Manual

Cosmic Byte Nexus

Cosmic Byte Nexus Wireless Controller for PC - Instruction Manual

Model: Nexus

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Cosmic Byte Nexus Wireless Controller. Please read this manual carefully before using the product to ensure optimal performance and longevity.



Image: Front view of the Cosmic Byte Nexus Wireless Controller, showcasing its ergonomic design and button layout.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Cosmic Byte Nexus Wireless Controller
- USB Wireless Receiver
- Instruction Manual (this document)

Note: 2x AAA batteries are required and are not included in the package.

SETUP GUIDE

1. Battery Installation

1. Locate the battery compartment on the back of the controller.

- 2. Open the battery cover.
- 3. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
- 4. Close the battery cover securely.



Image: Illustration showing the battery compartment and the insertion of 2x AAA batteries into the controller.

2. Connecting to PC

- 1. Insert the USB Wireless Receiver into an available USB port on your PC.
- 2. The PC will automatically detect and install the necessary drivers. This process may take a few moments.
- 3. Once the drivers are installed, the controller is ready for use. No additional software is typically required for Windows PCs.



Image: The compact USB wireless receiver, ready to be plugged into a PC.

3. Powering On/Off

- To power on the controller, ensure batteries are installed and slide the ON/OFF switch located on the top edge of the controller to the "ON" position.
- To power off the controller, slide the ON/OFF switch to the "OFF" position.



Image: Close-up view of the controller's top edge, highlighting the ON/OFF switch for easy power management.

OPERATING INSTRUCTIONS

Wireless Connectivity

The Cosmic Byte Nexus controller utilizes 2.4GHz wireless technology, providing a stable connection with a range of up to 8 meters from the USB receiver. Ensure no significant obstructions are between the controller and the receiver for optimal performance.



Image: Visual representation of the controller's wireless range, indicating connectivity up to 8 meters.

Controller Layout and Functions

The controller features a standard gamepad layout with responsive buttons and sensitive analog triggers for precise control.

- Directional Pad (D-Pad): For directional input.
- Left/Right Analog Sticks: For 360-degree movement and camera control.
- Action Buttons (A, B, X, Y): For in-game actions.
- Shoulder Buttons (L1, R1) & Triggers (L2, R2): For additional in-game functions. The triggers are designed for sensitive input.
- **SELECT/BACK Button:** Typically used for menu navigation or specific game functions.
- START Button: Typically used for pausing games or accessing menus.
- **MODE Button:** May switch between different input modes (e.g., X-Input/D-Input) if supported by the controller.



Image: Detailed view of the controller's front, highlighting the various buttons, D-pad, and analog sticks.

Dual Vibration Motors

The controller is equipped with dual vibration motors that provide immersive feedback, enhancing your gaming experience by reacting to in-game events such as explosions, crashes, or impacts.



Image: Controller with visual cues indicating the presence and function of dual vibration motors.

X-Input and D-Input Support

The Cosmic Byte Nexus controller supports both X-Input and D-Input modes, ensuring broad compatibility with a wide range of PC games. X-Input is the standard for modern PC games, while D-Input provides compatibility with older titles.



Image: Controller with text indicating support for X-Input and D-Input for seamless compatibility.

MAINTENANCE

Battery Replacement

When the controller's performance degrades or it fails to power on, it is time to replace the AAA batteries. Follow the battery installation steps outlined in the "Setup Guide" section.

Tip: Consider using rechargeable AAA batteries for an eco-friendly and cost-effective solution.



Image: Controller with an illustration of AAA batteries, emphasizing long-lasting performance.

Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not power on.	Dead or incorrectly installed batteries.	Replace batteries with fresh AAA batteries, ensuring correct polarity. Check the ON/OFF switch is in the "ON" position.
Controller not connecting to PC.	USB receiver not properly inserted or driver issue.	Ensure the USB receiver is fully inserted into a working USB port. Try a different USB port. Restart your PC.
Input lag or dropped connection.	Interference or distance from receiver.	Reduce distance between controller and receiver. Remove any large metallic objects or other wireless devices that may cause interference. Ensure batteries are not low.
Vibration not working.	Game does not support vibration or feature is disabled.	Check in-game settings to ensure vibration feedback is enabled. Verify the game supports controller vibration.
Buttons or analog sticks unresponsive/inaccurate (e.g., "stick drift").	Wear and tear, or manufacturing defect.	Ensure the controller is clean. If issues persist, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Cosmic Byte
Model Name	Nexus
Connectivity Technology	Wireless (2.4GHz)
Compatible Devices	PC (Windows)
Controller Type	Gamepad
Power Source	2 x AAA Batteries (not included)
Item Weight	100 g
Product Dimensions (LxWxH)	12 x 8 x 4 cm
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official Cosmic Byte website. Keep your purchase receipt as proof of purchase.

Manufacturer/Importer: Cosmic Byte, Prakash Warehousing, S. No.163, Hissa No 1-2-3-4-5A-5B/2/1, Phursungi, Pune 412308, Maharashtra, India

© 2025 Cosmic Byte. All rights reserved.

Related Documents - Nexus



Nexus Bendz Probe Edition User Manual

User manual for the Nexus Bendz Probe Edition, detailing its features, usage, charging, cleaning, storage, and safety precautions. Includes information on vibration modes and tips for use.



Nexus Duo Plug User Manual: Features, Operation, and Care

Comprehensive user manual for the Nexus Duo Plug, a remote-controlled vibrating anal plug. Learn about charging, operation modes, cleaning, storage, and safety guidelines.



Nexus Ride User Manual: Features, Operation, and Care

Explore the Nexus Ride personal massager with this comprehensive user manual. Learn about its features, charging, modes, usage tips, cleaning, and safety guidelines for an optimal experience.



Nexus 7 (1st Generation) Battery Replacement Guide

Step-by-step instructions for replacing the battery in your Nexus 7 (1st Generation) tablet. Learn how to safely open the device and swap out the old battery.



Nexus NX1000 Handheld VHF Radio User Manual

Comprehensive user manual for the Nexus NX1000 Handheld VHF Radio, covering installation, operation, features, specifications, troubleshooting, and warranty information. This guide provides essential details for safe and effective use of the marine VHF transceiver.



Nexus Anal Douche Set User Manual | Instructions and Tips

Official user manual for the Nexus Anal Douche Set. Learn how to use, clean, and maintain your anal douche for optimal hygiene and comfort. Includes safety tips and product features.

Documents - Cosmic Byte - Nexus

no relevant documents