



[Manuals.plus](#) /

> [Juboos](#) /

> Juboos Kids Digital Sports Watch Model 8206B User Manual

Juboos 8206B

Juboos Kids Digital Sports Watch Model 8206B User Manual

Comprehensive guide for your Juboos Kids Digital Sports Watch, featuring 7-color LED light, waterproof design, alarm, and stopwatch functions.

INTRODUCTION

Thank you for choosing the Juboos Kids Digital Sports Watch Model 8206B. This manual provides detailed instructions for setting up, operating, and maintaining your watch to ensure optimal performance and longevity. Please read this manual carefully before use.



Image: The Juboos Kids Digital Sports Watch in Navy Blue, highlighting its digital display and the range of 7 LED backlight colors

available.

KEY FEATURES

- **Multifunctional Display:** Time, week, calendar, alarm clock, timer, 12/24H format, hourly chime.
- **7-Color LED Backlight:** Long press the LIGHT button for 3 seconds to switch between dark blue, green, red, yellow, light blue, purple, and white monochrome LED lights, and a color flash mode.
- **3ATM Water Resistance:** Suitable for daily use like handwashing and rain. Not recommended for bathing or swimming. Avoid pressing buttons underwater.
- **Durable Materials:** Resin strap, acrylic mirror, stainless steel clasp and back cover.
- **Japanese Movement & Battery:** Ensures reliable timekeeping.
- **Ideal for Ages 5-18:** Designed for boys, girls, toddlers, and youth.



Kids digital watch **Multi-function**

 LED Light	 30M Waterproof	 Alarm clock	 Stopwatch
 Calender	 12/24H	 Hourly Chime	 Anti-Shock

Image: Visual representation of the watch's multi-functional capabilities, including LED light, 30M water resistance, alarm, stopwatch, calendar, 12/24H display, hourly chime, and anti-shock design.

SETUP GUIDE

Follow these steps to set up your Juboos Digital Sports Watch.

Button Functions:

- **LIGHT (L)**: Activates backlight.
- **MODE (M)**: Cycles through display modes (Time, Alarm, Stopwatch).
- **START (S)**: Adjusts settings, starts/stops stopwatch.
- **RESET (R)**: Shifts selection during setting, resets stopwatch.

1. Setting Time:

1. Press the **MODE (M)** button 3 times to enter time setting mode. The minutes will flash.
2. Press the **RESET (R)** button to select minutes.
3. Press the **START (S)** button to adjust the minute value.
4. Press the **RESET (R)** button to select hours.
5. Press the **START (S)** button to adjust the hour value.
6. Press the **MODE (M)** button once to return to time display mode.

2. Setting Date:

1. Press the **MODE (M)** button 3 times to enter time setting mode.
2. Press the **RESET (R)** button 3 times. The day will flash.
3. Press the **START (S)** button to set the day.
4. Press the **RESET (R)** button 1 time. The month will flash.
5. Press the **START (S)** button to set the month.
6. Press the **MODE (M)** button once to return to time display mode.

3. Setting Week:

1. Press the **MODE (M)** button 3 times to enter time setting mode.
2. Press the **RESET (R)** button 5 times. The week will flash.
3. Press the **START (S)** button to set the week (Monday-MO, Tuesday-TU, Wednesday-WE, Thursday-TH, Friday-FR, Saturday-SA, Sunday-SU).
4. Press the **MODE (M)** button once to return to time display mode.

4. Setting Alarm:

1. Press the **MODE (M)** button 2 times to enter alarm setting mode. The hour will flash.
2. Press the **START (S)** button to set the alarm hour.
3. Press the **RESET (R)** button 1 time. The minutes will flash.
4. Press the **START (S)** button to set the alarm minute.
5. Press the **MODE (M)** button once to return to time display mode.

5. Setting 12/24 Hour Format:

1. Press the **MODE (M)** button 3 times to enter time setting mode.
2. Press the **RESET (R)** button 2 times. The hour will flash.
3. Press the **START (S)** button to cycle through 'A' (AM), 'P' (PM) for 12-hour format, or 'H' for 24-hour format.
4. Press the **MODE (M)** button once to return to time display mode.

Your browser does not support the video tag.

Video: A detailed demonstration of how to set the time, date, week, alarm, and 12/24 hour format on the Juboos Kids Digital Sports Watch.

OPERATING INSTRUCTIONS

1. Using the Stopwatch:

1. Press the **MODE (M)** button once to enter stopwatch mode.
2. Press the **START (S)** button to begin timing.
3. Press the **START (S)** button again to pause the stopwatch.
4. Press the **RESET (R)** button to reset the stopwatch to zero.
5. Press the **MODE (M)** button once to return to time display mode.

2. Turning On/Off Hourly Chime:

- To turn on the hourly chime: In time display mode, press and hold the **RESET (R)** button. Observe the day of the week letters (SMTWTFS). If they are surrounded by a box, the hourly chime is on.
- To turn off the hourly chime: In time display mode, press and hold the **RESET (R)** button. If the box surrounding the day of the week letters disappears, the hourly chime is off.

3. Activating 7-Color LED Backlight:

- Press the **LIGHT (L)** button to illuminate the display.
- Long press the **LIGHT (L)** button for 3 seconds to cycle through the 7 monochrome LED colors (dark blue, green, red, yellow, light blue, purple, white) and a color flash mode.

Press the "LIGHT" will keep the light on for 3s



LED LIGHT
BUTTON



Image: Illustration demonstrating the location of the LED Light button and how pressing it activates the 7-color backlight feature on the watch.

CARE AND MAINTENANCE

- **Water Resistance:** The watch is 3ATM water resistant, suitable for splashes, handwashing, and rain. It is **not** recommended for bathing, showering, or swimming. Do not press any buttons while the watch is submerged in

water.

- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The watch uses a nonstandard battery (included). Battery replacement should ideally be performed by a qualified technician to maintain water resistance.

30M/98FT WATER RESISTANT

 **High temperature**

Handwashing

Rainwater

Sweat

Image: Visual guide to the watch's 30M water resistance, showing it can withstand handwashing, rain, and sweat, with a caution against high temperatures.

Your browser does not support the video tag.

Video: A demonstration of the Juboos Kids Digital Sports Watch's waterproof capabilities, showing it being rinsed under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Time is incorrect.	Time not set properly.	Refer to "Setting Time" instructions in the Setup Guide.
Alarm does not sound.	Alarm not set or turned off.	Refer to "Setting Alarm" instructions in the Setup Guide. Ensure alarm is activated.
Hourly chime is not working.	Hourly chime is turned off.	Refer to "Turning On/Off Hourly Chime" instructions in the Operating Instructions.
Water inside the watch.	Buttons pressed underwater or exposed to high-pressure water.	Stop using the watch immediately and seek professional repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** 8206B
- **Brand:** Juboos
- **Dial Size:** 1.26 inches (3.2 cm)
- **Case Thickness:** 0.55 inches (1.4 cm)
- **Strap Length:** 8.86 inches (22.5 cm)
- **Watch Bandwidth:** 0.55 inches (1.4 cm)
- **Watch Weight:** 0.051 lbs (23 g)
- **Minimum Fit Wrist:** 5.31 inches (13.5 cm)
- **Maximum Fit Wrist:** 7.48 inches (19 cm)
- **Water Resistance:** 3ATM (30 meters / 98 feet)
- **Clasp Type:** Buckle
- **Battery:** 1 Nonstandard Battery (included)
- **Movement:** Japanese Imported Movement
- **Materials:** Resin strap, acrylic mirror, stainless steel clasp and back cover



Image: Detailed measurements of the watch, including dial size, case thickness, strap length, bandwidth, and overall weight, along with minimum and maximum wrist fit.

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Juboos Kids Digital Sports Watch, please contact the manufacturer or your retailer. Keep your purchase receipt for warranty claims.

Manufacturer: Juboos

Return Policy: This product is eligible for refund/replacement for 2026 days from the date of purchase. Please refer to your retailer's specific return policy for details.