

[Manuals.plus](#) /

› [ELYKEN](#) /

› ELYKEN Rolling Laundry Hamper with Wheels (Model B0F5B4GN6D) Instruction Manual

ELYKEN B0F5B4GN6D

ELYKEN Rolling Laundry Hamper with Wheels

Model: B0F5B4GN6D

Brand: ELYKEN

INTRODUCTION

Thank you for choosing the ELYKEN Rolling Laundry Hamper. This manual provides essential information for the safe assembly, operation, and maintenance of your new laundry cart. Please read these instructions thoroughly before use and retain them for future reference.



Image: The ELYKEN Rolling Laundry Hamper in a cream color, positioned in a modern laundry room next to a white washing machine. The hamper is filled with clothes, and a basket with folded towels rests on the bottom shelf.

SAFETY INFORMATION

- Ensure all parts are securely fastened before use.
- Do not exceed the maximum weight capacity of 110 lbs (50 kg).
- Keep hands and fingers clear of moving parts, especially during assembly and when operating the wheels.
- This product is intended for indoor use only.
- Keep away from open flames or excessive heat sources.
- Supervise children around the product to prevent accidents.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- Metal Frame Components
- Removable 600D Polyester Liner Bag (122L / 32 Gal capacity)
- 4 Caster Wheels (2 with locking mechanism)
- Bottom Metal Shelf
- Assembly Hardware (screws, wrench if needed)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Assembly is designed to be tool-free, with all necessary hardware included. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Wheels:** Insert the four caster wheels into the designated holes at the bottom of the main frame. Ensure the two lockable wheels are positioned on the same side for easier access.
3. **Assemble Frame:** Connect the metal frame components according to the diagrams provided. Ensure all connections are secure.
4. **Install Bottom Shelf:** Place the metal shelf onto the lower supports of the frame. It should fit snugly into place.
5. **Attach Laundry Bag:** Secure the removable 600D polyester liner bag to the top frame using the 8 metal clasp rings. Ensure all clasps are firmly attached to prevent the bag from slipping.
6. **Final Check:** Verify that all connections are tight and the hamper is stable before loading any items.



Image: An illustrative diagram detailing the step-by-step assembly process for the ELYKEN Laundry Cart, showing how the frame, wheels, and bag connect.

OPERATING INSTRUCTIONS

- **Loading Laundry:** Place dirty clothes directly into the removable liner bag. The 122L (32 Gal) capacity accommodates large loads.
- **Using the Bottom Shelf:** Utilize the sturdy bottom metal shelf for storing laundry detergents, fabric softeners, or folded clean items.
- **Mobility:** To move the hamper, unlock the two lockable wheels by flipping their levers to the "OFF" position. Push the hamper to your desired location.
- **Securing Position:** To keep the hamper stationary, engage the locks on the two wheels by flipping their levers to the "ON" position.
- **Ergonomic Design:** The hamper's height of 30.9 inches is designed to reduce bending and back strain during

loading and unloading.

Easy To Move With 4 Wheels

4 casters with 2 brakes
easily move this laundry
cart anywhere or keep it
in place



 2 Wheels with brakes



 360°Rotation

Image: A detailed view of the hamper's smooth-rolling casters, highlighting the "ON" and "OFF" positions of the wheel locking mechanism for stability.

Happy Laundry Time

30.9" Height design for transferring laundry without bending over



Image: A person standing comfortably next to the ELYKEN Laundry Hamper, demonstrating its ergonomic height that allows for laundry transfer without excessive bending.

MAINTENANCE

- **Liner Bag Cleaning:** The 600D polyester liner bag is fully removable and machine washable. Detach it from the frame using the metal clasps, wash according to fabric care instructions, and air dry.
- **Frame Cleaning:** Wipe the metal frame with a damp cloth and mild detergent as needed. Dry thoroughly to prevent rust.
- **Wheel Maintenance:** Periodically check the caster wheels for debris (lint, hair) and clean them to ensure smooth rolling.
- **Regular Inspection:** Routinely inspect all connections and hardware to ensure they remain tight and secure.



Image: A visual representation of the removable liner bag's features, including the upgraded stainless steel clasps, waterproof fabric, and an icon indicating it is machine washable.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hamper is unstable or wobbly.	Loose frame connections.	Check and tighten all screws and connections on the metal frame.
Wheels do not roll smoothly.	Debris caught in wheels; wheels are locked.	Clean any debris from the caster wheels. Ensure wheel locks are in the "OFF" position.
Liner bag slips from frame.	Clasps are not securely fastened.	Ensure all 8 metal clasp rings are firmly attached to the frame.

Problem	Possible Cause	Solution
Hamper capacity seems insufficient.	Overestimation of laundry volume.	The hamper has a 122L (32 Gal) capacity. For larger needs, consider multiple hampers or more frequent laundry cycles.

SPECIFICATIONS

Feature	Detail
Model	B0F5B4GN6D
Brand	ELYKEN
Product Dimensions (L x W x H)	27.4"L x 19.9"W x 30.9"H
Material	Metal (Frame), Polyester (Liner Bag)
Color	Cream
Capacity	122 Liters (32 Gallons)
Weight Capacity	Up to 110 lbs (50 kg)
Special Features	Removable Liner, Rolling Casters (2 lockable), 2-Tier Design

Large Capacity

Offers plenty of space for your laundry for a week



Image: A detailed diagram illustrating the key dimensions of the ELYKEN Rolling Laundry Hamper, including length, width, and height of the overall unit and its components.

© 2026 ELYKEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question