



[Manuals.plus](#) /

› [T4TREAM](#) /

› T4TREAM Farmhouse Dresser TFHC8DSC Instruction Manual

T4TREAM TFHC8DSC

T4TREAM Farmhouse Dresser TFHC8DSC Instruction Manual

Model: TFHC8DSC

1. INTRODUCTION

Thank you for purchasing the T4TREAM Farmhouse Dresser. This manual provides detailed instructions for the assembly, operation, and maintenance of your new dresser. Please read this manual thoroughly before beginning assembly and retain it for future reference.



Image 1.1: The T4TREAM Farmhouse Dresser, featuring an antique brush white finish and eight drawers, displayed in a living space with decorative items.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Anti-Tip Device:** Always install the included anti-tip hardware to secure the dresser to a wall. This prevents accidental tipping, which can cause serious injury or death, especially to children.
- **Weight Limits:** Do not exceed the weight capacity of the dresser top (100 lbs) or individual drawers (refer to specifications). Overloading can compromise stability and structural integrity.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all fasteners are securely tightened before use. Periodically check and re-tighten fasteners.
- **Children:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the dresser.
- **Placement:** Place the dresser on a level surface to ensure stability. Uneven surfaces can cause wobbling or tipping.

3. PACKAGE CONTENTS

Before assembly, verify that all components and hardware are present. If any parts are missing or damaged, please contact customer service.

Typical components include:

- Top Panel
- Side Panels (Left & Right)
- Bottom Panel
- Back Panel(s)
- Drawer Fronts, Sides, Backs, and Bottoms (for 8 drawers)
- Drawer Slides (for 8 drawers)
- Center Support Panel(s)
- Door Panel(s) (if applicable)
- Door Hinges (if applicable)
- Handles/Knobs
- Feet/Base Supports
- Hardware Pack (screws, dowels, cam locks, anti-tip kit, etc.)

Refer to the included parts list diagram in your physical package for exact identification.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to components.
2. **Identify Parts:** Lay out all components and hardware. Match them with the parts list provided in your package.
3. **Assemble the Base:** Attach the base supports or feet to the bottom panel according to the diagram.
4. **Construct the Frame:** Connect the side panels, bottom panel, and any central support panels using the provided hardware (e.g., dowels, cam locks, screws). Ensure all connections are secure.
5. **Install Drawer Slides:** Attach the cabinet-side drawer slides to the interior panels of the dresser frame. Pay attention to orientation (left/right, top/bottom).
6. **Assemble Drawers:** For each drawer, connect the front, back, and side panels. Slide the drawer bottom into the grooves. Secure the drawer-side slides to the assembled drawer box.
7. **Install Back Panel:** Secure the back panel(s) to the rear of the dresser frame using small nails or screws. Ensure the frame is square before fastening.
8. **Attach Top Panel:** Place the top panel onto the assembled frame and secure it with the appropriate hardware.
9. **Install Handles:** Attach the handles or knobs to the drawer fronts and any door panels.
10. **Insert Drawers:** Carefully slide each assembled drawer into its corresponding set of cabinet slides.
11. **Install Anti-Tip Kit:** Securely attach the anti-tip device to the back of the dresser and to a wall stud using the provided hardware. This is a critical safety step.

Farmhouse 8 Drawer Dresser

Product Weight: 124 lbs

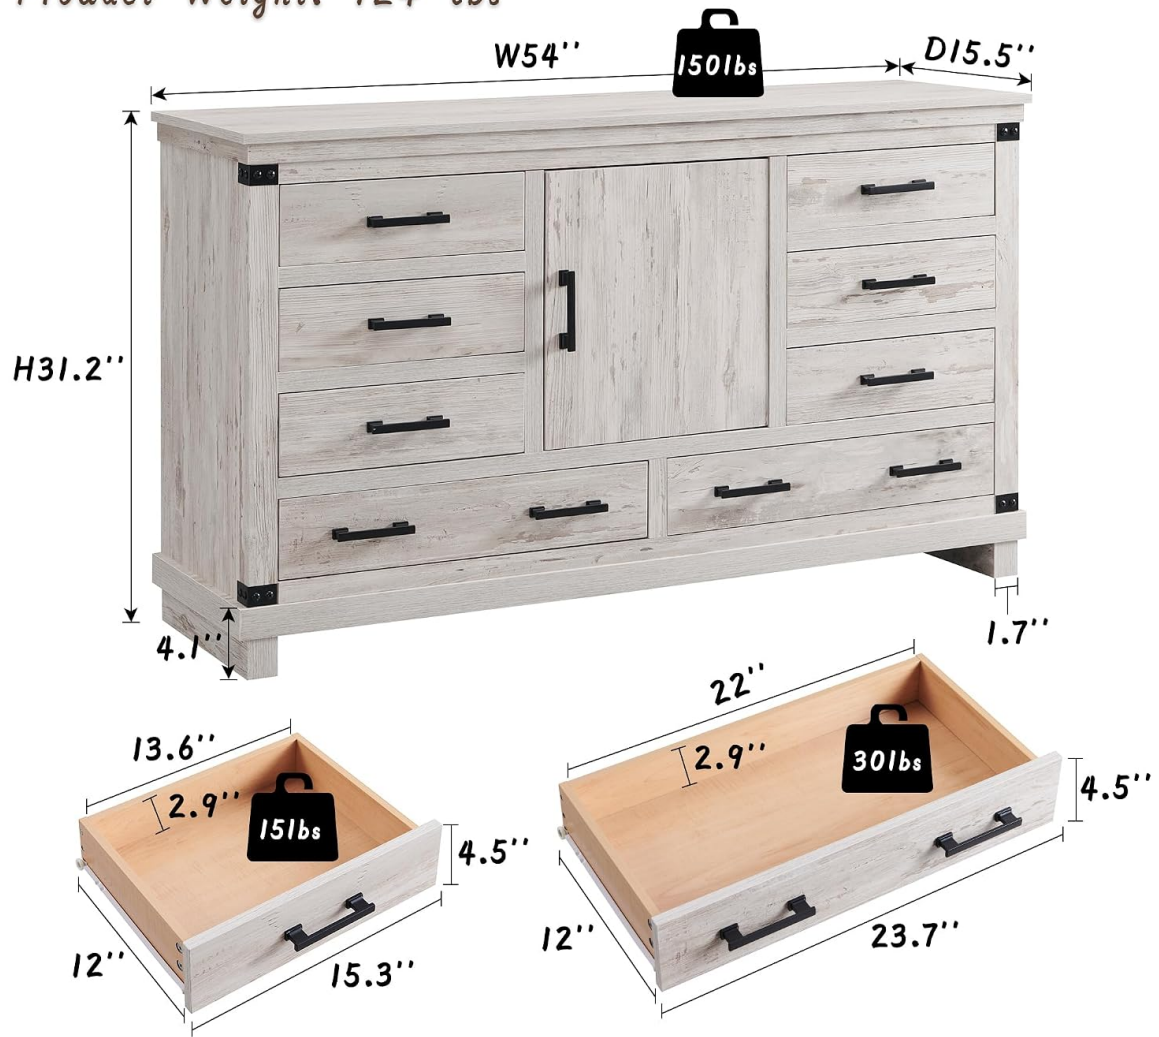


Image 4.1: Dimensional diagram of the T4TREAM Farmhouse Dresser, indicating overall dimensions (54"W x 31.2"H x 15.5"D), top weight capacity (150 lbs), and individual drawer dimensions and weight capacities (large: 23.7"W x 12"D x 4.5"H, 30 lbs; middle: 15.3"W x 12"D x 4.5"H, 15 lbs).



2-Tier Storage with Door

The shelf could adjustable and removable to cater to your different storage need

Stable Support Base

Double thicken plank base provides robust stability and large weight capacity



Image 4.2: Detailed view of the dresser's central door, revealing adjustable 2-tier storage, and a close-up of the stable 4.1-inch thick support base, highlighting its robust construction.

5. OPERATING INSTRUCTIONS

Using your T4TREAM Farmhouse Dresser is straightforward. Follow these guidelines for optimal performance and longevity:

- **Drawer Use:** Open and close drawers smoothly using the handles. Avoid forcing drawers or slamming them shut.
- **Weight Distribution:** Distribute items evenly within drawers to prevent strain on the slides and maintain balance. Do not overload drawers beyond their specified weight limits.
- **Top Surface:** The top surface can support up to 100 lbs. Avoid placing excessively heavy items or items with sharp edges directly on the surface without protection.
- **Door Access:** If your dresser includes a door, open it gently to access the internal storage. The shelf inside may be adjustable or removable to suit your storage needs.

8 Drawers Dresser



*This dresser is equipped with 2 large and 6 middle drawers, each large size of 3.7"W*12"D*4.5"H , each small size of 15.3"W*12"D*4.5"H, offering a generous storage space.*

Image 5.1: The T4TREAM dresser with multiple drawers open, illustrating its storage capacity for items such as plates, cutlery, and other household goods, demonstrating its versatility beyond just clothing storage.

6. MAINTENANCE

Proper care will help maintain the appearance and functionality of your dresser for years to come.

- **Cleaning:** Wipe the dresser surfaces with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or excessive moisture, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood finish.
- **Hardware:** Periodically check all screws, bolts, and fasteners to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- **Drawer Slides:** If drawers become stiff, a small amount of silicone lubricant can be applied to the drawer slides.
- **Sunlight & Heat:** Avoid placing the dresser in direct sunlight or near heat sources, as this can cause fading, warping, or cracking of the wood.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Dresser wobbles	Uneven floor; loose fasteners	Ensure dresser is on a level surface. Check and tighten all assembly fasteners.
Drawer sticks or doesn't close smoothly	Misaligned drawer slides; overloaded drawer; debris in slides	Remove drawer and check alignment of slides on both the drawer and cabinet. Ensure drawer is not overloaded. Clean slides of any debris. Apply silicone lubricant if needed.
Gap between drawer front and frame	Drawer not fully inserted; misaligned slides; incorrect assembly	Push drawer firmly until it clicks into place. Re-check drawer slide installation. Review assembly steps for drawer and frame construction.
Missing or damaged parts	Shipping damage; packaging error	Do not proceed with assembly. Contact T4TREAM customer service immediately for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	T4TREAM
Model Name	8 Drawers Dresser
Item Model Number	TFHC8DSC
Product Dimensions (Overall)	15.5"D x 54"W x 31.25"H
Large Drawer Dimensions	23.7"W x 12"D x 4.5"H (2 drawers)
Middle Drawer Dimensions	15.3"W x 12"D x 4.5"H (6 drawers)
Color	Antique Brush White
Room Type	Bedroom, Hallway, Living Room
Material	High-density engineered wood, FSC-certified materials
Tabletop Weight Capacity	Up to 100 lbs
Assembly Required	Yes
Product Care Instructions	Wipe with Damp Cloth

9. WARRANTY AND CUSTOMER SUPPORT

T4TREAM is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, please refer to the warranty information included with your purchase or visit the official T4TREAM website for details.

For any questions, missing parts, or assistance with assembly or product use, please contact T4TREAM customer service. Have your model number (TFHC8DSC) and purchase information ready when

contacting support.

You can often find contact information on the packaging, the T4TREAM store page on Amazon, or their official website.