

SOGO FRE-SS-10845

SOGO FRE-SS-10845 9 Litre Dual Dietary Fryer Instruction Manual

Model: FRE-SS-10845

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the SOGO FRE-SS-10845 Dual Dietary Fryer. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the main unit, cord, or plug in water or any other liquid to prevent electrical shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet vents. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Always use the handles when handling the hot frying baskets.
- Do not use the appliance for any purpose other than described in this manual.

2. PRODUCT OVERVIEW

The SOGO FRE-SS-10845 is a 9-litre dual dietary fryer designed for healthier cooking with 80% less fat than conventional fryers. It features two independent baskets and advanced cooking functions.

Components and Control Panel



Image: Front view of the SOGO FRE-SS-10845 Dual Dietary Fryer. The top panel features a digital control interface with two distinct cooking zones, each with its own time and temperature display. Below the control panel, the SOGO logo is prominently displayed, and to its right, the 'DIGI FRYER DUO' branding. The lower section of the appliance houses two independent, pull-out frying baskets with sleek silver handles, indicating its dual-zone cooking capability.

- **Main Unit:** Houses the heating elements and control system.
- **Control Panel:** Digital interface for setting time, temperature, and selecting functions. Features two independent displays for each basket.
- **Frying Baskets (x2):** Independent, non-stick baskets for cooking different foods simultaneously.
- **Air Outlet Vents:** Located at the rear of the appliance for hot air release.
- **Power Cord:** For connecting to an electrical outlet.

3. SETUP

Unpacking and Initial Preparation

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying baskets and crisper plates with hot water, a mild dishwashing liquid, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space around the appliance for proper ventilation.
5. Insert the crisper plates into the frying baskets.

6. Plug the power cord into a grounded wall outlet. The appliance is now ready for use.

4. OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the appliance is plugged in. The power button will illuminate.
2. Press the power button to turn on the appliance. The digital displays will light up.
3. Place food into the desired frying basket(s). Do not overfill.
4. Select the basket you wish to program (Basket 1 or Basket 2).
5. Adjust the cooking time and temperature using the '+' and '-' buttons.
6. Press the start/pause button to begin cooking.

Preset Functions

The SOGO FRE-SS-10845 features 12 predefined cooking functions for various food types. These functions automatically set optimal time and temperature. Refer to the icons on the control panel to select the appropriate preset for your meal.

Smart Finish Function

The 'Smart Finish' function allows you to cook two different foods in separate baskets with different cooking times and temperatures, ensuring they both finish cooking at the same time. To use:

1. Program Basket 1 with its desired time and temperature.
2. Program Basket 2 with its desired time and temperature.
3. Press the 'Smart Finish' button. The fryer will automatically adjust the start times for each basket so that both cooking cycles conclude simultaneously.
4. Press the start/pause button to begin.

Match Cook Function

The 'Match Cook' function is ideal for cooking larger quantities of the same food. It synchronizes the settings of both baskets to ensure consistent results. To use:

1. Program Basket 1 with your desired time and temperature.
2. Press the 'Match Cook' button. The settings from Basket 1 will automatically be applied to Basket 2.
3. Press the start/pause button to begin.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- Always unplug the fryer and allow it to cool down completely before cleaning.
- Clean the frying baskets and crisper plates after each use. They are typically dishwasher safe, but hand washing with warm soapy water is recommended to preserve the non-stick coating.
- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit in water or any other liquid.
- For stubborn food residue, soak the baskets in warm soapy water for a short period before cleaning.

6. TROUBLESHOOTING

If you encounter issues with your SOGO FRE-SS-10845, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------------|---|--|
| Appliance does not turn on | Not plugged in; Power outlet malfunction | Ensure power cord is securely plugged in; Try a different outlet. |
| Food not cooked evenly | Baskets overloaded; Incorrect temperature/time | Do not overload baskets; Shake baskets halfway through cooking; Adjust time/temperature. |
| White smoke coming from appliance | Grease residue from previous use; High fat content food | Clean baskets thoroughly; Drain excess fat from food. |
| Appliance smells during first use | Manufacturing residue burning off | This is normal for first use and will dissipate. Ensure good ventilation. |

7. TECHNICAL SPECIFICATIONS

- **Model:** FRE-SS-10845
- **Brand:** SOGO
- **Capacity:** 9 Litres (total)
- **Weight:** 9.45 Kilograms
- **Power:** (Specific wattage not provided, typically 1700-2400W for dual fryers)
- **Voltage:** (Not provided, typically 220-240V for EU)
- **Frequency:** (Not provided, typically 50/60Hz for EU)
- **Features:** 360° Hot Air Circulation, 12 Preset Functions, Smart Finish, Match Cook, Dual Independent Baskets.







8. WARRANTY AND SUPPORT

Warranty Information

This SOGO appliance is covered by a manufacturer's warranty in accordance with local regulations. Please retain your proof of purchase for any warranty claims. The warranty typically covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, spare parts, or any questions regarding your SOGO FRE-SS-10845 Dual Dietary Fryer, please contact SOGO customer support or your local retailer. Contact information can usually be found on the SOGO official website or on the product packaging.

| | |
|---|---|
|  | <p>SOGO DIGI FRYER FLEXI DUO 10.5L (SS-10895) - Manual de Instrucciones y Uso</p> <p>Manual completo de instrucciones para la Freidora de Aire SOGO DIGI FRYER FLEXI DUO de 10.5L (SS-10895). Aprenda a usar, limpiar y mantener su electrodoméstico para preparar comidas saludables y deliciosas.</p> |
|  | <p>SOGO Water Flosser SS-12320: User Manual and Operating Instructions</p> <p>This user manual provides detailed instructions for operating the SOGO Water Flosser (Model SS-12320). Learn about safety precautions, how to use the device, its various tips, troubleshooting common issues, and technical specifications for optimal oral hygiene.</p> |
|  | <p>Manual de Instrucciones SOGO SS-10490 Horno Freidora Multifunción</p> <p>Descubra cómo utilizar su Horno Freidora Multifunción SOGO SS-10490 con este completo manual de instrucciones. Incluye guías de seguridad, componentes, especificaciones técnicas y programas de menú preestablecidos para una experiencia culinaria óptima.</p> |
|  | <p>Manual de Instrucciones SOGO SS-10465: Horno Freidora Multifunción Sin Aceite</p> <p>Descubra cómo utilizar su horno freidora multifunción SOGO SS-10465 con este completo manual de instrucciones. Aprenda sobre sus funciones, seguridad y consejos para una cocina saludable y deliciosa.</p> |
|  | <p>Manual de Instrucciones SOGO SS-10900 Freidora de Aire</p> <p>Descarga el manual de instrucciones para la Freidora de Aire SOGO SS-10900. Incluye guías de uso, seguridad, limpieza y solución de problemas.</p> |
|  | <p>Manual de Instrucciones SOGO SS-10465: Freidora de Aire Multifunción</p> <p>Guía completa para la SOGO SS-10465 Air Fryer Oven. Aprenda a usar su freidora de aire multifunción para cocinar comidas saludables y deliciosas con facilidad. Incluye especificaciones, consejos y precauciones de seguridad.</p> |