

[Manuals.plus](#) /

> [WeurGhy](#) /

> WeurGhy X12 Pro Wireless Earbuds User Manual

WeurGhy X12 Pro

WeurGhy X12 Pro Wireless Earbuds User Manual

Model: X12 Pro

1. INTRODUCTION

Thank you for choosing the WeurGhy X12 Pro Wireless Earbuds. These earbuds feature advanced Bluetooth 5.3 technology, Hi-Fi stereo sound, ENC noise cancellation for calls, and an IPX7 waterproof rating. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Charging Case
- 2 x Bluetooth Earbuds (Left and Right)
- 3 x Ear Caps (S/M/L sizes)
- 1 x USB-C Charging Cable
- 1 x User Manual

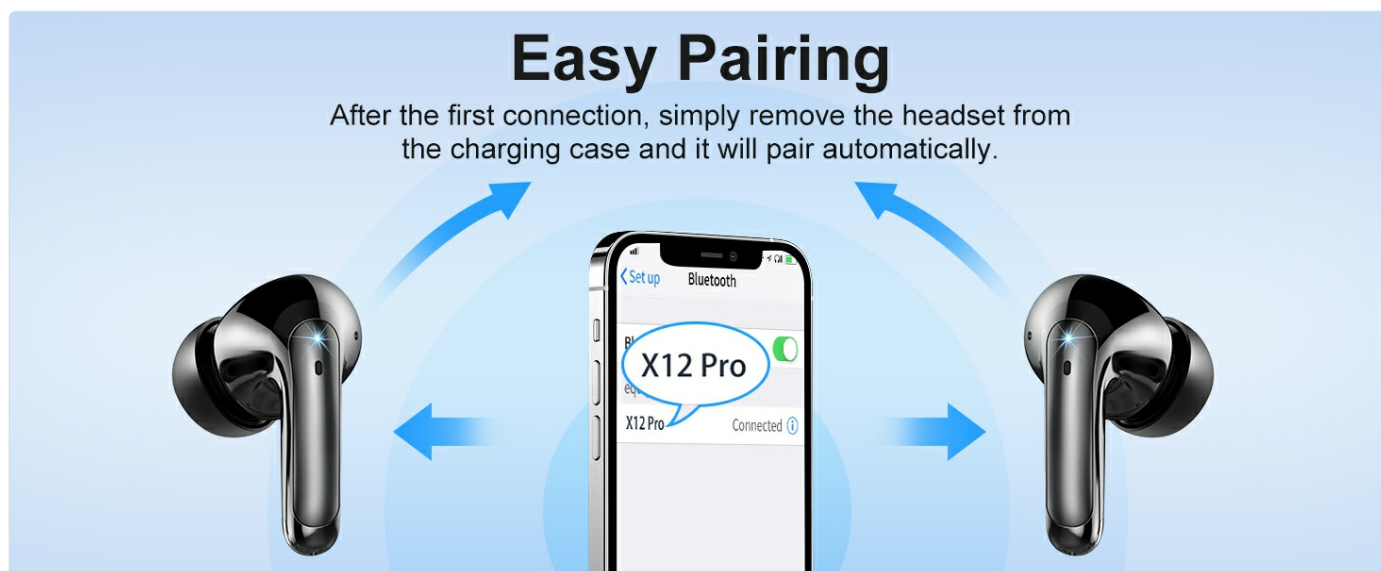 


Image: Illustration showing the WeurGhy X12 Pro earbuds, charging case, USB-C cable, and three pairs of ear tips, along with a user

3. PRODUCT OVERVIEW

The WeurGhy X12 Pro earbuds are designed for comfort and high-quality audio. Each earbud features a touch control area and is ergonomically shaped for a secure fit. The charging case includes an LED digital display to show battery levels.



Image: The WeurGhy X12 Pro wireless earbuds resting in their open charging case, which displays "100%" battery level on its LED screen.

Ergonomic design, Comfortable to wear

Ergonomic design, suitable for people of all ages to wear, without feeling discomfort during daily use or long-term exercise.



Image: Diagram illustrating the ergonomic design of the WeurGhy X12 Pro earbuds, highlighting their comfortable fit and lightweight structure.

4. SETUP AND FIRST USE

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and to a USB power source. The LED display on the case will show the charging status. A full charge takes approximately 1.5 hours.

Ergonomic Earbuds for Secure Comfortable Fit



3.9g Ultra Light



Ergonomic Design



S M L

Sizes(S M L)

Image: Visual representation of the WeurGhy X12 Pro earbuds' battery life, showing 8 hours on a single charge and up to 56 hours with the charging case, along with fast charging capability.

4.2 Pairing with a Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "X12 Pro" from the list of found devices.
5. Once connected, the earbuds will automatically pair with your device when you open the charging case for subsequent uses.

Enjoy Your Sound Music Anytime, Anywhere



Image: Illustration demonstrating the easy pairing process of the WeurGhy X12 Pro earbuds with a smartphone, showing automatic connection after initial setup.

5. OPERATING INSTRUCTIONS

5.1 Touch Controls

The WeurGhy X12 Pro earbuds feature intelligent touch controls on each earbud. The following actions can be performed:

- **Play/Pause:** Double-tap either earbud.
- **Next Track:** Triple-tap the right earbud.
- **Previous Track:** Triple-tap the left earbud.
- **Answer/End Call:** Double-tap either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant (Siri/Google Assistant):** Press and hold either earbud for 3 seconds.
- **Volume Up/Down:** Single tap the right earbud for volume up, single tap the left earbud for volume down.

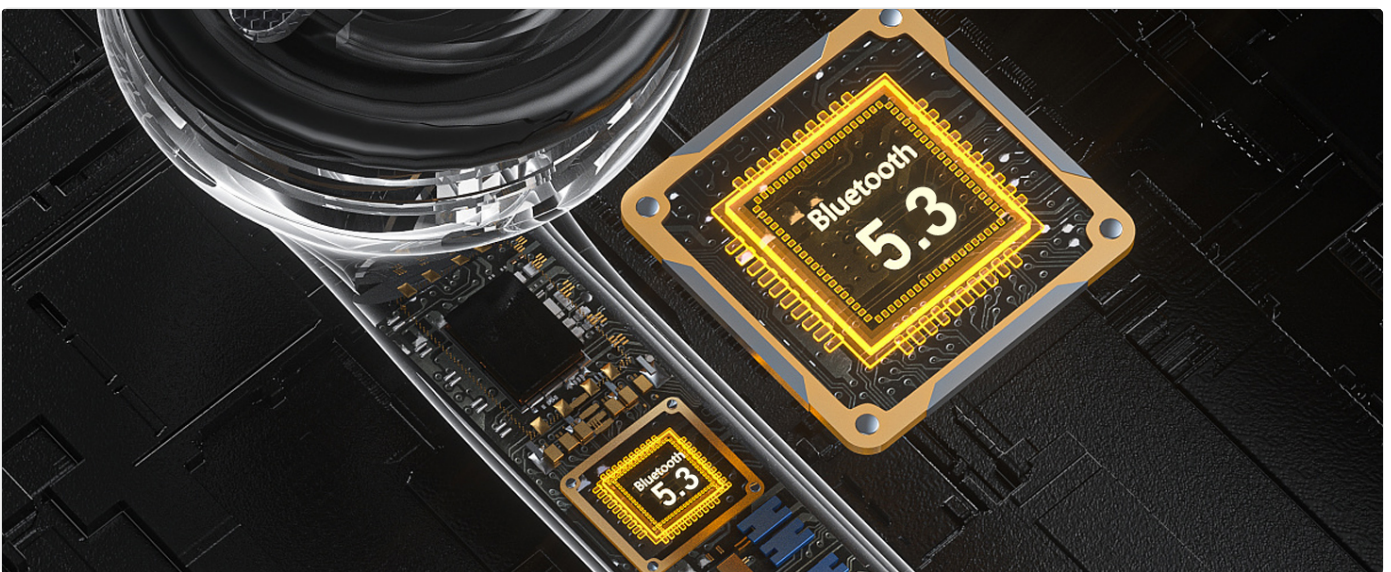 


Image: Diagram illustrating the various touch control functions for the WeurGhy X12 Pro earbuds, including play/pause, track skipping, call management, and voice assistant activation.

5.2 Wearing the Earbuds

Select the appropriate ear tip size (S, M, L) for a comfortable and secure fit. Insert the earbuds into your ears and gently

twist them until they feel snug. A proper fit enhances sound quality and noise isolation.

56Hrs Long Battery Life

Enjoy music without frequent charging. With the charging box, the battery life is up to 56 hours.

8
Hours
Single Charge

48
Hours
With Charging Case

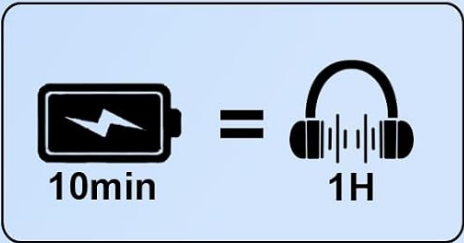 
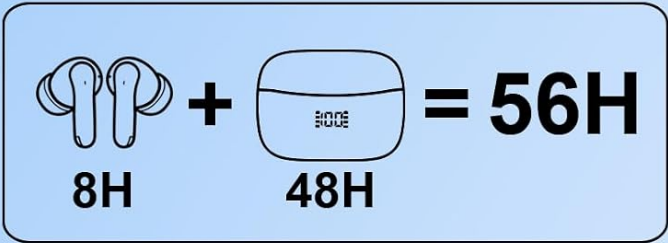 


Image: A person wearing the WeurGhy X12 Pro earbuds, demonstrating their ergonomic design and secure fit during physical activity.

6. MAINTENANCE

6.1 Cleaning

Regularly clean your earbuds and charging case to maintain optimal performance and hygiene. Use a soft, dry, lint-free cloth. For ear tips, remove them and clean with a mild soap solution, then rinse and dry thoroughly before reattaching. Do not use abrasive materials or harsh chemicals.

6.2 Water Resistance (IPX7)

The WeurGhy X12 Pro earbuds are IPX7 waterproof, meaning they can withstand splashes, sweat, and rain. They are not designed for swimming or prolonged submersion. Ensure the charging port is dry before charging to prevent damage.

IPX7 waterproof Technology

Nano-level waterproof material, waterproof, sweat-proof, dust-proof, lightweight and easy to carry.



Image: The WeurGhy X12 Pro earbuds submerged in water with bubbles, illustrating their IPX7 waterproof rating.

6.3 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage, and to keep them charged.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Earbuds not pairing/connecting	• Low battery • Bluetooth off on device • Earbuds not in pairing mode • Previous connection interference	• Charge earbuds and case fully. • Ensure Bluetooth is enabled on your device. • Place earbuds in case, close, then open to re-enter pairing mode. • Forget "X12 Pro" from your device's Bluetooth list and re-pair.
No sound or poor sound quality	• Volume too low • Improper fit • Earbuds dirty • Out of Bluetooth range	• Adjust volume on both earbuds and connected device. • Ensure ear tips are correctly sized and earbuds are securely fitted. • Clean ear tips and earbud grilles. • Move closer to your connected device.
Earbuds not charging	• Charging cable/adaptor faulty • Charging contacts dirty • Charging port wet	• Try a different USB-C cable and power adapter. • Clean the charging contacts on earbuds and case with a dry cotton swab. • Ensure the charging port is completely dry before connecting the cable.
Microphone issues during calls	• Microphone blocked • Environmental noise	• Ensure nothing is covering the microphone openings. • Move to a quieter environment.

8. SPECIFICATIONS

Feature	Detail
Model Name	X12 Pro
Brand	WeurGhy
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Version	5.3
Ear Placement	In Ear
Control Type	Touch Control
Water Resistance Level	IPX7 Waterproof
Single Charge Playtime	Up to 8 Hours
Total Playtime (with Charging Case)	Up to 56 Hours
Charging Time	Approx. 1.5 Hours (Earbuds & Case)
Audio Driver Type	Dynamic Driver (13.2mm graphene)
Noise Control	ENC Noise Cancellation (for calls)

Feature	Detail
Compatible Devices	iOS, Android, PCs, TV, etc.
Item Weight	3.2 ounces
Product Dimensions	1.77 x 0.24 x 0.98 inches

9. WARRANTY AND SUPPORT

WeurGhy provides a standard manufacturer's warranty for this product. For detailed warranty information, technical support, or any inquiries, please refer to the contact information provided on the product packaging or visit the official WeurGhy website. Please retain your proof of purchase for warranty claims.

© 2025 WeurGhy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F5BJRPLZ>

More documents and user manuals: <https://manuals.plus/>