

[Manuals.plus](#) /

› [Merax](#) /

› Merax Luggage Sets 5 Piece Instruction Manual - Model 01

Merax 01

Merax Luggage Sets 5 Piece Instruction Manual

Model: 01

PRODUCT OVERVIEW

This Merax 5-piece luggage set includes 20", 24", and 28" hardshell suitcases, along with a matching luggage bag and toiletry bag. Designed for durability and convenience, the set features spinner wheels, a telescopic handle, and a TSA-approved lock. The 20-inch carry-on offers a front-open compartment, a built-in USB port, and a cup holder for enhanced travel functionality. The 24-inch and 28-inch suitcases are expandable for additional packing space.



Image: The complete Merax 5-piece luggage set, featuring three hardshell suitcases, a duffel bag, and a toiletry bag.

SETUP INSTRUCTIONS

1. Unpacking

Carefully remove all items from the packaging. Inspect each piece of luggage for any signs of damage. Ensure all components, including the 20", 24", and 28" suitcases, the luggage bag, and the toiletry bag, are present.

2. Setting the TSA Combination Lock

Your Merax luggage is equipped with a TSA-approved 3-digit combination lock. The initial password is set to 0-0-0.

1. Locate the reset button on the lock. For 24/28 inch suitcases, this is a small button. For the 20-inch suitcase, the reset button is integrated into the switch.
2. With the lock set to 0-0-0, use a pen or a pointed object to press and hold the reset button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.

4. Release the reset button. Your new password is now set. Remember your combination.

TSA COMBINATION LOCK



24/28 INCH



20 INCH

The 20-inch security lock buckle button, when pushed towards the zipper side will open the suitcase zipper, and when pushed outward will open the front compartment automatically.

Image: Visual guide for setting the 3-digit TSA combination lock on both 20-inch and larger suitcases.

Your browser does not support the video tag.

Video: Instructions on how to set the password for the TSA lock on Merax luggage. This video demonstrates the process for both the 20-inch and larger suitcases.

OPERATING INSTRUCTIONS

1. Telescopic Handle Operation

The luggage features a sturdy, adjustable telescopic handle. Press the button on the handle grip and pull up to extend it. Release the button to lock it at your desired height. Push the button and push down to retract the handle completely.

3-Step Push-Button Telescoping Handle

Smooth and Easy to Adjustable

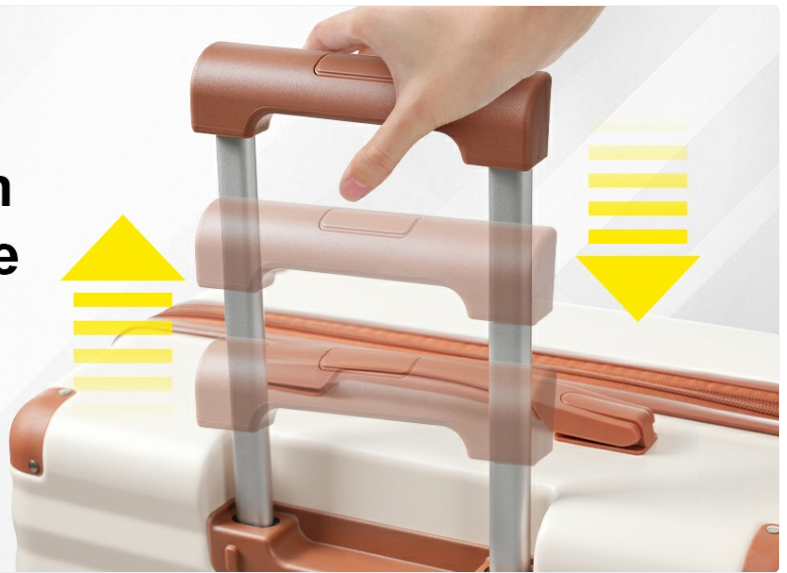


Image: Illustration of the 3-step push-button telescoping handle, demonstrating its smooth and easy adjustment.

2. Spinner Wheels

Each suitcase is equipped with durable 360° spinner wheels for effortless maneuverability. These wheels allow the luggage to glide smoothly in any direction, reducing strain during travel.



Cup Holder (20inch)



Sturdy & Adjustable Ergonomic Telescoping Handle



Durable 360° Spinner Wheels



USB Port (20inch)

Image: A detailed view of the durable 360° spinner wheels, highlighting their design for easy movement.

3. 20-inch Carry-On Specific Features

- **Front Open Compartment:** The 20-inch carry-on features a convenient front-open compartment, ideal for quick access to laptops, tablets, or travel documents. To open, push the security lock buckle outwards.
- **Built-in USB Port:** A built-in USB port and data cable are included for charging your devices on the go. Connect your power bank (not included) to the internal cable, then use the external USB port to charge your phone or other gadgets.
- **Cup Holder:** A retractable cup holder is integrated into the side of the 20-inch suitcase, allowing you to securely hold a beverage while navigating airports or other travel environments.



Image: An exploded view of the 20-inch carry-on's interior, showing the large pocket, passport/power bank pocket, hidden pocket, zipper pocket, and built-in data cable.

Your browser does not support the video tag.

Video: Demonstration of the front-open compartment and its features on the Merax 20-inch carry-on luggage.

4. Expandable Space (24" & 28" Suitcases)


The 24-inch and 28-inch suitcases are designed with an expandable feature, providing up to 20% more packing capacity. To expand, simply unzip the secondary zipper located around the perimeter of the suitcase. This is ideal for longer trips or when you need extra room for souvenirs.

Expandable Luggage Provides More Space

Before



After

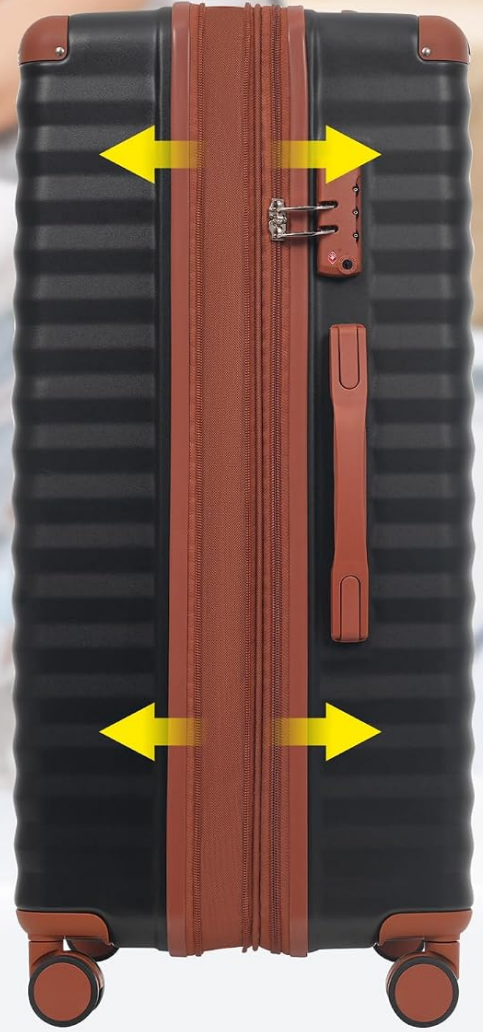

Expands
20%



Only 24" & 28"
can expand.

Image: A visual comparison of the suitcase before and after expansion, showing the additional 20% capacity.

5. Using the Luggage Bag and Toiletry Bag

The included luggage bag and toiletry bag are designed for organizing personal items. The luggage bag features a rear pocket that slides over the suitcase handle, allowing for secure attachment and easier transport.

**20
INCH**



21.8"

CARRY ON

include wheels
13.4(L)×9.3(W)×21.8(H)
Weight: 7.37lbs
Travel: 1-4 days

**24
INCH**



25.2"

CHECKED

include wheels
15.4(L)×10.4(W)×25.2(H)
Weight: 7.35lbs
Travel: 7-10 days

**28
INCH**



28.9"

CHECKED

include wheels
18.5(L)×11.6(W)×28.9(H)
Weight: 9.46lbs
Travel: 7-10 days

Size Reference: inch

Duffel Bag

Longest length: 23 Width: 8.3
Shortest length: 15.7 Height: 12.2
Expansion part height: 3.9



Toiletry Bag

10(L)×5.5(W)×4(H)

Image: Comprehensive size reference for the 20-inch, 24-inch, and 28-inch suitcases, along with the duffel bag and toiletry bag dimensions.

MAINTENANCE

- **Cleaning Hardshell Exterior:** Wipe the ABS hardshell surface with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents that could damage the finish.
- **Cleaning Fabric Bags:** For the luggage bag and toiletry bag, spot clean with a damp cloth and mild detergent. Air dry thoroughly. Do not machine wash.
- **Wheel Care:** Periodically check the spinner wheels for debris. Remove any hair or lint that may hinder smooth rolling.
- **Zipper Maintenance:** Keep zippers clean and free of obstructions. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.
- **Storage:** Store luggage in a cool, dry place away from direct sunlight when not in use. For compact storage, smaller suitcases can be nested inside larger ones.

TROUBLESHOOTING

Problem: Cannot open the TSA combination lock.

Solution: Ensure the dials are set to the correct 3-digit combination. If you forgot your combination, follow the "Setting the TSA Combination Lock" instructions to reset it. The initial factory setting is 0-0-0.

Problem: Telescopic handle is stuck or difficult to extend/retract.

Solution: Ensure the button on the handle grip is fully pressed. Check for any obstructions in the handle mechanism. Avoid forcing the handle; gently wiggle it while pressing the button.

Problem: Spinner wheels are not rolling smoothly.

Solution: Inspect the wheels for any accumulated dirt, hair, or debris. Carefully remove any obstructions. If the issue persists, the wheel mechanism might require professional inspection.

Problem: USB charging port is not working.

Solution: Ensure your power bank (not included) is fully charged and correctly connected to the internal data cable. Verify that your device's charging cable is securely plugged into the external USB port.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Merax
Model Number	01
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Wheel Type	Spinner (360°)
Handle Type	Telescopic, Top/Side Handle
Special Features	Expandable (24" & 28"), Lightweight, USB Port (20"), Cup Holder (20"), Front Open (20")
Included Components	20" suitcase, 24" suitcase, 28" suitcase, matching luggage bag, toiletry bag
Color	Black and Brown
Pattern	Striped
Item Weight (Total Set)	26.2 Pounds
UPC	198573009220
ASIN	B0F5BJVXGZ

Dimensions (L x W x H, including wheels)

- **20" Carry-On:** 13.4" x 9.3" x 21.8" (Weight: 7.37 lbs, Travel: 1-4 days)
- **24" Checked:** 15.4" x 10.4" x 25.2" (Weight: 7.35 lbs, Travel: 7-10 days)
- **28" Checked:** 18.5" x 11.6" x 28.9" (Weight: 9.46 lbs, Travel: 7-10 days)
- **Duffel Bag:** Longest length: 23", Shortest length: 15.7", Width: 8.3", Height: 12.2", Expansion part height: 3.9"
- **Toiletry Bag:** 10"(L) x 5.5"(W) x 4"(H)

20
INCH

CARRY ON

include wheels

13.4(L)×9.3(W)×21.8(H)

Weight:7.37lbs

Travel:1-4days

24
INCH

CHECKED

include wheels

15.4(L)×10.4(W)×25.2(H)

Weight:7.35lbs

Travel:7-10days

28
INCH

CHECKED

include wheels

18.5(L)×11.6(W)×28.9(H)

Weight:9.46lbs

Travel:7-10days

Size Reference:inch

Duffel Bag

Longest length:23

Width:8.3

Shortest length:15.7

Height:12.2

Expansion part height:3.9

Toiletry Bag

10(L)×5.5(W)×4(H)

Image: Comprehensive size reference for the 20-inch, 24-inch, and 28-inch suitcases, along with the duffel bag and toiletry bag dimensions.

WARRANTY INFORMATION

Merax products are designed for durability and performance. For specific warranty details regarding your luggage set, please refer to the warranty card included with your purchase or visit the official Merax website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions about your Merax luggage set, please contact Merax customer support. Contact information can typically be found on the product packaging, the official Merax website, or through your retailer's customer service portal.

For online purchases, you may also refer to the seller's contact information on the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question