

Generic Handheld Cordless Vacuum Cleaner

User Manual: Handheld Cordless Electric Vacuum Cleaner

Model: Handheld Cordless Vacuum Cleaner

Brand: Generic

INTRODUCTION

Thank you for purchasing the Generic Handheld Cordless Electric Vacuum Cleaner. This manual provides important information on the safe operation, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before first use and keep it for future reference.

This compact and powerful vacuum cleaner is designed for versatile cleaning tasks, offering strong suction and multiple filtering for efficient dirt and dust removal in various environments, including your home, car, and office.

SAFETY INSTRUCTIONS

- Always ensure the vacuum cleaner is fully charged before use for optimal performance.
- Do not use the vacuum cleaner to pick up liquids, flammable or combustible materials, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner without the dust cup and filter properly installed.
- Store the vacuum cleaner in a dry place when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Handheld Cordless Electric Vacuum Cleaner Unit
- Wide Suction Head
- Long Suction Head (Crevice Tool)
- Brush Suction Head
- USB Charging Cable
- User Manual



Figure 1: Main unit of the Handheld Cordless Electric Vacuum Cleaner. This image shows the compact design of the vacuum cleaner, featuring the main body, dustbin, and a brush attachment.

Handheld Vacuum Cleaner



Figure 2: The handheld vacuum cleaner shown with its included accessories: a long crevice tool and a brush attachment. These attachments enhance the versatility of the vacuum for different cleaning needs.

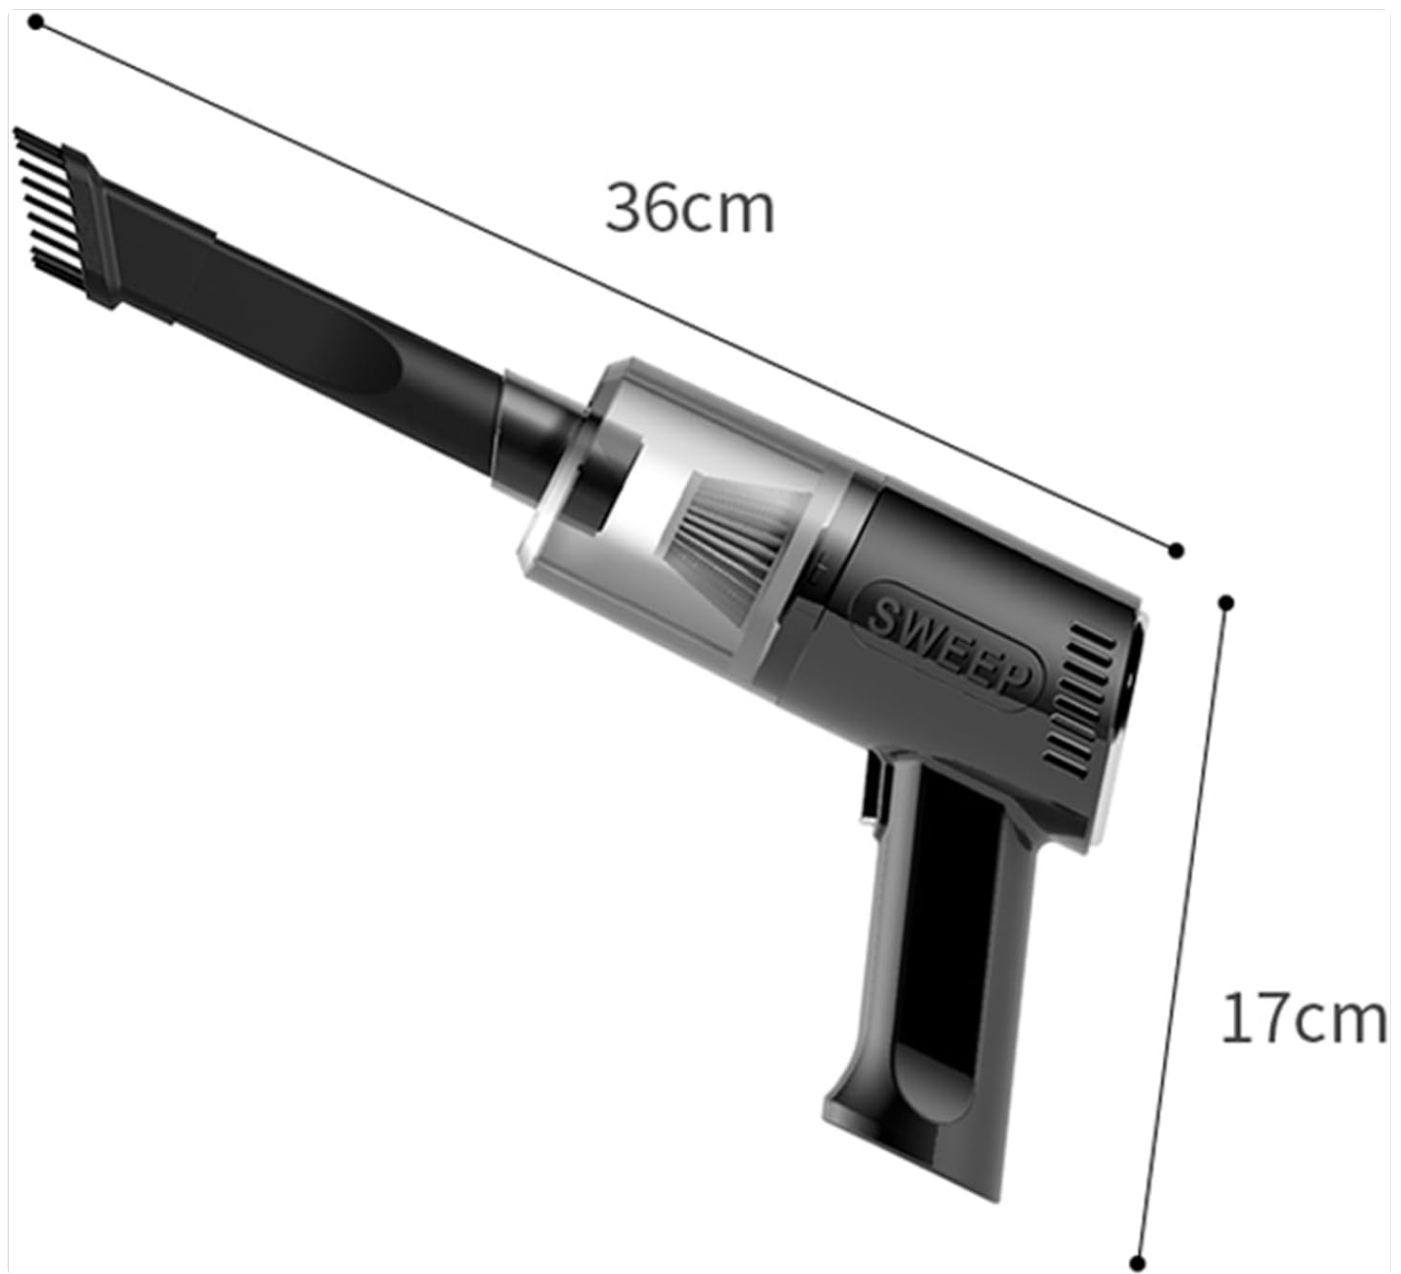


Figure 3: Dimensions of the vacuum cleaner. The unit measures approximately 36cm in length and 17cm in height, highlighting its compact and portable size.



Figure 4: Illustration emphasizing the lightweight design of the vacuum cleaner, weighing approximately 0.3kg. This feature contributes to comfortable extended use without fatigue.


SETUP

1. Charging the Battery

Before first use, fully charge the vacuum cleaner. Connect the provided USB charging cable to the charging port on the vacuum cleaner and plug the other end into a compatible USB power adapter (not included) or a USB port. The charging indicator light will show the charging status.

LONG ENDURANCE

30 minutes under fully charged

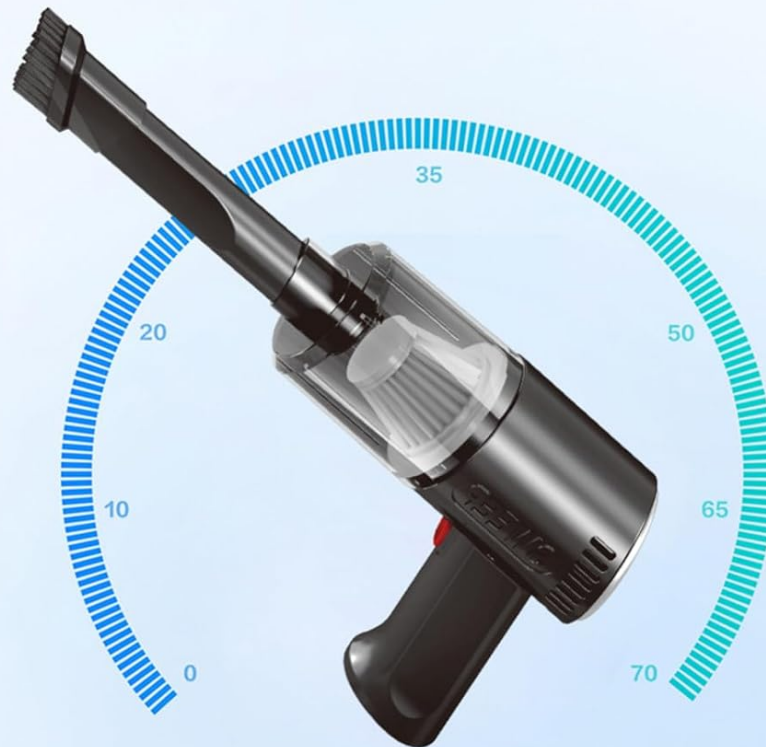

1800

1800mAh
lithium battery

30+

30 minutes
working time

4.0

4 hours
charge time

Figure 5: Battery specifications and endurance. The vacuum features an 1800mAh lithium battery, providing over 30 minutes of working time on a full charge, which takes approximately 4 hours.

2. Attaching Suction Heads

Select the appropriate suction head for your cleaning task and firmly attach it to the nozzle of the vacuum cleaner. Ensure it clicks securely into place.

REPLACEABLE SUCTION HEADS



Figure 6: Overview of the replaceable suction heads. This includes a wide suction head for flat surfaces, a long suction head (crevice tool) for narrow corners, and a brush suction head for uneven surfaces.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off.

2. Cleaning Different Surfaces

- **For Flat Surfaces (e.g., car seats, large areas):** Use the *Wide Suction Head*.
- **For Narrow Gaps and Corners (e.g., car crevices, keyboard gaps):** Use the *Long Suction Head* (Crevice Tool).
- **For Uneven Surfaces (e.g., carpets, upholstery, vents):** Use the *Brush Suction Head*.



Figure 7: Examples of multi-use applications for the vacuum cleaner. It effectively cleans gaps in cars, keyboards and desktops, and sofas and carpets.

3. Suction Power

The vacuum cleaner features a powerful 9000Pa suction and a 120W high-speed motor, designed to efficiently pick up dust, debris, and pet hair.



Figure 8: Visual representation of the vacuum cleaner's strong suction power, rated at 9000Pa with a 120W motor, indicating its capability for effective cleaning.

MAINTENANCE

1. Emptying the Dust Cup

To maintain optimal suction, empty the dust cup regularly, especially when it appears full. Twist or unlatch the dust cup from the main unit and dispose of the collected debris. Reattach the dust cup securely.

2. Cleaning the Filter

The multi-filtering system includes a washable filter. Remove the filter from the dust cup. Tap off loose dirt, then rinse the filter under running water. Ensure the filter is completely dry before reinserting it into the dust cup and reattaching the dust cup to the vacuum cleaner. Do not use the vacuum cleaner with a wet filter.

3. General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the charging port is free from dust and debris.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is low or depleted.	Charge the vacuum cleaner fully.
Weak suction.	Dust cup is full. Filter is clogged. Suction head is blocked.	Empty the dust cup. Clean or replace the filter. Check and clear any blockages in the suction head or nozzle.
Vacuum cleaner stops during operation.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum cleaner and let it cool down for at least 30 minutes before resuming use.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Form Factor	Handheld
Color	Black
Suction Power	9000 Pa
Motor Power	120 W
Battery Capacity	1800 mAh Lithium Battery
Working Time	30+ minutes (fully charged)
Charge Time	Approx. 4 hours
Weight	0.3 kg

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or contact the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.



