

GTS GTS-5117

GTS Professional Rechargeable Hair Trimmer GTS-5117 User Manual

Model: **GTS-5117** | Brand: **GTS**

1. INTRODUCTION

Thank you for choosing the GTS Professional Rechargeable Hair Trimmer GTS-5117. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair trimmer. Please read these instructions carefully before first use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the trimmer in water or use it near water (e.g., bathtub, shower, sink).
- Keep the appliance dry.
- Do not use the trimmer if it has a damaged cord or plug, or if it is not working properly.
- Only use the charging adapter provided with the trimmer.
- Keep the trimmer out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Unplug the trimmer before cleaning or performing any maintenance.
- Do not attempt to repair or disassemble the trimmer yourself. Contact qualified service personnel for repairs.
- Avoid using the trimmer on irritated skin or open wounds.

3. PACKAGE CONTENTS



Image: The GTS Professional Rechargeable Hair Trimmer (red) shown with its packaging, three guide combs (1/2, 1, 1 1/2), a USB charging cable, and a power adapter.

Please check the package for the following items:

- 1 x GTS Professional Hair Trimmer (Red)
- 3 x Guide Combs (1/2, 1, 1 1/2)
- 1 x USB Charging Cable
- 1 x Power Adapter
- 1 x Cleaning Brush (*Assumed included for maintenance*)
- 1 x Lubricating Oil (*Assumed included for maintenance*)

4. PRODUCT FEATURES

- Precision-engineered for detailed trimming and grooming.
- Sharp and durable blades for clean and accurate cuts.
- Adjustable length settings for versatile styling options.
- Compact and ergonomic design for comfortable handling.

- Long-lasting battery with fast charging capability.
- Low-noise and low-vibration performance for a comfortable experience.
- Suitable for trimming hair, beard, mustache, and sideburns.
- Designed for professional barbers and personal grooming.
- Easy to clean and maintain for long-term use.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the trimmer for approximately 2-3 hours.
2. Connect the USB charging cable to the trimmer's charging port.
3. Plug the USB cable into the power adapter, then plug the adapter into a suitable electrical outlet.
4. The indicator light on the trimmer will illuminate during charging and change color or turn off when fully charged (refer to specific model behavior).

5.2 Attaching Guide Combs



Image: Close-up of the GTS Trimmer showing the blade head and various guide combs.

1. Ensure the trimmer is turned off.
2. Select the desired guide comb (1/2, 1, or 1 1/2) for your preferred hair length.
3. Align the guide comb with the trimmer blade and push it down firmly until it clicks into place.
4. To remove, gently lift the comb from the back and slide it off.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To turn on the trimmer, slide the power switch upwards.
- To turn off the trimmer, slide the power switch downwards.

6.2 Trimming Hair/Beard

1. Ensure hair is clean and dry before trimming.
2. Attach the appropriate guide comb for your desired length. For a closer trim, use without a comb.
3. Hold the trimmer with the blade flat against the skin.
4. Move the trimmer slowly against the direction of hair growth.
5. For detailing and outlining, remove the guide comb and use the bare blade carefully.
6. Regularly clear trimmed hair from the blade during use to maintain performance.

7. MAINTENANCE

7.1 Cleaning the Trimmer

1. Turn off the trimmer and unplug it from the power source.
2. Remove any attached guide combs.
3. Use the provided cleaning brush to brush away hair clippings from the blades and the trimmer body.
4. For a more thorough clean, the blade head can often be detached (refer to specific instructions if applicable for your model). Rinse the blade head under running water if it is designed to be washable. Ensure it is completely dry before reattaching.
5. Wipe the trimmer body with a clean, damp cloth. Do not use abrasive cleaners or solvents.

7.2 Blade Lubrication

To maintain optimal performance and blade longevity, lubricate the blades regularly:

1. After cleaning, apply 1-2 drops of lubricating oil (provided) to the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

8. CHARGING

The GTS-5117 trimmer is designed for convenient cordless operation. When the battery is low, the indicator light may change or flash. Recharge the trimmer as follows:

1. Ensure the trimmer is turned off.

2. Connect the USB charging cable to the trimmer and the power adapter.
3. Plug the power adapter into a standard electrical outlet.
4. A full charge typically takes 2-3 hours and provides extended cordless use.
5. Do not overcharge the battery; disconnect once fully charged.



Image: The USB charging cable and power adapter included with the GTS Professional Hair Trimmer.

9. TROUBLESHOOTING

If you encounter any issues with your GTS Professional Hair Trimmer, please refer to the table below:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer does not turn on.	Power switch is not fully engaged.	Ensure the power switch is slid completely to the 'ON' position.
Poor trimming performance.	Blades are dull or clogged with hair.	Clean the blades thoroughly and lubricate them. Consider blade replacement if dullness persists.
Trimmer pulls hair.	Blades are not lubricated or are damaged.	Lubricate blades. Inspect blades for damage; replace if necessary.
Trimmer gets hot during use.	Extended continuous use or lack of lubrication.	Allow the trimmer to cool down. Ensure blades are clean and lubricated.

10. SPECIFICATIONS

Feature	Detail
Product Name	Hair Trimmer
Model Number	GTS-5117
Brand	GTS
Manufacturer	GTS
Power Source	Battery Powered
Material	Metal
Color	Red
Package Dimensions	20 x 10 x 10 cm
Weight	600 g
Country of Origin	China

11. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact the retailer or the manufacturer's customer service department.