

Clipbuds Wireless Earbuds User Manual

Model: 1

PRODUCT OVERVIEW

The Clipbuds are innovative wireless, open-ear headphones designed for comfort and stability during various activities such as running, cycling, and fitness. They feature an ergonomic ear clip design that ensures a secure fit without causing discomfort, even during prolonged use. With Bluetooth 5.3 connectivity, these earbuds deliver clear audio and a reliable connection.



Image: White Clipbuds earphones, showing both earbuds and their compact charging case.

Key Features

- **Wireless Non-In-Ear Design:** Ergonomic ear clip design provides a secure and comfortable fit, weighing only 12g, ideal for long-term wear without pain.
- **Comfortable To Wear:** The 21-gram mini ear clip design is made from memory material, ensuring it retains its shape and offers adjustable tightness for soft, comfortable wear.
- **Immersive Sound Experience:** Equipped with dynamic 12mm drivers and a dual-layer composite diaphragm, delivering balanced acoustics with crisp highs, rich mids, and deep bass. Optimized for music, podcasts, and calls with advanced noise-isolation.
- **Sweat-Resistant Performance:** IPX5-rated to protect internal components from moisture, making them suitable for intense exercise sessions and wet conditions.

WHAT'S IN THE BOX

Your Clipbuds package includes the following items:

- Clipbuds Wireless Earphones (1 or 2 pairs, depending on package)
- Wireless Charging Case



Image: A white Clipbuds charging case and a black Clipbuds charging case, both open to show the earbuds stored inside.

SETUP

Initial Charging

Before first use, fully charge your Clipbuds and their charging case. Place the earbuds into the charging case. Connect the charging case to a power source using a compatible USB cable (not explicitly mentioned as included, but implied for charging). The indicator lights on the case will show charging status.

Pairing with a Device

1. Ensure the Clipbuds are in the charging case and the case is open, or the earbuds are powered on.
2. On your device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
3. Turn on Bluetooth.
4. Search for available devices. The Clipbuds should appear in the list (e.g., "Clipbuds" or similar).
5. Select the Clipbuds to initiate pairing. Once connected, you will hear an audio prompt or see an indicator light

change.



Image: The white Clipbuds earbuds placed next to their open charging case, illustrating their compact design.

OPERATING INSTRUCTIONS

Wearing the Earbuds

The Clipbuds are designed to clip onto your ear, providing an open-ear listening experience. Gently place each earbud onto your earlobe, ensuring the speaker is positioned correctly for optimal sound. Adjust the clip for a comfortable and secure fit. The ergonomic design ensures stability during movement.



Image: A woman demonstrating how to wear the white Clipbuds earbud, showing its clip-on design.

Basic Controls

The Clipbuds feature intuitive touch controls for managing audio playback and calls. Specific touch gestures may vary slightly, but common functions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap during an incoming call.
- **Reject Call:** Press and hold for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.

MAINTENANCE

Cleaning Your Clipbuds

To maintain optimal performance and hygiene, regularly clean your Clipbuds. Use a soft, dry, lint-free cloth to wipe the earbuds and charging case. For stubborn dirt, slightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the product.

Storage

When not in use, store your Clipbuds in their charging case to protect them from dust, dirt, and physical damage. Store the case in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Clipbuds, refer to the following common troubleshooting steps:

- **Earbuds not pairing:** Ensure both earbuds are charged and in pairing mode. Turn off and on your device's Bluetooth. Try forgetting the device in your Bluetooth settings and re-pairing.
- **No sound:** Check the volume level on both your device and the earbuds. Ensure the earbuds are properly connected to your device. Try playing audio from a different application or source.
- **Charging issues:** Ensure the charging cable and power adapter are working correctly. Verify that the earbuds are properly seated in the charging case. Clean the charging contacts on both the earbuds and the case.
- **Intermittent connection:** Move closer to your connected device to reduce interference. Avoid obstacles between the earbuds and your device.

SPECIFICATIONS

| Feature | Detail |
|---------------------------------|--|
| Model Name | 1 |
| Connectivity Technology | Wireless (Bluetooth 5.3) |
| Ear Placement | Open Ear / Clip-On |
| Form Factor | In Ear (Clip-On) |
| Color | White |
| Item Weight | 0.035 ounces (per earbud, approximate) |
| Battery Life (Average) | 6 hours (at 80% volume) |
| Battery Capacity | 200mAh (case) + 20mAh (earbuds) |
| Bluetooth Transmission Distance | 10m |
| Material | PC+ABS |
| Water Resistance | IPX5 (Sweat-Against Performance) |



Image: A detailed view of a Clipbuds earbud, highlighting the internal Bluetooth 5.3 chip.

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not provided within this manual. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage, technical support, and contact information.

