

[Manuals.plus](#) /

> [realme](#) /

> realme Earbuds Air 7 True Wireless User Manual

realme Air 7

realme Earbuds Air 7 True Wireless User Manual

Model: Air 7 (RMA2408)

1. INTRODUCTION

Thank you for choosing the realme Earbuds Air 7 True Wireless. These earbuds are designed to provide a superior audio experience with advanced features such as 52dB Hybrid Active Noise Cancellation, 12.4mm Dynamic Bass Drivers, 360° Spatial Audio, and Hi-Res LHDC support. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

2. BOX CONTENTS

Please check the package contents to ensure all items are present:

- realme Earbuds Air 7 (Left and Right Earbuds)
- Charging Case
- Eartips (various sizes)
- User Manual (this document)



Image: The realme Earbuds Air 7, showing both earbuds and the open charging case.

3. SETUP

3.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the charging case to a power source using a USB-C cable (not included).
3. The indicator light on the case will show charging status. A full charge for the case takes approximately 2 hours.



Image: The realme Earbuds Air 7 charging case in Slate Grey, with the realme logo visible.

3.2 Initial Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (indicator light will flash).
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for available devices and select "realme Buds Air 7".
5. Once connected, the indicator light will turn off, and you will hear a confirmation tone.

3.3 realme Link App

For full functionality and customization, download the realme Link app from your device's app store. The app allows you to:

- Customize touch controls.
- Switch between Noise Cancellation, Transparency, and Normal modes.
- Adjust sound effects and activate Spatial Audio.
- Update firmware.

Dual Device Connection 2.0



Swift Pair



IP55 Dust & Water Resistance



6-Mic Call Noise Cancellation



Bluetooth 5.4

5.4 

Image: A smartphone screen displaying the realme Link app interface for managing the earbuds.

3.4 Dual Device Connection

The earbuds support connecting to two devices simultaneously. To enable this feature, ensure it is activated within the realme Link app. Once enabled, the earbuds can seamlessly switch audio output between the two connected devices.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The realme Earbuds Air 7 feature intuitive touch controls on each earbud. Default controls typically include:

- **Double Tap:** Play/Pause music, Answer/End call.
- **Triple Tap:** Skip to next track.
- **Long Press (one earbud):** Switch between Noise Cancellation/Transparency/Normal modes.
- **Long Press (both earbuds):** Reject call.

Note: Specific touch control functions can be customized via the realme Link app.

4.2 Active Noise Cancellation (ANC) and Transparency Mode

The earbuds feature 52dB Hybrid ANC to reduce ambient noise. Transparency Mode allows you to hear your surroundings without removing the earbuds. Switch between these modes using the touch controls or the realme Link app.

4.3 360° Spatial Audio

Experience immersive sound with 360° Spatial Audio. Activate this feature through the realme Link app for a more dynamic listening experience, especially with compatible content.

360° Spatial Audio Effect

Surround Yourself with Sound

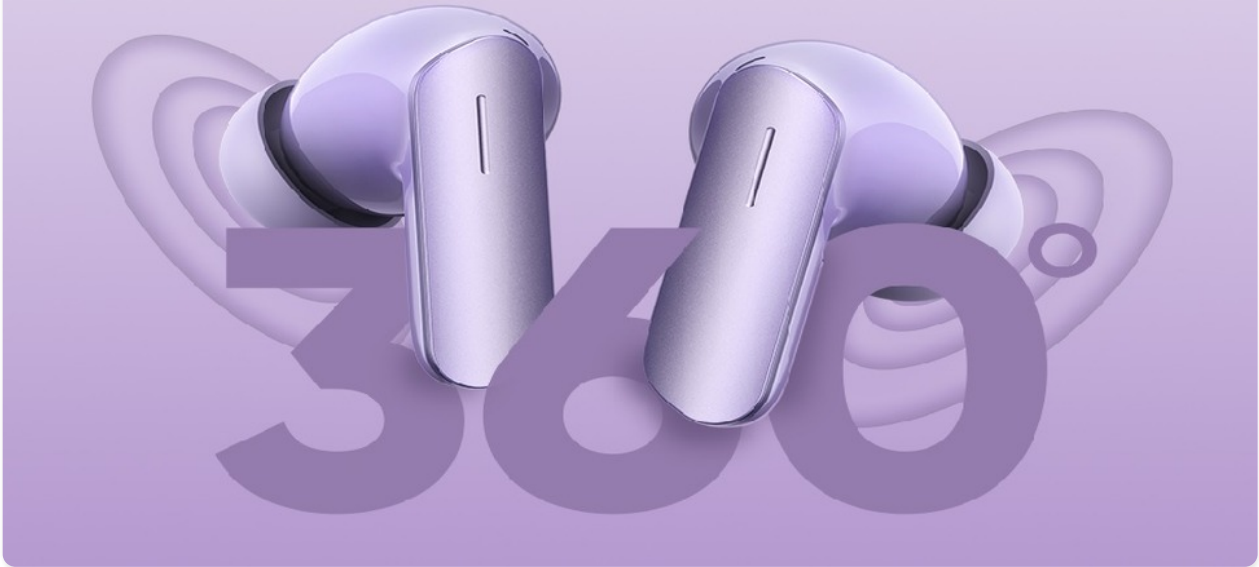


Image: Graphic illustrating the 360° Spatial Audio effect with earbuds.

4.4 Low Latency Mode (Gaming)

For an optimized gaming experience, activate the 45ms Low Latency Mode via the realme Link app. This reduces audio delay, ensuring better synchronization between audio and video.

4.5 Call Functions

The 6-Mic ENC (Environmental Noise Cancellation) system enhances call clarity by reducing background noise during phone calls.

5. MAINTENANCE

5.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with water and mild soap if necessary, ensuring they are completely dry before reattaching.
- Clean the charging contacts on both the earbuds and the case to ensure proper charging.

5.2 Water and Dust Resistance

The earbuds are rated IP55 for dust and water resistance. This means they are protected against limited dust ingress and low-pressure water jets from any direction. They are not designed for swimming or showering. Avoid exposing them to excessive moisture or submersion.

5.3 Battery Care

- Store the earbuds and case in a cool, dry place.
- Avoid extreme temperatures.
- Charge the earbuds regularly, even if not in use, to maintain battery health.

6. TROUBLESHOOTING

6.1 Connectivity Issues

- **Earbuds not pairing:** Ensure earbuds are charged and in pairing mode. Turn off and on Bluetooth on your device.
- **Only one earbud working:** Place both earbuds back in the case, close it, then open it again. Check battery levels.
- **Frequent disconnections:** Ensure no strong interference sources are nearby. Keep the earbuds within the Bluetooth range (10 meters).

6.2 Sound Issues

- **No sound:** Check device volume and earbud connection. Ensure earbuds are properly seated in your ears.
- **Low volume:** Adjust volume on both your device and through the realme Link app.
- **Poor sound quality:** Ensure eartips provide a good seal. Clean earbuds if necessary.

6.3 Charging Issues

- **Earbuds not charging:** Ensure earbuds are correctly placed in the case. Clean charging contacts.
- **Case not charging:** Try a different USB-C cable and power adapter. Ensure the cable is securely connected.

6.4 Factory Reset

If issues persist, a factory reset may resolve them. Refer to the realme Link app or realme support website for specific instructions on how to perform a factory reset for your model.

7. SPECIFICATIONS



realme Buds Air7
Hear What Matters

52dB
Smart ANC

12.4mm
Dynamic Bass Driver

360°
Spatial Audio

Up to 52hrs
Playback

Image: An overview graphic highlighting key features like 52dB Smart ANC, 12.4mm Dynamic Bass Driver, 360° Spatial Audio,

Feature	Specification
Model Name	Air 7
Model Number	RMA2408
Brand	realme
Colour	Slate Grey
Ear Placement	In Ear
Form Factor	True Wireless
Audio Driver Size	12.4 mm Dynamic Bass Driver
Noise Control	52 dB Hybrid Active Noise Cancellation (ANC)
Microphones	6 Mic ENC (Environmental Noise Cancellation)
Spatial Audio	360° Spatial Sound Effect
Hi-Res Audio	LHDC 5.0 Certified
Bluetooth Version	5.4
Bluetooth Range	10 Metres
Audio Latency	45 Milliseconds (Low Latency Mode)
Battery Life (Total)	Up to 52 Hours (with charging case)
Charging Case Battery Capacity	480 Milliamp Hours
Battery Charge Time	2 Hours (for case)
Water Resistance	IP55 Dust & Water Resistant
Control Type	Touch, App (realme Link)
Compatible Devices	Cellphones, Desktops, Gaming Consoles, Laptops, Tablets
Material	Plastic
Item Weight	50 Grams

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The realme Earbuds Air 7 come with a **1 Year Manufacturer Warranty**. For warranty claims, please carry the product to the nearest realme service center.

8.2 Customer Support

For any assistance or support, you can reach realme customer service through the following channels:

- **Email:** service@realme.com
- **Toll-free Number:** 1800 102 2777

Manufacturer: Jiangxi RiSound Electronics Co Ltd.

Importer: Realme Mobile Telecommunications (India) Private Limited