

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SOCICO](#) /

› [SOCICO Kids Watch Instruction Manual - Digital 7 Color Lights, Stopwatch, Alarm & Analog Time Learning](#)

## SOCICO Kids Watch Digital & Analog

# SOCICO Kids Watch Instruction Manual

Model: Kids Watch Digital & Analog

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your SOCICO Kids Watch. This watch features both digital and analog time displays, a stopwatch, an alarm function, and 7-color LED backlighting. It is designed for children and is 50M water-resistant.

## WATCH OVERVIEW AND BUTTON FUNCTIONS

---

Familiarize yourself with the watch's buttons and their primary functions. The watch typically has four buttons for digital functions and a crown for analog time adjustment.

# Multifunctional Buttons



This image illustrates the various buttons on the SOCICO Kids Watch. The "Light" button controls the backlight, "Mode" cycles through functions, "Start" and "Reset" are used for stopwatch and setting adjustments. The crown on the side adjusts the analog hands.

- **Light Button:** Activates the backlight. Long press to change backlight color.
- **Mode Button:** Cycles through different modes (Time, Stopwatch, Alarm, Date).
- **Start Button:** Used to start/stop the stopwatch, or to adjust values during setting.
- **Reset Button:** Used to reset the stopwatch, or to select items during setting.
- **Crown (Side Knob):** Adjusts the analog time.

## SETUP

### Setting Analog Time

To set the analog time:

1. Gently pull out the crown (the small knob on the right side of the watch case).
2. Rotate the crown in either direction to move the hour and minute hands to the correct time.
3. Once the time is set, push the crown back in firmly to engage the movement and start the analog display.



This image shows the clear analog dial of the watch, featuring luminous hands for easy time reading in various light conditions. The anti-scratch protective film helps maintain the watch's appearance.

### Setting Digital Time and Date

To set the digital time and date:

1. From the normal time display, press the **Mode** button repeatedly until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **Reset** button to cycle through the settings: Seconds → Hours → Minutes → Month → Date → Day of the Week.
3. While a value is flashing, use the **Start** button to increase the value. Hold the **Start** button for faster adjustment.
4. Once all desired values are set, press the **Mode** button again to exit the setting mode and return to the normal time display.

### Setting the Alarm

To set the alarm:

1. From the normal time display, press the **Mode** button until "AL" (Alarm) appears on the digital display.
2. Press the **Reset** button once; the hour digits will begin to flash.

3. Use the **Start** button to adjust the alarm hour.
4. Press the **Reset** button again; the minute digits will begin to flash.
5. Use the **Start** button to adjust the alarm minutes.
6. Press the **Mode** button to confirm the alarm setting and exit.
7. To turn the alarm ON/OFF, press the **Start** button while in the "AL" mode. An alarm icon will appear/disappear.

## OPERATING INSTRUCTIONS

---

### Using the Stopwatch

To use the stopwatch function:

1. From the normal time display, press the **Mode** button until "ST" (Stopwatch) appears on the digital display.
2. Press the **Start** button to begin timing.
3. Press the **Start** button again to pause timing.
4. Press the **Reset** button to clear the stopwatch to zero.
5. To exit stopwatch mode, press the **Mode** button.

### Changing 12/24 Hour Format

To switch between 12-hour (AM/PM) and 24-hour (military) time format:

1. In the normal time display, press the **Mode** button until the seconds are flashing (setting mode).
2. Press the **Reset** button until the hour digits are flashing.
3. Press the **Start** button to cycle through the hours. As you cycle, the "A" (AM), "P" (PM), or "H" (24-hour) indicator will change. Select your preferred format.
4. Press the **Mode** button to exit setting mode.

### Activating and Changing 7-Color Backlight

The watch features a 7-color LED backlight for visibility in low light conditions.

- To activate the backlight, briefly press the **Light** button. The light will stay on for a few seconds.
- To change the backlight color, **long press** the **Light** button for approximately 3 seconds. The color will cycle to the next available option. Repeat until your desired color is displayed.

# With 7 color lights

Long press the light button for 3 seconds to switch the child's favorite color light



This image demonstrates the 7-color backlight feature of the watch. A long press on the "Light" button allows users to cycle through various colors, providing a personalized visual experience.

## MAINTENANCE AND CARE

### Water Resistance (50M)

Your SOCICO Kids Watch is 50M (5 ATM) water-resistant, suitable for hand washing, swimming, rain, and sweating. However, it is important to follow these guidelines to prevent water damage:

- **DO NOT** pull out the crown (knob) for setting the time while the watch is submerged in water or wet. This can allow water to enter the watch case.
- Avoid exposing the watch to hot water, steam, or high temperatures (e.g., hot showers, saunas), as this can compromise the water-resistant seals.
- After exposure to chlorinated or saltwater, rinse the watch with fresh water and dry it thoroughly.

# 50M WaterProof

**Note:** Please do not pull out the knob for setting the time under water, so that the watch does not get into the water.



This image highlights the 50M water resistance of the watch, indicating its suitability for various water activities like swimming and hand washing. It also provides a crucial warning: never operate the crown while the watch is wet or submerged to prevent water ingress.

## Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or strap.

## Battery Replacement

The watch uses a SR626SW battery. When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.


## TROUBLESHOOTING

- **Digital Display is Blank:** Check if the battery needs replacement. Ensure the watch has not been exposed to extreme temperatures or water damage.
- **Analog Hands Not Moving:** Ensure the crown is fully pushed in. If the crown is pushed in and hands still do not move, the battery may need replacement or there could be a mechanical issue.
- **Buttons Not Responding:** Try pressing the buttons firmly. If unresponsive, the battery may be low, or there might be an internal issue.

- **Water Inside the Watch:** If you notice condensation or water droplets inside the watch, stop using it immediately and seek professional repair to prevent further damage.


## SPECIFICATIONS

# Watch Parameters

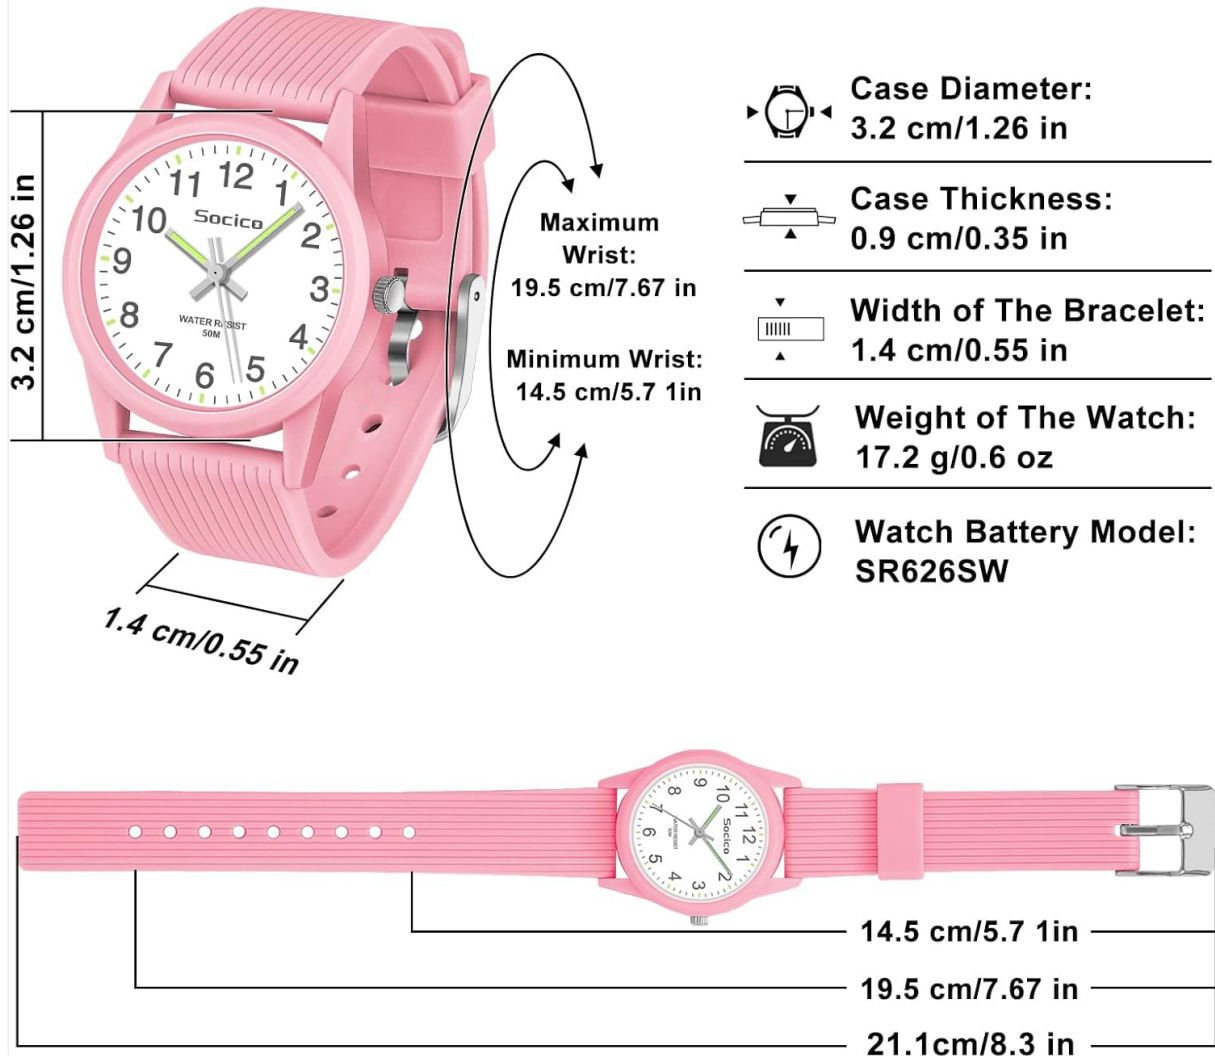

This image provides detailed physical specifications of the watch, including its dimensions, weight, and battery type, which are crucial for understanding its fit and maintenance requirements.

# Watch Size

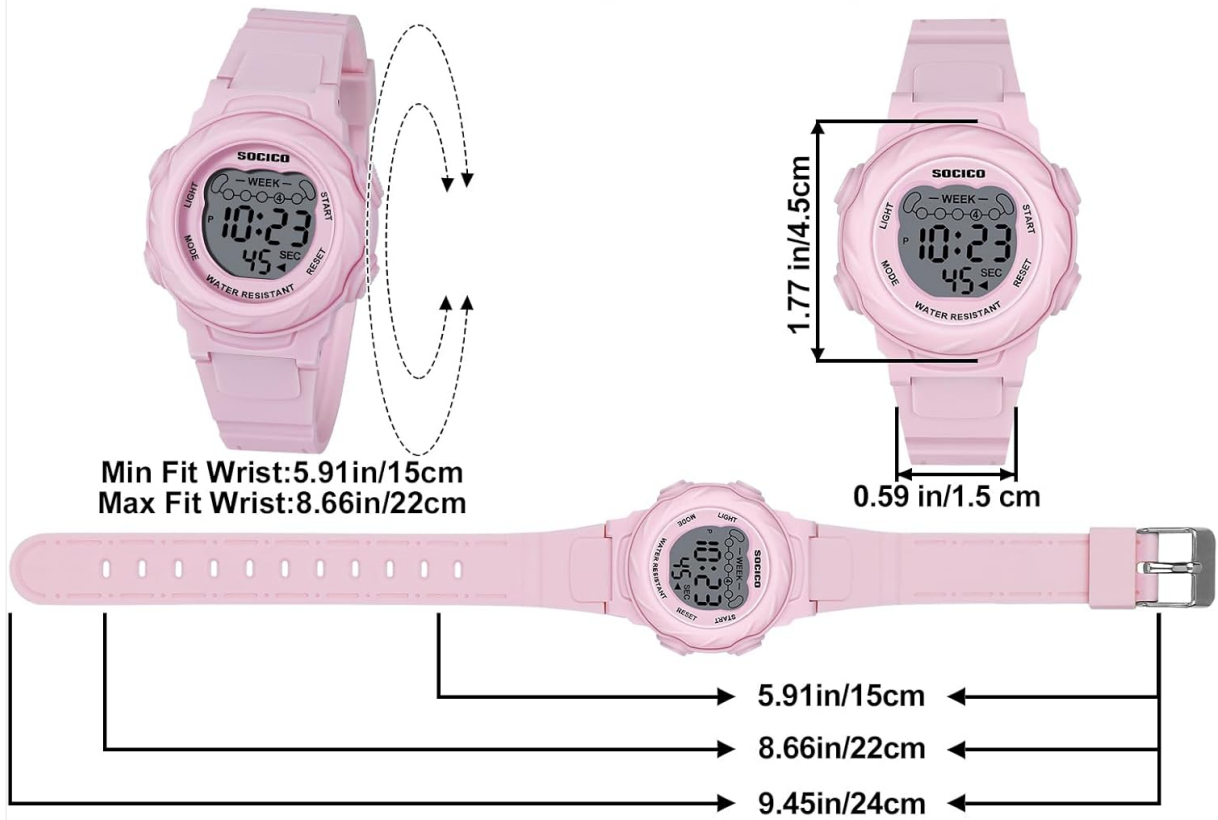



**Thickness:**  
0.59 in/1.5 cm



**Suitable age:**  
3 years old and older



**Weight:** 0.7oz/20g

This image further details the watch's size, including minimum and maximum wrist circumference, overall thickness, suitable age range, and total weight, aiding in proper fit and user suitability.

Feature	Detail
Brand	SOCICO
Model Name	Kids Watch Digital & Analog
ASIN	B0F5H3MVG9
Display Type	Digital and Analog
Backlight	7-Color LED
Water Resistance	50M (5 ATM)
Functions	Time, Date, Day, Alarm, Stopwatch, 12/24H Format
Case Diameter	3.2 cm / 1.26 in
Case Thickness	0.9 cm / 0.35 in
Bracelet Width	1.4 cm / 0.55 in

Watch Weight	20 g / 0.7 oz
Battery Model	SR626SW
Minimum Wrist Fit	15 cm / 5.91 in
Maximum Wrist Fit	22 cm / 8.66 in
Suitable Age	3 years old and older

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact the seller directly through your purchase platform. Keep your proof of purchase for any warranty claims.