

ALLIMITY Q60-Q80-Q90

ALLIMITY Remote Control User Manual

For DigiQuest TivuSat Q60, Q80, Q90 HD Receivers

INTRODUCTION

This manual provides detailed instructions for the ALLIMITY Remote Control, designed as a compatible replacement for DigiQuest TivuSat Q60, Q80, and Q90 HD Receivers. Please read this manual carefully before using the remote control to ensure proper operation and longevity of the device.

PRODUCT OVERVIEW

The ALLIMITY remote control is a direct replacement, offering full functionality without the need for complex programming or setup. It is ergonomically designed for comfortable handling and reliable performance.

- **Easy to Use:** No programming or installation is required for basic receiver functions.
- **Fully Functional:** Designed to replicate all functions of the original remote control.
- **Ergonomic Design:** Lightweight and easy to grip, providing a comfortable user experience.
- **Stable Performance:** Offers a longer transmission distance and stable remote control performance via infrared technology.
- **Compatibility:** Specifically designed for DigiQuest TivuSat Q60, Q80, and Q90 HD Receivers.



17.5 cm / 6.89 in



Figure 1: Front view of the ALLIMITY remote control, showing button layout and overall dimensions.

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. TV Control Button Programming (Optional)

This remote control features a "TV CONTROL" section, allowing you to program specific buttons (e.g., Power, Volume) to control your television. This feature requires an existing TV remote control.





Figure 2: Back view of the remote control, illustrating the battery compartment and TV control setup instructions.

1. In the **TV CONTROL** section, press and hold the **SET** button for 3 seconds. The red LED on the remote will increase in intensity.
2. While still in the same section, press the button on the ALLIMITY remote you wish to program (e.g., **V+**, **V-**, **TV IN**). The red LED will then flash.
3. Position your original TV remote control directly facing the ALLIMITY remote control (ensure their infrared LEDs are aligned) at a distance of approximately 3 cm (1.2 inches).
4. On your original TV remote control, press and hold the corresponding button you wish to copy (e.g., **VOL+**) until the red LED on the ALLIMITY remote control remains solid. This indicates successful learning.
5. Press the **SET** button on the ALLIMITY remote to save the programmed function.
6. Repeat steps 2-5 for each button you wish to program in the TV CONTROL section. Program one button at a time.

OPERATING INSTRUCTIONS

To operate your DigiQuest TivuSat HD Receiver with the ALLIMITY remote control:

1. Ensure the remote has fresh batteries and a clear line of sight to your receiver.
2. Point the remote control directly at the infrared sensor on your DigiQuest receiver.
3. Press the desired button for the corresponding function. Common functions include:
 - **Power:** Turns the receiver on or off.
 - **CH+ / CH-:** Changes channels up or down.
 - **VOL+ / VOL-:** Adjusts the volume.
 - **Mute:** Mutes or unmutes the audio.
 - **MENU:** Accesses the receiver's main menu.
 - **EXIT:** Exits the current menu or screen.
 - **OK / Navigation Arrows:** Confirms selections and navigates through menus.
 - **INFO:** Displays program information.
 - **EPG:** Accesses the Electronic Program Guide.
 - **APPS:** Accesses applications (if supported by your receiver).
 - **SETTINGS:** Accesses receiver settings.
 - **TV/R:** Switches between TV and Radio modes.
 - **Colored Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services, as indicated on-screen.



Figure 3: Angled view of the remote control, illustrating the button arrangement.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents, as these may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Impact:** Do not drop the remote control or subject it to strong impacts, as this can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	- Batteries are dead or incorrectly inserted. - No clear line of sight to the receiver. - Remote is too far from the receiver.	- Replace batteries with new AAA alkaline batteries, ensuring correct polarity. - Ensure there are no obstructions between the remote and the receiver. - Move closer to the receiver (within 10 meters).
TV control buttons are not responding.	- Buttons were not programmed correctly. - TV remote's signal was not properly learned.	- Repeat the TV Control Button Programming steps carefully. - Ensure the original TV remote and ALLIMITY remote are properly aligned during programming.
Remote has limited range.	Batteries are low.	Replace batteries with new AAA alkaline batteries.

SPECIFICATIONS

Brand	ALLIMITY
Model	Q60-Q80-Q90
Product Dimensions	17 x 5 x 1 cm (approximately 6.7 x 2 x 0.4 inches)
Item Weight	50 grams (approximately 1.76 ounces)
Connectivity Technology	Infrared
Maximum Range	10 Meters
Battery Type	AAA Alkaline (not included)
Compatible Devices	DigiQuest Q60, Q80, Q90 HD Receivers
Number of Buttons	25
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your ALLIMITY remote control, please refer to the seller's contact information provided at the time of purchase or consult the product listing on the platform where it was acquired. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F5HD74NK>

More documents and user manuals: <https://manuals.plus/>