

[Manuals.plus](#) /

> [WISCENT](#) /

> WISCENT WTB-732 Retro Portable Boombox User Manual

## WISCENT WTB-732

# WISCENT WTB-732 Retro Portable Boombox User Manual

Model: WTB-732

## 1. PRODUCT OVERVIEW

---

The WISCENT WTB-732 is a versatile retro-style portable boombox designed to offer a blend of classic audio experiences with modern connectivity. It features a cassette player and recorder, AM/FM/SW1/SW2 radio, Bluetooth for wireless streaming, and USB/Micro SD card slots for digital audio playback. Dual full-range speakers provide 24W of audio output, with adjustable bass and treble controls for a customized listening experience.



Figure 1.1: Overview of the WISCENT WTB-732 Boombox and its key features.

## 2. SETUP INSTRUCTIONS

---

### 2.1 Powering the Boombox

The WTB-732 boombox can be powered using two methods:

- **AC Power:** Connect the included AC power cord (100-240V) to the AC port on the back of the unit and plug it into a standard wall outlet.

- **DC Power (Batteries):** For portable use, insert 6 UM-1 type batteries (not included) into the battery compartment located on the bottom of the unit. Alternatively, 2 rechargeable batteries (not included) can be used. Ensure correct polarity when inserting batteries.



Figure 2.1: Rear panel showing AC power input and battery compartment.

## 2.2 Initial Power On

Once powered, slide the **FUNCTION** switch to select your desired mode (RADIO, TAPE, MP3/BT). The unit will power on and be ready for operation.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 General Controls

The top panel features various controls for audio adjustment and playback functions:

- **VOLUME:** Adjusts the overall sound level.
- **BASS:** Adjusts the low-frequency audio output.
- **TREBLE:** Adjusts the high-frequency audio output.
- **Cassette Controls:** PAUSE, STOP/EJECT, F.FWD (Fast Forward), REW (Rewind), PLAY, REC (Record).
- **TUNING:** Rotates to select radio frequencies.
- **BAND:** Selects radio band (SW2, SW1, AM, FM).
- **FUNCTION:** Selects operating mode (RADIO, TAPE, MP3/BT, OFF).



Figure 3.1: Top panel controls for audio and cassette functions.

### 3.2 Radio Operation

To listen to the radio:

1. Slide the **FUNCTION** switch to **RADIO**.
2. Slide the **BAND** switch to select your desired frequency band: FM, AM, SW1, or SW2.
3. Extend the telescopic antenna for optimal reception.

4. Rotate the **TUNING** knob to find a station.



Figure 3.2: Radio tuning interface and antenna.

### 3.3 Cassette Player/Recorder

To play a cassette tape:

1. Slide the **FUNCTION** switch to **TAPE**.
2. Press the **STOP/EJECT** button to open the cassette door.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette door and press the **PLAY** button.
5. Use **PAUSE**, **F.FWD**, and **REW** for playback control.

To record:

1. Insert a blank cassette tape.
2. Select the audio source (Radio, Bluetooth, USB/Micro SD).
3. Press the **REC** button to begin recording.
4. Press **STOP/EJECT** to end recording.



Figure 3.3: Cassette compartment and recording functionality.

### 3.4 Bluetooth Connectivity

To connect via Bluetooth:

1. Slide the **FUNCTION** switch to **MP3/BT**. The unit will enter Bluetooth pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "WTB-732" from the list to pair.
4. Once paired, you can stream audio wirelessly from your device.

*Note: This boombox supports Bluetooth reception only and does not support Bluetooth transmission or Bluetooth headsets.*



Nostalgia, Meet Modernity.

#### Bluetooth Boombox

(Note: Bluetooth receiver only, does not support Bluetooth transmitting.)

Figure 3.4: Bluetooth streaming from a mobile device.

### 3.5 USB/Micro SD Playback

To play audio from a USB drive or Micro SD card:

1. Slide the **FUNCTION** switch to **MP3/BT**.
2. Insert a USB drive (up to 64GB, FAT32 format) into the USB slot or a Micro SD (TF) card into the TF slot on the side panel.
3. The unit will automatically detect and play MP3/WMA files.
4. Use the playback control buttons (Play/Pause, Next, Previous) on the side panel to manage your music.



Figure 3.5: USB drive inserted for digital audio playback.

### 3.6 Headphone Jack

For private listening, connect wired headphones (not included) to the headphone jack located on the side panel of the boombox.



Figure 3.6: Headphone jack for personal audio experience.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your WISCENT WTB-732 boombox, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials, as they may damage the finish.

- **Cassette Deck Care:** Periodically clean the tape heads and pinch rollers with a specialized cassette head cleaner to prevent sound degradation.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Antenna:** Handle the telescopic antenna gently to avoid bending or breaking.

## 5. TROUBLESHOOTING

---

If you encounter issues with your boombox, refer to the following common solutions:

- **No Power:**
  - Ensure the AC power cord is securely plugged into both the unit and a working outlet.
  - If using batteries, check that they are inserted correctly with the right polarity and are not depleted.
  - Verify the **FUNCTION** switch is not in the **OFF** position.
- **No Sound:**
  - Check the **VOLUME** knob and ensure it is turned up.
  - If using headphones, ensure they are fully plugged in and functioning.
  - For radio, adjust the **TUNING** knob and **BAND** switch for better reception.
  - For cassette, ensure the tape is properly inserted and the tape heads are clean.
  - For Bluetooth/USB/Micro SD, ensure the correct mode is selected and the audio source is playing.
- **Poor Radio Reception:**
  - Fully extend and adjust the telescopic antenna.
  - Try repositioning the boombox to a different location.
  - For AM, rotating the unit may improve reception.
- **Cassette Playback Issues (e.g., muffled sound, tape eating):**
  - Clean the tape heads and pinch rollers.
  - Ensure the tape is not damaged or tangled.
- **Bluetooth Pairing Failure:**
  - Ensure the boombox is in **MP3/BT** mode.
  - Make sure your device's Bluetooth is enabled and within range.
  - Forget the device from your phone's Bluetooth settings and try pairing again.

## 6. SPECIFICATIONS

---

Feature	Specification
Brand	WISCENT
Model	WTB-732
Connectivity Technology	Auxiliary, Bluetooth, USB
Color	Sliver
Speaker Type	Stereo

Item Dimensions (L x W x H)	12.8 x 3.94 x 3.15 inches
Power Source	Corded Electric, Battery Powered
Compatible Devices	Cassette Tapes
Wattage	24 watts
Surround Sound Channel Configuration	2.0
Supported Standards	AM/FM/SW
Bluetooth Support	Yes
Supported Audio Format	Cassette, MP3
Number of Speakers	2
Signal-to-Noise Ratio	45 dB
Audio Output Mode	Stereo
Frequency Response Curve	20Hz-20KHz
Speakers Included	Built-in Stereo Speakers
Item Weight	4 Pounds

## 7. WARRANTY & SUPPORT

---

### 7.1 Warranty Information

The WISCENT WTB-732 Retro Portable Boombox comes with a **12-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

### 7.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please contact WISCENT customer support through the following channels:

- **Email:** [support@wiscent.com](mailto:support@wiscent.com) (example email, replace with actual if available)
- **Website:** [Visit the WISCENT Store on Amazon](#)
- **Phone:** 1-800-XXX-XXXX (example phone, replace with actual if available)

Please have your model number (WTB-732) and purchase date ready when contacting support.