

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dovety](#) /
- › [Dovety Portable Garment Steamer User Manual](#)

## Dovety LM-2401

# Dovety Portable Garment Steamer User Manual

Model: LM-2401 | Brand: Dovety

## INTRODUCTION

---

Thank you for choosing the Dovety Portable Garment Steamer. This 2-in-1 versatile device combines the functionality of a handheld garment steamer and a clothes iron, designed for both vertical steaming and horizontal ironing. With its 1100W high-power output and rapid heating capabilities, it efficiently removes wrinkles from various fabrics, making it ideal for home, office, and travel use. Its compact and lightweight design ensures convenience and portability.



Figure 1: Dovety Portable Garment Steamer.

# Portable and Space-Saving



Travel  
/Storage

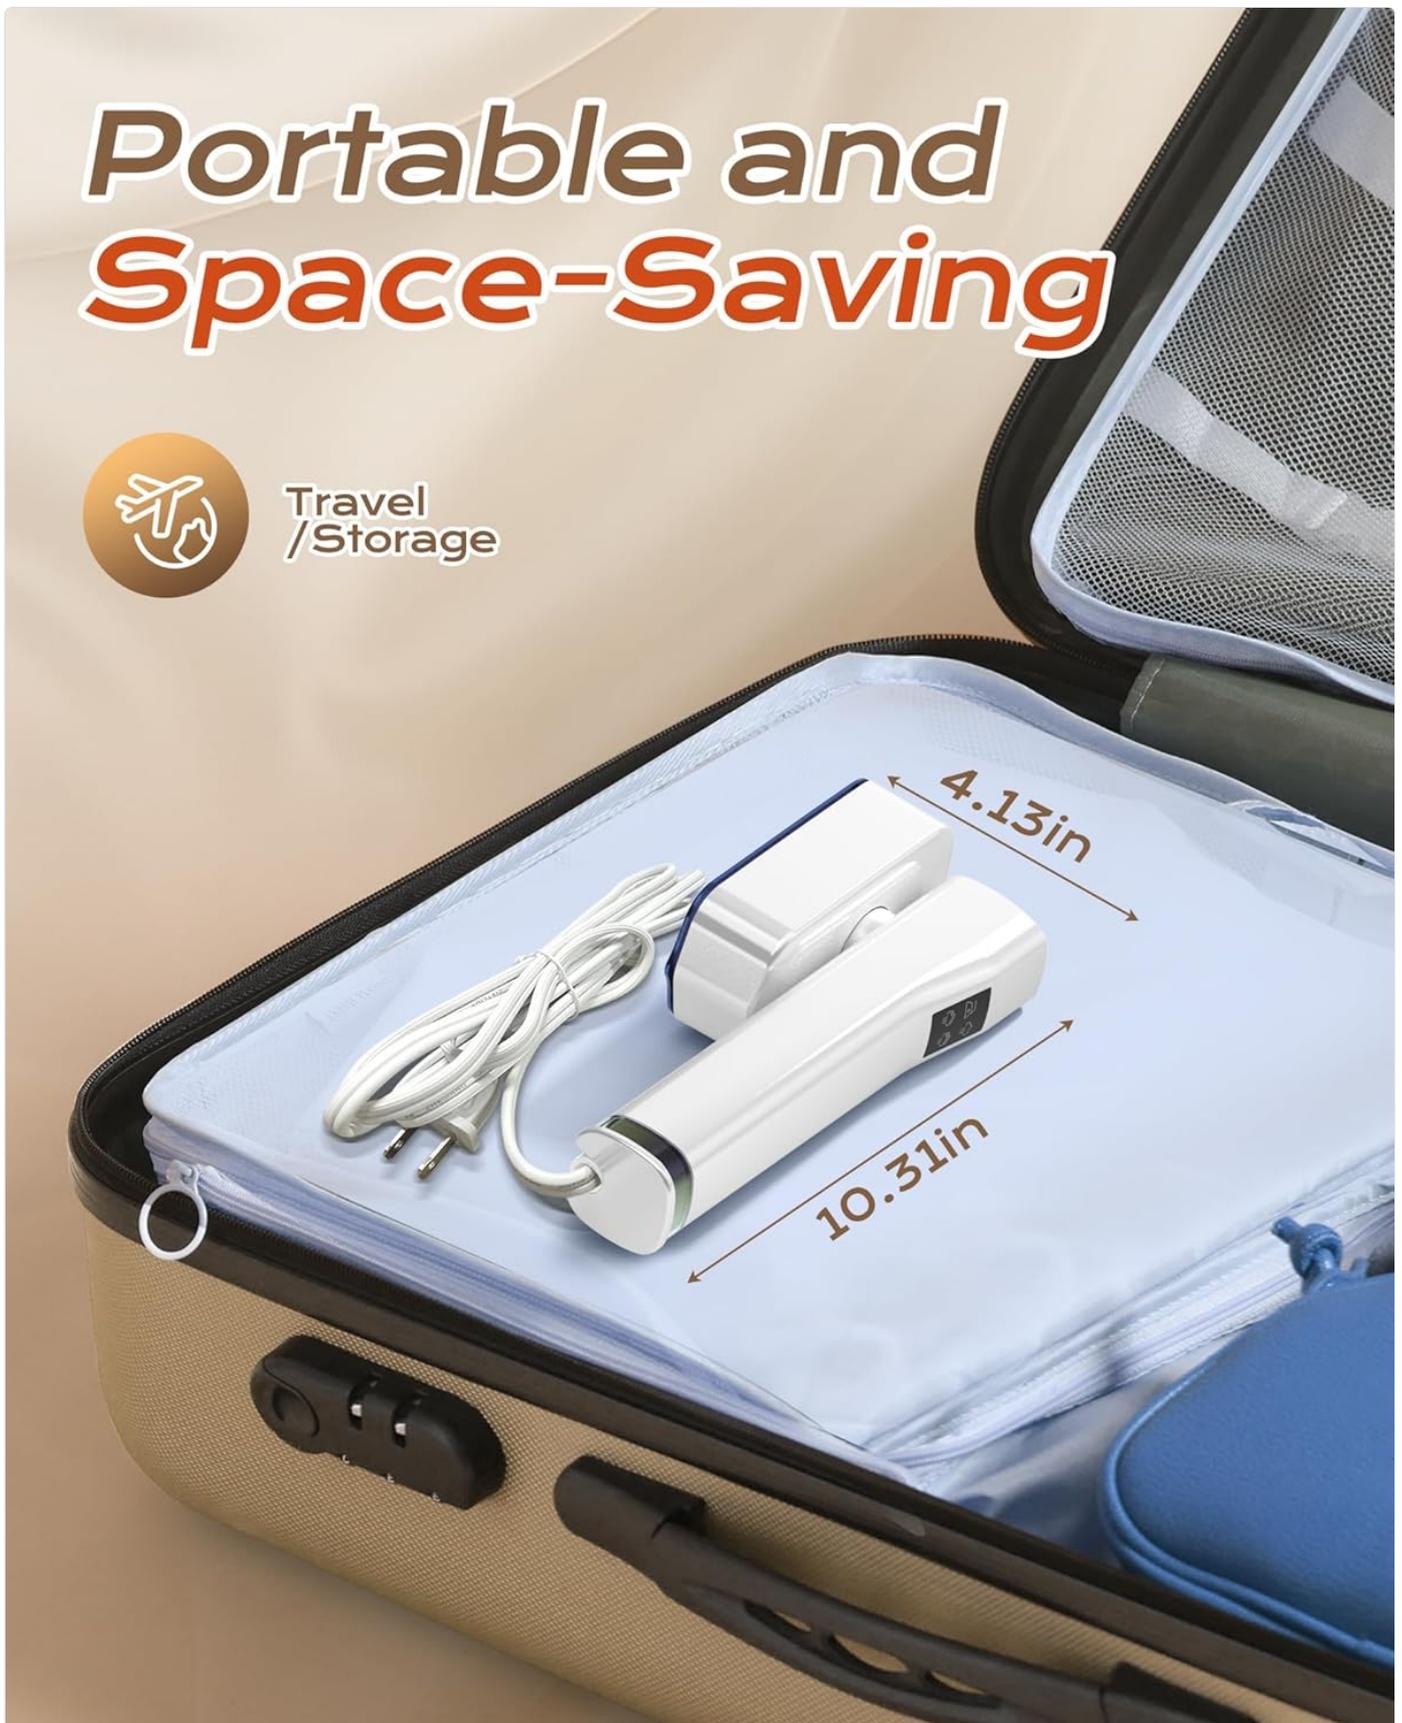


Figure 2: The steamer's compact design makes it portable and space-saving for travel.

## IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, please read all instructions carefully before using this appliance.

- Always ensure the voltage of your power outlet matches the voltage specified on the appliance (110-130V).
- Do not immerse the steamer in water or other liquids.

- Keep the steamer away from children and pets.
- Do not touch the hot steaming plate or steam output during operation or immediately after use.
- Use only distilled or de-mineralized water to prevent mineral buildup and extend the life of the steamer.
- Unplug the steamer from the power outlet when not in use and before cleaning or filling.
- Never pull the cord to disconnect from the outlet; grasp the plug and pull.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged.
- Use the steamer only for its intended household use as described in this manual.
- Ensure the water tank is securely attached before operation to prevent leakage.

## PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the parts of your Dovety Garment Steamer:

- **Steamer Unit:** Main body with handle, steaming plate, and control panel.
- **Water Tank:** Detachable 100mL capacity tank for water.
- **Measuring Cup:** For accurate water filling.
- **Storage Bag:** For convenient travel and storage.
- **Heat Insulated Base:** Provides a safe resting place for the hot steamer.
- **Power Cord:** 5.3ft (1.6m) long for flexible use.

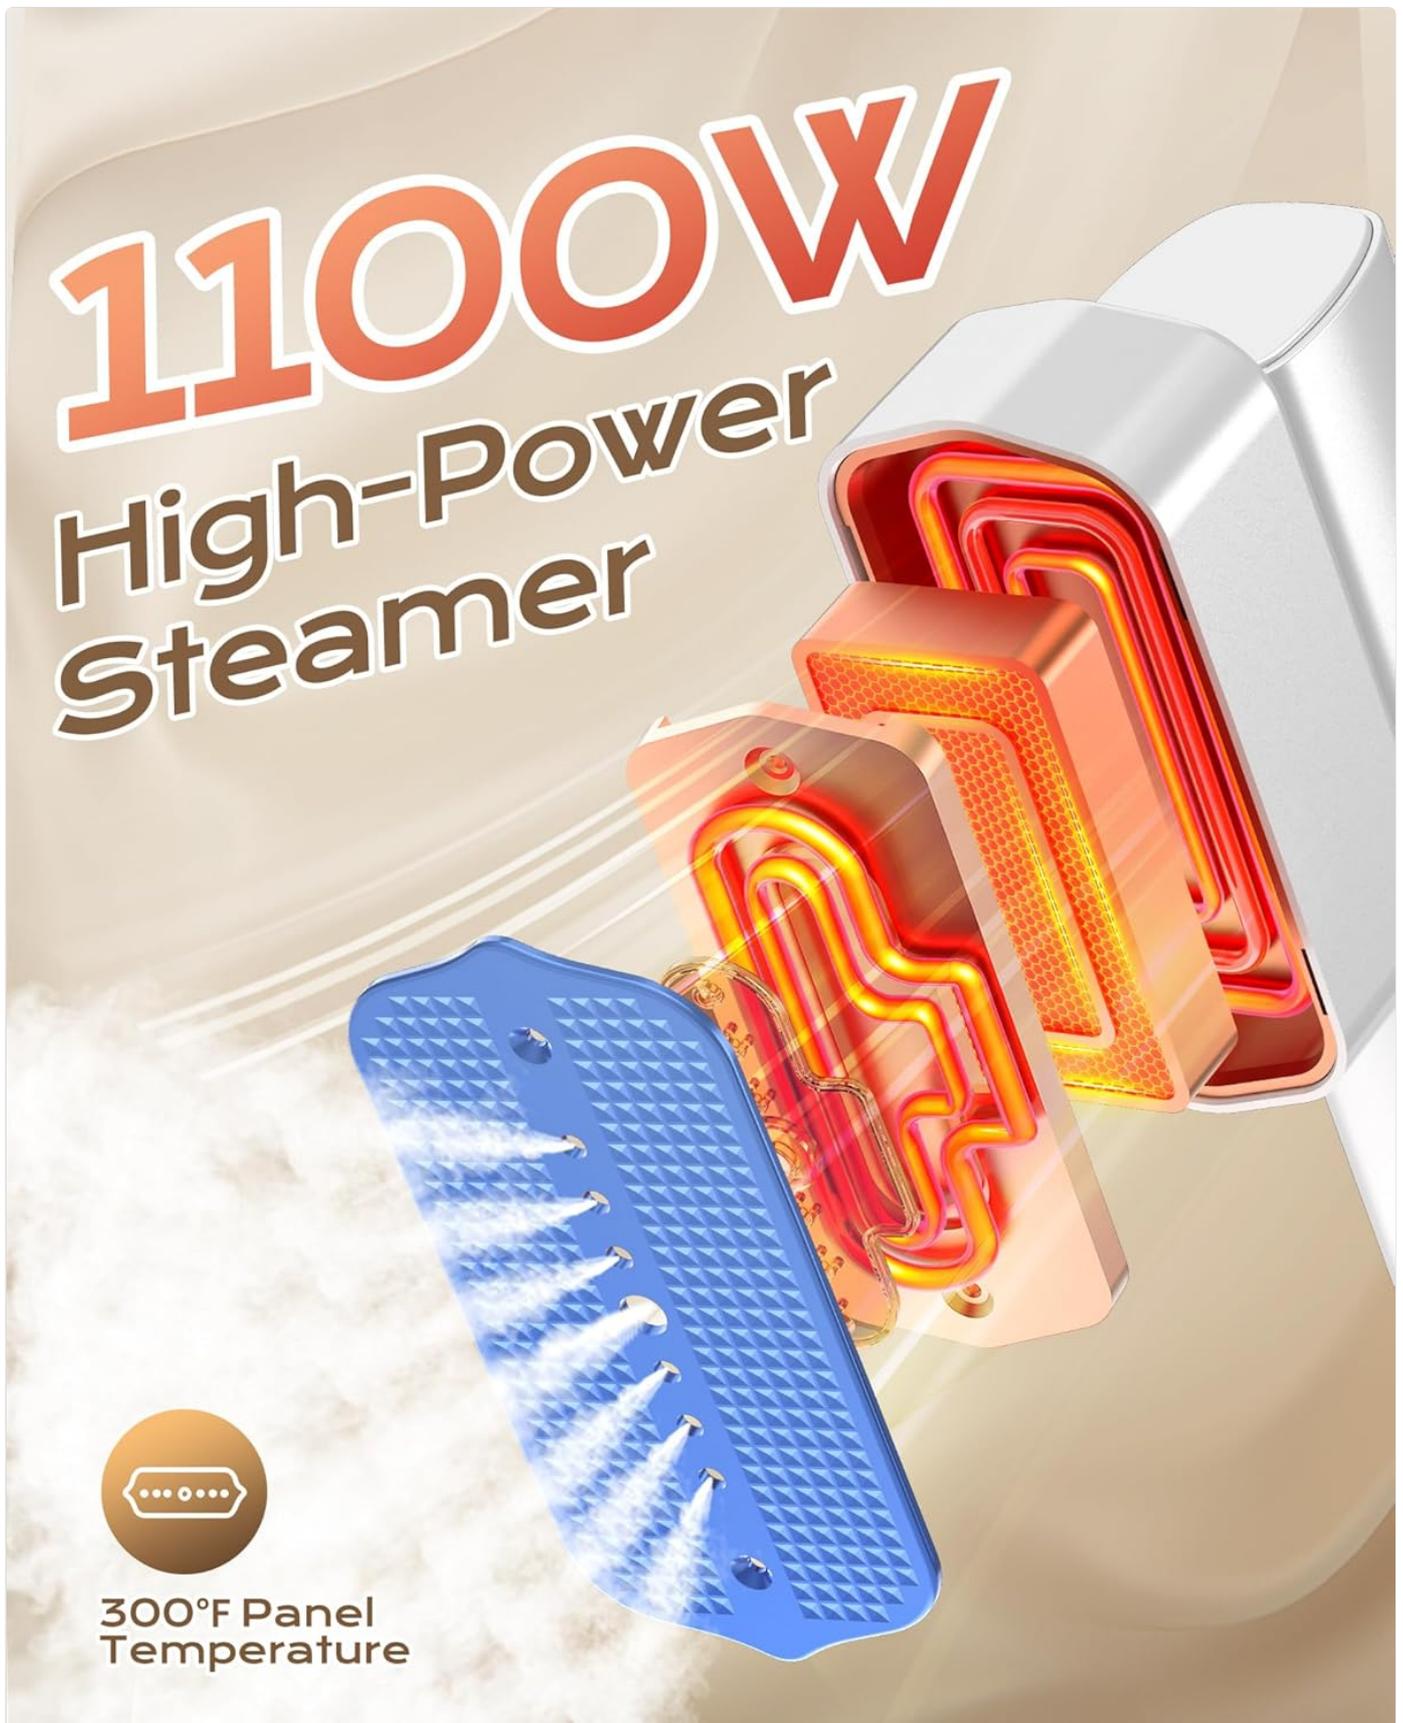


Figure 3: Steamer's internal heating elements and high power indication.

## SETUP

---

Follow these steps to prepare your steamer for use:

1. **Fill the Water Tank:** Detach the water tank from the steamer unit. Use the provided measuring cup to fill the tank with distilled or de-mineralized water. Do not exceed the maximum fill line.

2. **Attach Water Tank:** Securely snap the filled water tank back into the base of the steamer unit until it clicks into place.
3. **Plug In:** Insert the power plug into a standard 110-130V AC electrical outlet.
4. **Preheat:** The indicator light on the steamer will begin flashing, indicating it is preheating. Wait until the indicator light stops flashing (approximately 25 seconds) and remains solid, signifying that the steamer has reached its operating temperature of 300°F (150°C) and is ready to produce steam.



Figure 4: Visual guide for filling the water tank, attaching it, plugging in, and pressing the steam button.

## OPERATING INSTRUCTIONS

---

Your Dovety steamer offers flexible steaming and ironing options:

1. **Activate Steam:** Once preheated, press the steam button to release steam. The steamer delivers powerful 212°F (100°C) high-temperature steam.
2. **Select Steam Mode:** The steamer features 3 steam modes (Low, Medium, High) to suit different fabric types. Press the steam button repeatedly to cycle through the modes. Adjust the steam intensity based on the fabric's delicacy and wrinkle severity.
3. **Vertical Steaming:** For hanging garments, hold the steamer vertically, keeping the steaming plate a few inches from the fabric. Move the steamer slowly downwards over the wrinkles. This method is ideal for delicate fabrics, drapes, and quick touch-ups.
4. **Horizontal Ironing:** For a more pressed finish, lay the garment flat on a heat-resistant surface. The 90° rotating steam head allows you to use the steamer like a traditional iron. Gently press the steaming plate onto the fabric and move it across the surface.
5. **Fabric Compatibility:** This steamer is suitable for a wide range of fabrics including silk, lace, organza, cotton, linen, nylon, denim, and wool. Always test on an inconspicuous area first.

# Wrinkle Removal in Seconds



Figure 5: The steamer quickly removes wrinkles in seconds.

# Pick Your Steam Effects: **3 Options**



**Low  
steam**



**Medium  
steam**



**High  
steam**

Please wait until the indicator light stops flashing and the garment steamer is preheated before starting to use it!

Figure 6: Choose from Low, Medium, or High steam settings.

# Flat ironing & Hanging steaming



Figure 7: The steamer supports both vertical steaming and horizontal ironing.

# Multi-Fabric Compatibility

Wool/Cotton/Linen/Fiber  
/Silk/Polyester



Figure 8: The steamer is compatible with various fabrics including wool, cotton, linen, fiber, silk, and polyester.

## MAINTENANCE AND CARE

---

Proper maintenance ensures the longevity and optimal performance of your steamer:

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Detach the water tank and empty any remaining water.

- **Clean Steaming Plate:** Wipe the steaming plate with a soft, damp cloth to remove any residue. Do not use abrasive cleaners or scouring pads.
- **Descaling (Monthly):** If you notice reduced steam output or mineral buildup, mix equal parts white vinegar and distilled water in the tank. Heat the steamer and allow it to steam for a few minutes. Then, unplug and let it cool. Repeat with clean distilled water to rinse.
- **Storage:** Once completely cool and dry, store the steamer in its provided storage bag or on its heat insulated base in a cool, dry place.



Figure 9: The steamer features a 90° rotating ironing board and comes with a heat insulated base for cooling and storage.

## TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam output.	Water tank is empty or low. Steamer not preheated. Power cord not properly plugged in.	Refill water tank. Wait for indicator light to stop flashing. Ensure plug is securely in outlet.
Water leakage.	Water tank not securely attached. Overfilled water tank. Steamer not fully preheated before use.	Re-attach water tank firmly. Do not overfill. Wait until indicator light stops flashing before steaming.
Steamer not heating up.	No power. Faulty outlet.	Check power connection. Try a different outlet.
Reduced steam output.	Mineral buildup.	Perform descaling procedure as described in the Maintenance section.

## SPECIFICATIONS

Feature	Detail
Brand	Dovety
Model Number	LM-2401

Feature	Detail
Color	White
Product Dimensions	8.5"L x 3.6"W x 2.3"H
Wattage	1100 watts
Voltage	130 Volts (for 110-130V countries/regions)
Water Tank Capacity	100 Milliliters
Continuous Steaming Time	Over 10 minutes
Heat-up Time	Approx. 25 seconds
Panel Temperature	Up to 300°F (150°C)
Steam Temperature	212°F (100°C)
Steam Flow Rate	Up to 0.8oz/g
Item Weight	1.76 pounds

## WARRANTY AND SUPPORT

---

Dovety products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Dovety website. Please retain your proof of purchase for warranty claims.

