

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Wuden](#) /

> [Wuden Immersion Hand Stick Blender Instruction Manual](#)

Wuden Immersion Hand Stick Blender

Wuden Immersion Hand Stick Blender Instruction Manual

Model: Immersion Hand Stick Blender

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Wuden Immersion Hand Stick Blender. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or other liquids. Only the blending shaft is designed for immersion.
- Keep hands, hair, clothing, and utensils away from the blending blade during operation to prevent injury.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The blender is designed for processing soft to medium-hard foods. It is not a professional juicer and may not effectively process very hard fruits or vegetables.
- Use only attachments recommended or sold by the manufacturer.

PRODUCT OVERVIEW

The Wuden Immersion Hand Stick Blender is designed for blending, pureeing, and mixing various food items directly in your cooking container. It features a durable stainless steel blending shaft and an ergonomic handle for comfortable use.



Image: Overview of the Wuden Immersion Hand Stick Blender, showing the motor unit, blending shaft, and blade guard.

Components:

- **Motor Unit:** Contains the motor and control button.
- **Blending Shaft:** Detachable stainless steel shaft with a blade guard and blending blade.
- **Power Cord:** With US Plug (AC100-240V).

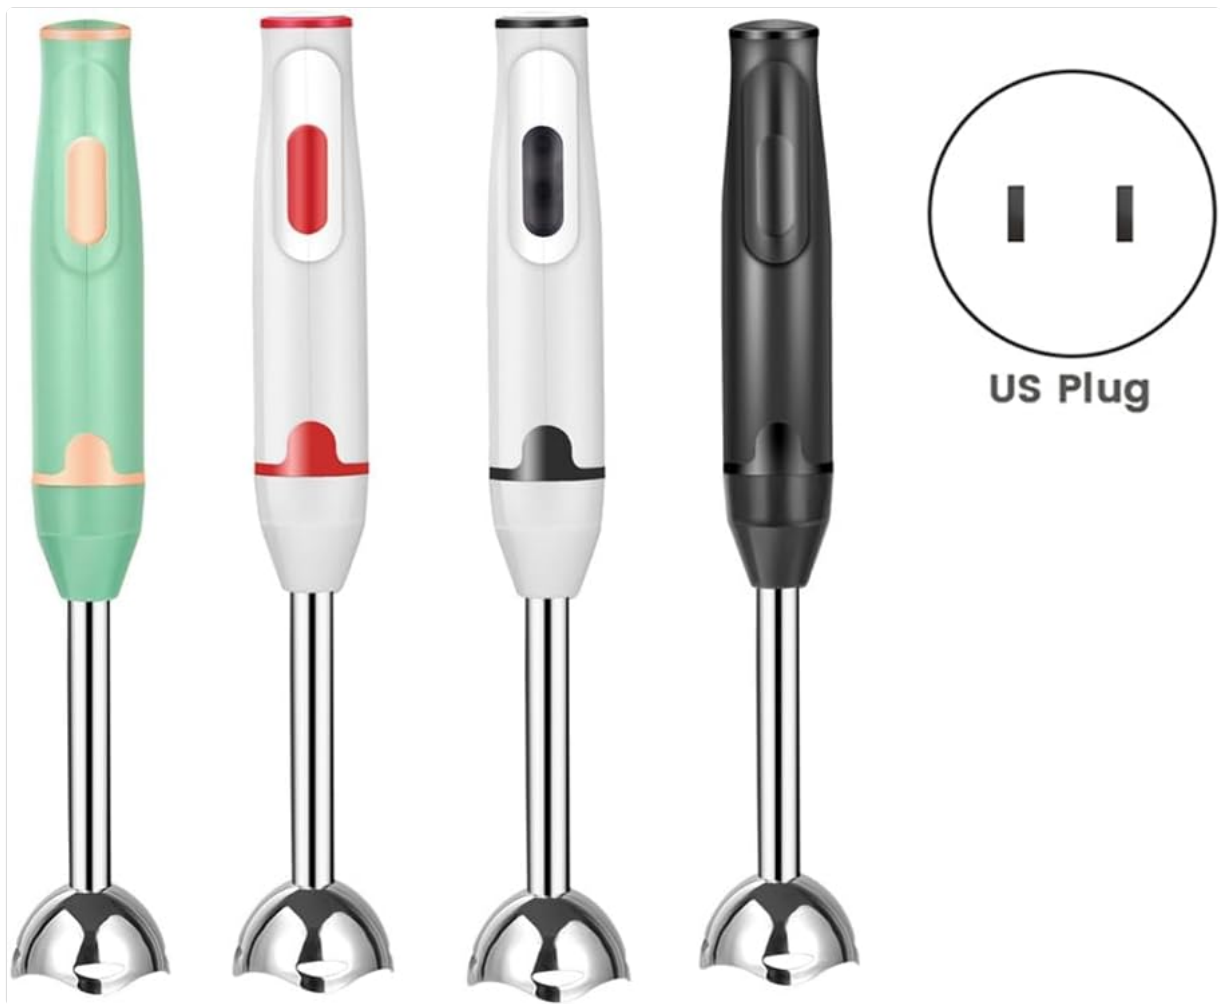


Image: Various color options of the Wuden Immersion Hand Stick Blender, highlighting the US plug type.

SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and the blending shaft is clean.

1. **Attach the Blending Shaft:** Align the blending shaft with the motor unit. Push and twist gently until it locks securely into place.
2. **Connect to Power:** Plug the power cord into a standard US electrical outlet (AC100-240V).



Image: Illustration showing how to attach the blending shaft to the motor unit and how to clean the blending shaft under running water.

OPERATING INSTRUCTIONS

The Wuden Immersion Hand Stick Blender is designed for simple, one-button operation.

1. **Prepare Ingredients:** Cut larger food items into smaller pieces for easier blending. Place ingredients in a suitable container, such as a glass container or boiling pot.
2. **Immerse the Blender:** Submerge the blending shaft into the ingredients. Ensure the blade guard is fully covered by the food to prevent splashing.
3. **Start Blending:** Press and hold the power button on the motor unit to begin blending. Move the blender gently up and down and in circular motions to ensure even blending.
4. **Stop Blending:** Release the power button to stop the blender.
5. **Remove from Food:** Once blending is complete, remove the blender from the food.

Note: The stainless steel panel helps prevent food from splashing during operation. This appliance is suitable for making purees, smoothies, shakes, sauces, and soups. It is not intended for crushing ice or processing extremely hard foods.



Image: The immersion blender in use, blending ingredients for orange juice and pureed pumpkin.



Image: The immersion blender positioned next to a bowl of soup and fresh ingredients, demonstrating its use for liquid-based recipes.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your immersion blender.

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Detach Blending Shaft:** Twist and pull the blending shaft to detach it from the motor unit.
3. **Clean Blending Shaft:** Rinse the blending shaft, including the blade and blade guard, under running water immediately after use. For stubborn food residue, use a mild dish soap and a brush. The stainless steel construction makes it easy to clean.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. **Do not immerse the motor unit in water or any other liquid.**
5. **Dry and Store:** Ensure all parts are thoroughly dry before reassembling or storing the blender. Store in a dry place.



Image: A close-up view of the stainless steel blending blade and guard, illustrating the design for efficient blending and easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Wuden Immersion Hand Stick Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in, power outlet not working, blending shaft not properly attached.	Ensure the blender is securely plugged into a working outlet. Check if the blending shaft is correctly locked into the motor unit.

Problem	Possible Cause	Solution
Blender stops during operation.	Overheating due to prolonged use or processing overly hard ingredients.	Unplug the blender and let it cool down for at least 30 minutes. Reduce the load or cut ingredients into smaller pieces.
Food is not blending smoothly.	Insufficient liquid, ingredients too large, or blender not moved adequately.	Add more liquid if necessary. Cut ingredients into smaller, uniform pieces. Move the blender up and down and in circular motions for better results.
Splashing occurs during blending.	Blender not fully immersed, or container too full.	Ensure the blade guard is fully submerged in the food. Use a deeper container or reduce the amount of food.

SPECIFICATIONS

Brand	Wuden
Model	Immersion Hand Stick Blender
ASIN	B0F5HPBF2V
Plug Type	US Plug
Voltage	AC100-240V
Material	Plastic (Motor Unit), Stainless Steel (Blending Shaft)
Product Dimensions	15.35 x 2.76 x 2.76 inches (39 x 7 x 7 cm)
Item Weight	1.12 pounds (510 Grams)
Batteries Required	No



Image: Diagram illustrating the dimensions of the immersion blender, showing a total length of 38cm and a blending head width of 6.3cm.

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the product details. For any inquiries or support needs, please refer to the retailer or manufacturer's official website where the product was purchased.

