

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MIRASTON](#) /

> [MIRASTON 10QT Dual Basket Air Fryer Instruction Manual](#)

MIRASTON Upgraded Large 10QT Dual

MIRASTON 10QT Dual Basket Air Fryer Instruction Manual

Model: Upgraded Large 10QT Dual

1. INTRODUCTION

Thank you for choosing the MIRASTON 10QT Dual Basket Air Fryer. This appliance is designed to provide a healthier and more efficient way to cook your favorite meals. With its dual baskets and smart cooking functions, you can prepare multiple dishes simultaneously with precision and ease. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. PRODUCT FEATURES

- **Large 10-Quart Dual Basket:** Cook two different foods at once, perfect for family meals. Each basket offers ample space for various ingredients.
- **Smart SyncCook & Match Finish Technology:** Automatically adjusts cooking times and temperatures across both baskets to ensure both dishes finish cooking simultaneously.
- **Precision Digital Control Per Basket:** Independently set time and temperature (up to 400°F) for each basket, allowing for versatile cooking.
- **Premium Materials:** Crafted with high-quality stainless steel and non-toxic materials for safe and healthy cooking.
- **Easy Cleanup:** Both baskets and crisper trays are dishwasher-safe.
- **Versatile Cooking Functions:** Includes Air Frying, Reheat, Bake, Roast, Broil, Dehydrate, and Keep Warm settings.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials and any promotional labels from the air fryer.
2. **Clean Components:** Wash the baskets and crisper trays with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it directly against a wall or under cabinets.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate briefly.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. **Power On:** Press the power button () to turn on the unit. The display will show default settings or 'On'.
2. **Select Zone:** Choose 'Zone 1' or 'Zone 2' on the digital touchscreen to activate the desired basket.
3. **Choose Cooking Function:** Select one of the preset cooking functions (e.g., Air Fry, Bake, Roast) by tapping the corresponding icon.
4. **Adjust Temperature and Time:** Use the '+' and '-' buttons to adjust the temperature and time for the selected zone. Tap the 'Temp/Time' button to switch between adjusting temperature and time.
5. **Preheat (Optional):** Tap the 'Preheat' button if desired. The unit will display 'Pre' and 'Heat' while preheating. It will beep and prompt to 'Add Food' once preheated.
6. **Start Cooking:** Press the 'Start' button to begin the cooking cycle.
7. **Turn Reminder:** During cooking, the unit may beep and display 'Turn Reminder' to prompt you to shake or flip food for even cooking.
8. **Stop/Cancel:** Press 'Stop/Cancel' to pause or end the cooking cycle.

4.2 Smart Sync Cook & Match Finish

These features are designed for cooking different items in each basket, ensuring they finish at the same time or with identical settings.

- **Smart Finish:** Allows you to cook two different foods with different settings (time and temperature) in each basket, and the air fryer will automatically adjust the start times so both zones finish simultaneously.
- **Match Cook:** Use this function when you want both baskets to cook with the exact same settings (function, time, and temperature). Set the desired settings for one zone, then press 'Match Cook' to apply them to the other zone.

Official MIRAston video demonstrating the Dual Basket Air Fryer's capabilities, including the Smart Sync Cook and Match Finish functions. This video highlights how to cook two different foods simultaneously, ensuring they are ready at the same time.

5. MAINTENANCE & CLEANING

Proper maintenance ensures the longevity and performance of your MIRAston Air Fryer.

- **Unplug Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** The non-stick baskets and crisper trays are dishwasher-safe for convenient cleaning.
- **Hand Washing:** For stubborn residue, soak the baskets and trays in warm, soapy water before scrubbing with a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Avoid Abrasives:** Do not use metal scouring pads or harsh abrasive cleaners, as they can damage the non-stick coating.

6. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Overcrowding baskets; Not shaking/flipping food.	Do not overcrowd the baskets. Shake or flip food when prompted by the 'Turn Reminder'.
White smoke coming from the unit.	Grease residue; Fatty foods.	Clean the baskets and crisper trays thoroughly. For fatty foods, drain excess oil during cooking.
Display shows an error code.	Internal malfunction.	Unplug the unit, wait 10 minutes, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	MIRASTON
Model Name	Upgraded Large 10QT Dual
Capacity	10 Quarts (Dual Basket)
Color	Silver digital
Material	Stainless Steel
Product Dimensions	16"D x 15"W x 12.8"H
Item Weight	17.6 Pounds
Output Wattage	1700 Watts
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Special Features	Automatic Shut-Off, Dual Zone Features, Temperature Control, Timer
Dishwasher Safe Components	Yes (Baskets & Crisper Trays)

8. WARRANTY & SUPPORT

MIRASTON products are designed for quality and durability. For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided in your product packaging or visit the official MIRASTON website. Keep your purchase receipt as proof of purchase for any warranty claims.

