

[Manuals.plus](#) /

› [ONEMIX](#) /

› ONEMIX 42-inch LED Desk Lamp User Manual

ONEMIX Desk Lamp

ONEMIX 42-inch LED Desk Lamp User Manual

Model: Desk Lamp

INTRODUCTION

The ONEMIX 42-inch LED Desk Lamp is designed to provide versatile and eye-friendly illumination for various workspaces. It features a 4-segment architect-style light bar with independently rotatable panels, allowing for both focused and wide-area lighting. With 1800 lumens of flicker-free brightness, it is suitable for dual monitor setups, crafting, reading, and general office use.

This lamp offers 5 brightness levels and 5 color temperatures (3200K–6500K) for customized lighting. Control options include built-in buttons and a wireless remote, providing convenience and flexibility. The lamp is equipped with premium eye-caring LEDs to reduce flicker, glare, and blue light, promoting visual comfort during extended use. Its adjustable 27.7-inch support arm and sturdy 2.5 lb weighted base ensure stability and precise positioning, complemented by a built-in phone holder.

PACKAGE CONTENTS

Please verify that all components are present in the package:

- 1 x 42-inch LED Desk Lamp
- 1 x 27.7-inch Adjustable Arm
- 1 x Sturdy Base with Phone Holder
- 1 x 24W Power Adapter (with 150cm cable)
- 1 x Wireless Remote Control (requires 2xAAA batteries, not included)
- 1 x Screw Set
- 1 x Screwdriver
- 1 x User Manual



Figure 1: Included components of the ONEMIX Desk Lamp. Please ensure all items are present before assembly.

SETUP INSTRUCTIONS

Follow these steps to assemble and set up your ONEMIX 42-inch LED Desk Lamp:

1. **Assemble the Arm:** Connect the upper and lower segments of the adjustable arm.
2. **Mount to the Base:** Insert the assembled arm into the weighted base. Secure it by tightening the short screw provided.
3. **Attach the Lamp Head:** Insert the LED lamp panel into the arm slot and connect the cable securely.
4. **Connect Power:** Connect the arm cable to the power adapter, then plug the power adapter into a standard wall outlet.

Your browser does not support the video tag.

Video 1: A step-by-step guide demonstrating how to assemble and set up your ONEMIX Desk Lamp, including connecting the arm segments, securing the base, attaching the lamp head, and plugging in the power adapter.

Figure 2: Visual guide for the quick and easy setup process of the ONEMIX Desk Lamp.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button on the lamp base or the remote control to turn the lamp on or off.

Adjusting Brightness and Color Temperature

The lamp offers 5 brightness levels and 5 color temperatures (3200K, 3500K, 4000K, 5000K, 6500K).

- **Using Buttons:** On the lamp base, use the 'Brightness +' and 'Brightness -' buttons to adjust brightness. Use the 'Color Temp' button to cycle through color temperatures.
- **Using Remote Control:** The remote control provides dedicated buttons for increasing/decreasing brightness and cycling through color temperatures.



Figure 3: Illustration of the 5 adjustable color temperatures and 5 brightness levels.

Preset Modes and Timer Function

The wireless remote control allows access to several preset lighting modes and a timer function:

- **Preset Modes:** Select from Work, Game, Study, Relax, Night, and Mother & Baby modes for optimized lighting scenarios.
- **Timer:** Set the lamp to automatically turn off after 1, 2, or 4 hours.



Figure 4: The wireless remote control offers comprehensive control over lamp settings and preset modes.

Adjusting the Light Bar and Arm

The 4-segment light bar features independently rotatable panels. The 27.7-inch support arm has a flexible gooseneck section allowing 180° front-and-back bending.

- **Light Bar Adjustment:** Fold segments inward for focused lighting or swivel them outward to cover a wider area (up to 80 inches).
- **Arm Adjustment:** Position the arm to direct light precisely where needed.

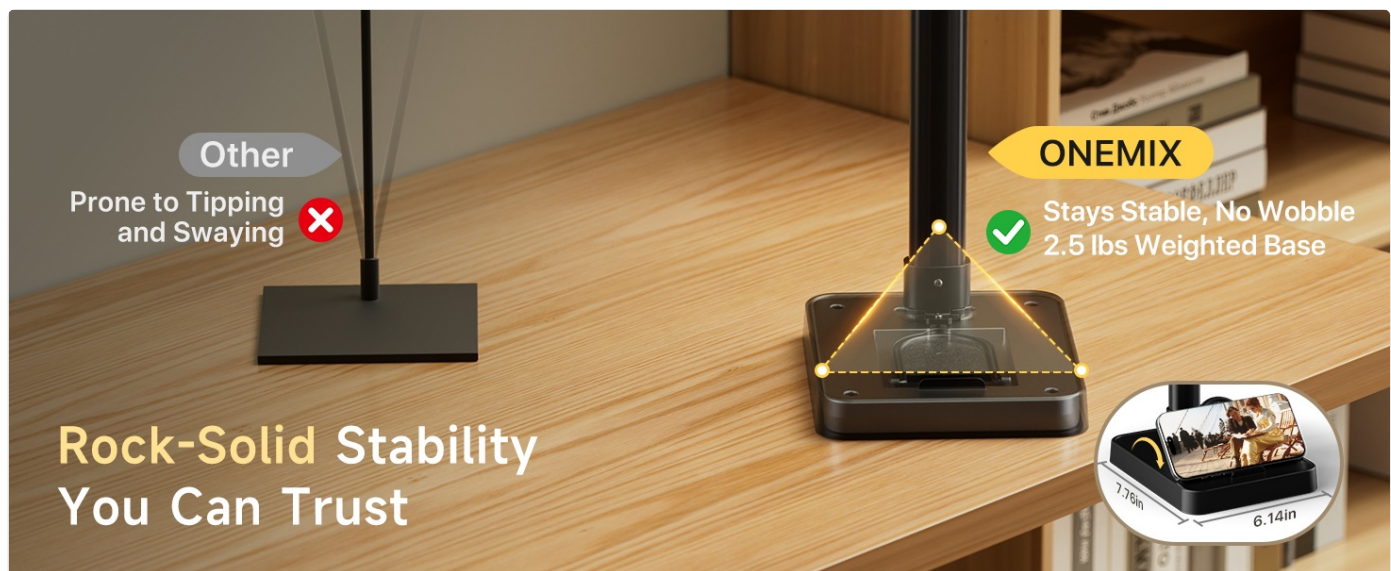


Figure 5: The flexible light bar allows for various lighting angles and coverage.

MAINTENANCE

To ensure the longevity and optimal performance of your ONEMIX LED Desk Lamp, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the lamp's surfaces. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electronic components.
- **Dust Removal:** Regularly dust the LED panels and joints to prevent accumulation that could affect light output or flexibility.
- **Cable Care:** Ensure the power cable is not bent sharply, pinched, or placed under heavy objects. This prevents damage to the cable and ensures a stable power supply.
- **Storage:** If storing the lamp for an extended period, disconnect it from power and store it in a dry, cool place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your ONEMIX LED Desk Lamp, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lamp does not turn on	No power supply; Loose connection; Faulty adapter/outlet	Ensure power adapter is securely plugged into the lamp and a working wall outlet. Try a different outlet. Check all cable connections.
Remote control not working	Dead batteries; Obstruction; Remote out of range	Replace batteries (2xAAA, not included). Ensure there is a clear line of sight between the remote and the lamp's receiver. Operate within the recommended range.
Light flickers or is unstable	Unstable power supply; Loose connection; Environmental interference	Check power connections. Ensure the power adapter is functioning correctly. Avoid using the lamp with other high-power devices on the same circuit if flickering persists.

Problem	Possible Cause	Solution
Lamp arm or head is stiff/difficult to adjust	Dust or debris in joints; Over-tightened screws	Gently clean around the joints. Do not force adjustment; if screws were tightened during assembly, ensure they are not excessively tight.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	42"D x 1.57"W x 27.7"H
Light Source Type	LED
Wattage	24 watts
Brightness	1800 Lumens
Color Temperatures	5 levels (3200K–6500K)
Brightness Levels	5 levels
Control Method	Push Button, Remote
Base Material	Plastic (weighted)
Arm Material	ABS Plastic
Weighted Base	2.5 lbs
Light Bar Length	42 inches
Adjustable Arm Length	27.7 inches
Power Adapter	24W with 150cm cable
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

Your ONEMIX LED Desk Lamp comes with the following coverage:

- **90-Day Refund Policy:** Eligible for a refund within 90 days of purchase.
- **1-Year Warranty:** Covers manufacturing defects and malfunctions for one year from the date of purchase.

For any questions, technical assistance, or warranty claims, please contact our support team:

Email: lamp-service@outlook.com

Our support team aims to reply within 12 hours.



Figure 6: ONEMIX customer support information.

© 2026 ONEMIX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F5HR7GND>

More documents and user manuals: <https://manuals.plus/>