

Keurig KSK910GY

Keurig K-Supreme Single Serve K-Cup Pod Coffee Maker

Model: KSK910GY

INTRODUCTION

Welcome to the user manual for your Keurig K-Supreme Single Serve Coffee Maker. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new coffee maker to ensure optimal performance and enjoyment. Please read all instructions carefully before first use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or the coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Keurig K-Supreme coffee maker is designed for convenience and versatility, offering a personalized brewing experience with its advanced features.

Key Features:

- **MultiStream Technology:** Extracts more flavor and aroma from every K-Cup pod.
- **Customizable Brew:** Brew a stronger cup or brew hot over ice for refreshing iced coffee.
- **Multiple Brew Sizes:** Offers 6, 8, 10, or 12 oz. cup sizes.
- **66 oz. Dual-Position Reservoir:** Large capacity water reservoir that can be positioned on the side or rear for optimal counter space. Easy to remove for refilling.
- **Fast & Fresh-Brewed:** Delivers coffee in minutes.
- **Back-to-Back Brewing:** Allows immediate brewing of a second cup without waiting for reheating.
- **Travel Mug Friendly:** Accommodates travel mugs up to 7 inches tall.
- **Simple Button Controls:** Intuitive controls for easy operation.
- **Maintenance Alert:** Reminds you to descale after every 250 brews.

Product Components:



Figure 1: Keurig K-Supreme Single Serve Coffee Maker in use, brewing coffee into a red mug.

KEURIG
K-Supreme™
SINGLE SERVE COFFEE MAKER



Figure 2: A hand inserting a K-Cup pod into the Keurig K-Supreme coffee maker, demonstrating the ease of use.



Figure 3: Detailed diagram illustrating the product dimensions of the Keurig K-Supreme, showing configurations with the water reservoir positioned on the side and in the rear.



66 oz. DUAL-POSITION RESERVOIR

Choose the perfect position for optimal counter space



Figure 4: Top-down view showcasing the dual-position 66 oz. water reservoir of the Keurig K-Supreme, highlighting its flexibility for counter space.

SETUP

1. Initial Cleaning:

Before first use, remove all packing materials and wipe down the exterior of the coffee maker with a damp cloth. The drip tray and water reservoir should be washed with warm, soapy water and rinsed thoroughly.

2. Filling the Water Reservoir:

The 66 oz. water reservoir can be positioned on either the side or the rear of the coffee maker to best suit your counter space. Remove the reservoir lid, fill the reservoir with fresh, filtered water up to the MAX fill line, and replace the lid. Ensure the reservoir is securely seated on the coffee maker.



Figure 5: Water being poured into the removable water reservoir of the Keurig K-Supreme, demonstrating the ease of refilling.

3. Cleansing Brew:

Perform a cleansing brew to prime the coffee maker and remove any manufacturing residue. Place a large mug on the drip tray. Do not insert a K-Cup pod. Press the power button to turn on the brewer. Select a 12 oz. brew size. The brewer will dispense hot water. Discard the hot water. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Brewing with your Keurig K-Supreme is simple and intuitive.

1. Power On:

Press the power button located on the control panel to turn on the coffee maker. The lights will illuminate.

2. Insert K-Cup Pod:

Lift the handle to open the K-Cup pod holder. Place a K-Cup pod into the holder. Lower the handle completely to close the holder. Do not remove the foil lid from the K-Cup pod.

3. Select Brew Size:

Place a mug or travel mug on the drip tray. The K-Supreme offers multiple brew sizes: 6 oz., 8 oz., 10 oz., and 12 oz. Select your desired brew size from the control panel.



Figure 6: Close-up view of the Keurig K-Supreme control panel, showing the various brew size options (6oz, 8oz, 10oz, 12oz) along with strength, temperature, and over ice buttons.

4. Customize Your Brew (Optional):

- **Strength:** For a bolder cup, select the 'STRONG' button before choosing your brew size.
- **Over Ice:** To brew over ice, fill a large cup with ice and place it on the drip tray. Insert your K-Cup pod and select the 'OVER ICE' button before choosing your brew size. This setting optimizes the brew for iced beverages.



CUSTOMIZE YOUR CUP

Brew a stronger cup, or brew hot over ice for refreshing iced coffee



Figure 7: The Keurig K-Supreme brewing coffee directly over ice into a tall glass, demonstrating its iced coffee capability.

5. Start Brewing:

Once your selections are made, the brew button will flash. Press the brew button to start the brewing process. The coffee maker will automatically dispense the selected amount of coffee.

6. After Brewing:

Once brewing is complete, lift the handle to remove the used K-Cup pod. Dispose of the pod. The coffee maker is ready for the next brew.

MAINTENANCE

Regular cleaning and maintenance will ensure your Keurig K-Supreme continues to perform at its best.

1. Cleaning the Drip Tray:

The drip tray can accumulate drips and spills. Remove the drip tray and wash it with warm, soapy water. Rinse thoroughly and dry. The drip tray is also dishwasher safe (top rack only).

2. Cleaning the Exterior:

Wipe the exterior of your coffee maker with a damp, non-abrasive cloth. Do not immerse the coffee maker in water or other liquids.

3. Descaling:

Over time, calcium deposits (scale) can build up in your coffee maker, affecting performance. The 'DESCALE' indicator light will illuminate after approximately 250 brews to remind you to descale. Follow the descaling instructions provided in the full Keurig K-Supreme manual or on the Keurig website. A typical descaling solution involves using a descaling agent or white vinegar.

4. Water Filter (Optional):

If your model includes a water filter, replace it every 2 months or 60 tank refills for best results. Refer to the water filter instructions for proper installation and replacement.

TROUBLESHOOTING

If you encounter issues with your Keurig K-Supreme, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a grounded outlet. Check if the outlet is functional.
'ADD WATER' light is on.	Water reservoir is low or empty.	Refill the water reservoir to the MAX fill line. Ensure it is properly seated.
'DESCALE' light is on.	Calcium buildup in the brewer.	Perform a descaling procedure as outlined in the Maintenance section.
No coffee or partial brew.	Water reservoir low; K-Cup pod not properly seated; brewer needs priming.	Check water level. Ensure K-Cup pod is correctly inserted and handle is fully lowered. Perform a cleansing brew without a K-Cup pod.
Coffee tastes weak or watery.	K-Cup pod not suitable for selected brew size; brewer needs descaling.	Try a smaller brew size or a K-Cup pod designed for stronger coffee. Descale the brewer if the light is on or if it hasn't been done recently.

For more detailed troubleshooting, please visit the official Keurig support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	Keurig

Feature	Detail
Model Name	K-Supreme
Item Model Number	KSK910GY
Color	Gray
Special Features	Automatic Shut-Off, Removable Water Reservoir, Fits Travel Mug, Brews Iced Coffee
Voltage	120 Volts
Product Dimensions	10.12 x 14.84 x 14.41 inches (L x W x H)
Item Weight	8.1 pounds
Water Reservoir Capacity	66 oz.
Brew Sizes	6, 8, 10, 12 oz.
UPC	732388546749

WARRANTY & SUPPORT

This Keurig K-Supreme coffee maker is a renewed product. For specific warranty information, please refer to the documentation included with your purchase or contact the seller directly. Keurig also provides customer support for their products. For assistance, visit the official Keurig website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.