

Richmat Richmat HJH103 Adjustable Bed Remote

Richmat HJH103 Adjustable Bed Remote User Manual

Model: HJH103

Brand: Richmat

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Richmat HJH103 Adjustable Bed Remote. Please read this manual thoroughly before using the remote to ensure proper function and longevity.

SETUP

1. Battery Installation

The HJH103 remote requires two (2) AA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back of the HJH103 remote with the battery compartment open, showing two AA battery slots.

2. Pairing Instructions

The remote does not come pre-paired. You must pair it with your adjustable bed's control box. The general pairing method for Richmat remotes is as follows:

1. Ensure your adjustable bed is plugged into a power source.
2. Locate the pairing button on the side of your bed's control box. This button may be labeled "Pair," "Sync," or have a similar indicator.
3. On the HJH103 remote, simultaneously press and hold any combination of the "Head Up" or "Head Down" buttons AND "Foot Up" or "Foot Down" buttons.
4. While continuing to hold the remote buttons, press and hold the pairing button on the side of the control box.
5. Hold both sets of buttons until the bed responds or an indicator light on the control box or remote confirms successful pairing.

Note: Specific pairing instructions may vary slightly depending on your adjustable bed model. Refer to your bed's original user manual for precise pairing procedures if these general steps are unsuccessful.

OPERATING THE REMOTE

The HJH103 remote features intuitive buttons for controlling your adjustable bed. Below is a description of each button's function:







Figure 2: Front view of the HJH103 adjustable bed remote.

Button Description	Function
Icon: Person with head section raised	Raises the head section of the bed.
Icon: Person with head section lowered	Lowers the head section of the bed.
Icon: Person with foot section raised	Raises the foot section of the bed.
Icon: Person with foot section lowered	Lowers the foot section of the bed.
FLAT button	Returns the bed to a completely flat position.

Press and hold the desired button to continuously adjust the bed position. Release the button to stop movement.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Follow the battery installation steps outlined in the "Setup" section.

Cleaning

To clean the remote, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the remote in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or low batteries.	Replace the two AA batteries.
Remote not responding.	Remote is not paired with the bed.	Follow the "Pairing Instructions" in the Setup section.
Remote not responding.	Obstruction between remote and bed's receiver.	Ensure a clear line of sight between the remote and the bed's control box.
Bed moves erratically or not as expected.	Interference from other devices.	Move other electronic devices away from the bed and remote. Re-pair the remote if necessary.

SPECIFICATIONS

Feature	Detail
Model	HJH103
Brand	Richmat
Color	Silver
Power Source	2 x AA Batteries (not included)
Compatibility	Richmat adjustable beds (HJH103 series)
FCC ID	2AJUGJHJC0



Figure 3: Back of the HJH103 remote with product label.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your adjustable bed or contact the manufacturer directly. Keep your purchase receipt for warranty claims. For further assistance, you may also contact the seller, Miramonte Home, through the Amazon platform.