

MAXLEGEN M40

MAXLEGEN M40 14-inch Tablet Magnetic Case

User Manual

[Introduction](#) [Features](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Generic MAXLEGEN M40 14-inch Tablet Magnetic Case. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This case is designed specifically for the MAXLEGEN M40 14-inch tablet and is not compatible with other models.

2. PRODUCT FEATURES

The MAXLEGEN M40 Tablet Magnetic Case offers comprehensive protection and enhanced functionality for your device. Key features include:

- **Compatibility:** Exclusively designed for the MAXLEGEN M40 14-inch tablet.
- **Durable Protection:** Constructed from high-quality synthetic leather, providing resistance against scratches, dust, and accidental drops.
- **Shockproof Design:** Features thickened corners and a robust structure for heavy-duty shock absorption.
- **Waterproof & Anti-fouling:** Ultra-dense nano-coating resists everyday splashes and prevents stains.
- **Magnetic Closure:** Securely holds the case closed and supports automatic sleep/wake functionality.
- **Multi-Angle Stand:** Integrated foldable stand allows for comfortable viewing and typing angles (e.g., 30° for typing, 65° for video).
- **Hand Strap:** An adjustable strap for secure one-handed holding of the tablet.
- **Pen Slot:** Conveniently stores your stylus or pen.
- **Soft Lining:** Interior soft lining protects the tablet screen from scratches.
- **Precision Cutouts:** Ensures full access to all ports, buttons, and cameras.
- **Slim & Lightweight:** Designed to add minimal bulk while offering maximum protection.



Figure 2.1: Product Details. This image illustrates the case's skin-friendly and high-quality material, circular arc design for comfort, anti-fingerprint surface, soft interior lining, precise cutouts, integrated hand strap, and multi-angle bracket design.



Figure 2.2: Automatic Sleep/Wake Function. The magnetic design enables the tablet to automatically wake up when the cover is opened and sleep when closed, conserving battery life.



Figure 2.3: Dual-Purpose Multi-Angle Stand. The integrated stand provides two primary angles: approximately 30 degrees for typing or work, and 65 degrees for video viewing or entertainment.



Figure 2.4: Comprehensive Protection. This image highlights the case's robust protection against scratches, fouling, and impacts, featuring thickened corners for all-round defense.

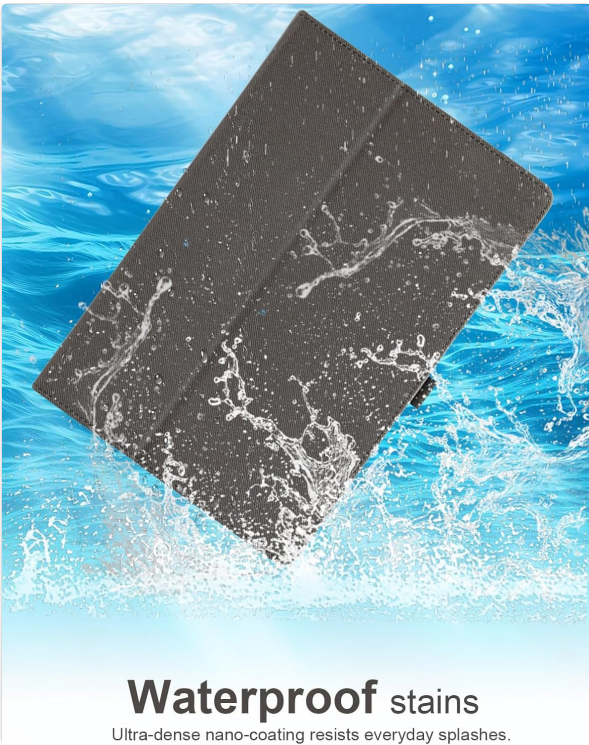


Figure 2.5: Waterproof Feature. The case features an ultra-dense nano-coating designed to resist everyday splashes and prevent water stains.



Figure 2.6: Slim and Lightweight Design. The case is engineered for a comfortable feel and a slim profile, adding minimal burden to your tablet.

3. SETUP: INSTALLING YOUR TABLET

Follow these steps to properly install your MAXLEGEN M40 tablet into the case:

1. **Prepare the Tablet:** Ensure your MAXLEGEN M40 tablet is clean and free of dust or debris.
2. **Align the Tablet:** Gently align the tablet with the case, ensuring that the camera cutout and port openings on

the case match those on your tablet.

3. **Insert the Tablet:** Carefully push the tablet into the soft shell of the case. Start with one side or corner and work your way around, ensuring all edges are securely seated within the case's frame.
4. **Check Fit:** Verify that the tablet is snugly fitted and that all buttons, ports, and the camera are accessible and unobstructed.
5. **Close the Cover:** Close the magnetic front cover. The magnetic closure will secure the tablet and activate the automatic sleep function.

4. OPERATING INSTRUCTIONS

This section details how to use the various features of your tablet case.

4.1. Using the Multi-Angle Stand

The integrated foldable stand allows for versatile viewing and typing positions:

- **Typing/Work Mode (approx. 30°):** Fold the front cover back and position the tablet into the lower groove of the stand for a comfortable typing angle.
- **Viewing/Entertainment Mode (approx. 65°):** Fold the front cover back and position the tablet into the upper groove of the stand for an upright viewing angle, ideal for watching videos or presentations.

4.2. Automatic Sleep/Wake Function

The case features a magnetic sensor that automatically puts your tablet to sleep when the cover is closed and wakes it up when the cover is opened. This helps conserve battery life.

4.3. Using the Hand Strap

For secure one-handed holding, slide your hand through the elastic strap located on the back of the case. Adjust your grip for maximum comfort and stability.

4.4. Using the Pen Slot

Insert your stylus or pen into the designated slot on the side of the case for convenient storage and easy access.

5. MAINTENANCE AND CARE

To ensure the longevity and appearance of your tablet case, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the case to air dry completely after cleaning. Do not use direct heat sources.
- **Storage:** When not in use, store the case in a cool, dry place away from direct sunlight.
- **Avoid Sharp Objects:** While the case is anti-scratch, avoid contact with sharp objects to prevent damage to the material.

6. TROUBLESHOOTING

If you encounter any issues with your tablet case, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tablet does not fit properly.	Incorrect tablet model.	Ensure your tablet is the MAXLEGEN M40 14-inch model. This case is not universal for all 14-inch tablets.
Automatic sleep/wake function not working.	Tablet not properly seated; magnetic sensor obstructed; tablet settings.	Ensure the tablet is fully inserted and aligned. Check your tablet's settings for 'Smart Cover' or 'Magnetic Cover' functionality and ensure it is enabled.
Case appears dirty or stained.	Accumulated dirt or minor spills.	Clean the case as described in the Maintenance section (Section 5).

7. SPECIFICATIONS

Feature	Detail
Product Name	MAXLEGEN M40 14-inch Tablet Magnetic Case
Brand	Generic
Model Number	for MAXLEGEN M40
Compatible Devices	MAXLEGEN M40 14-inch Tablet
Material	High-quality Synthetic Leather (PU Leather)
Color	Grey
Form Factor	Case
Case Type	Soft Shell
Maximum Compatible Device Size	14 Inches
Special Features	Magnetic, Shockproof, Waterproof, Anti-scratch, Multi-angle Stand, Hand Strap, Pen Slot
Water Resistance Level	Water Resistant (Splash-proof)
Package Dimensions	33.1 x 22.4 x 1.7 cm
Item Weight	300 g
Components Included	1 x Tablet Case

8. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is typically provided by the retailer or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for details on warranty coverage and support options for your Generic MAXLEGEN M40 Tablet Magnetic Case.

© 2025 Generic. All rights reserved.