

[manuals.plus](#) /› [TOOLTOP](#) /› **TOOLTOP ET120M 120MHz Handheld Digital Oscilloscope User Manual**

TOOLTOP ET120M

TOOLTOP ET120M 120MHz Handheld Digital Oscilloscope User Manual

Model: ET120M | Brand: TOOLTOP

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective operation of your TOOLTOP ET120M 120MHz Handheld Digital Oscilloscope. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

2. SAFETY INFORMATION

Always observe the following safety precautions when using the ET120M oscilloscope:

- Do not operate the device in wet or damp conditions.
- Ensure the device is powered off before connecting or disconnecting probes.
- Use only the provided accessories or approved replacements.
- Do not attempt to open or modify the device; refer all servicing to qualified personnel.
- Keep the device away from strong electromagnetic fields.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- TOOLTOP ET120M Handheld Digital Oscilloscope
- 100MHz Oscilloscope Probe
- USB Charging Cable
- User Manual
- Cloth Bag

100MHz Probe,Charging Cable USER Manual,Cloth bag



Figure 3.1: Package Contents

4. PRODUCT OVERVIEW

4.1. Device Features

The TOOLTOP ET120M is a compact and portable handheld digital oscilloscope designed for various electrical testing and repair applications. Key features include:

- 120MHz analog bandwidth and 500MS/s real-time sampling rate.
- 2.4-inch 320x240 clear color LCD screen.
- Integrated square wave signal output (1kHz, 10KHz, 100KHz, 1MHz).
- 12 types of automatic parameter measurements (Vpp, Vrms, Vavg, Vp, Vmax, Vmin, F, T, T+, T-, Du+, Du-).
- Three scan modes: Auto, Normal, and Single.
- Ability to store 2500 DSO waveforms with thumbnail browsing.
- Built-in rechargeable lithium battery for up to 6 hours of continuous use.
- Durable design with a silicone protective cover.

EIGHT ADVANTAGES

Meet your measurement needs

120MHz

120MHz Waveform bandwidth

3 Scan mode

Auto,Normal,Single three scan mode

AUTO

One-key waveform auto capture

Set Parameters

Time base, Sensitivity trigger edge

- ◆ Square wave output
- ◆ Lithium battery

- ◆ 2500 waveform save
- ◆ Lightweight, Color screen

Figure 4.1: Key Features Overview

4.2. Component Identification

Familiarize yourself with the main components and controls of the ET120M oscilloscope:



Figure 4.2: Front View of ET120M Oscilloscope

- **Display Screen:** 2.4-inch LCD for waveform display and menu navigation.
- **Input BNC Connector:** For connecting the oscilloscope probe.
- **Control Buttons:** Including MENU, F1, F2, SAVE, AC/DC, 1X/10X, 50%, TRIG, EDGE, STOP, AUTO, and directional/OK buttons for navigation and settings adjustment.
- **USB Port:** For charging the device.

5. SETUP

5.1. Initial Charging

Before first use, fully charge the built-in lithium battery using the provided USB charging cable and a standard USB power adapter (not included). The charging indicator will show the charging status.

5.2. Probe Connection

Connect the oscilloscope probe to the BNC input connector on the top of the device. Ensure the connection is secure. Set the probe attenuation switch (if applicable) to the desired setting (e.g., 1X or 10X) and match this setting

on the oscilloscope via the 1X/10X button.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

Press and hold the power button (usually located on the side or top) to turn the device on or off.

6.2. Basic Waveform Acquisition

After powering on, connect the probe to the circuit under test. The oscilloscope will display the waveform. Use the directional buttons to navigate menus and adjust settings.

6.3. Waveform Acquisition Modes

The ET120M supports three scan modes:

- **Auto:** Automatically adjusts time base and vertical amplitude for a stable waveform display. Press the **AUTO** button for one-key waveform adaptation.
- **Normal:** Displays a waveform only when a trigger condition is met.
- **Single:** Captures and displays a single waveform when a trigger condition is met, then stops.

AUTO OSCILLOSCOPE

One-key waveform adaptation

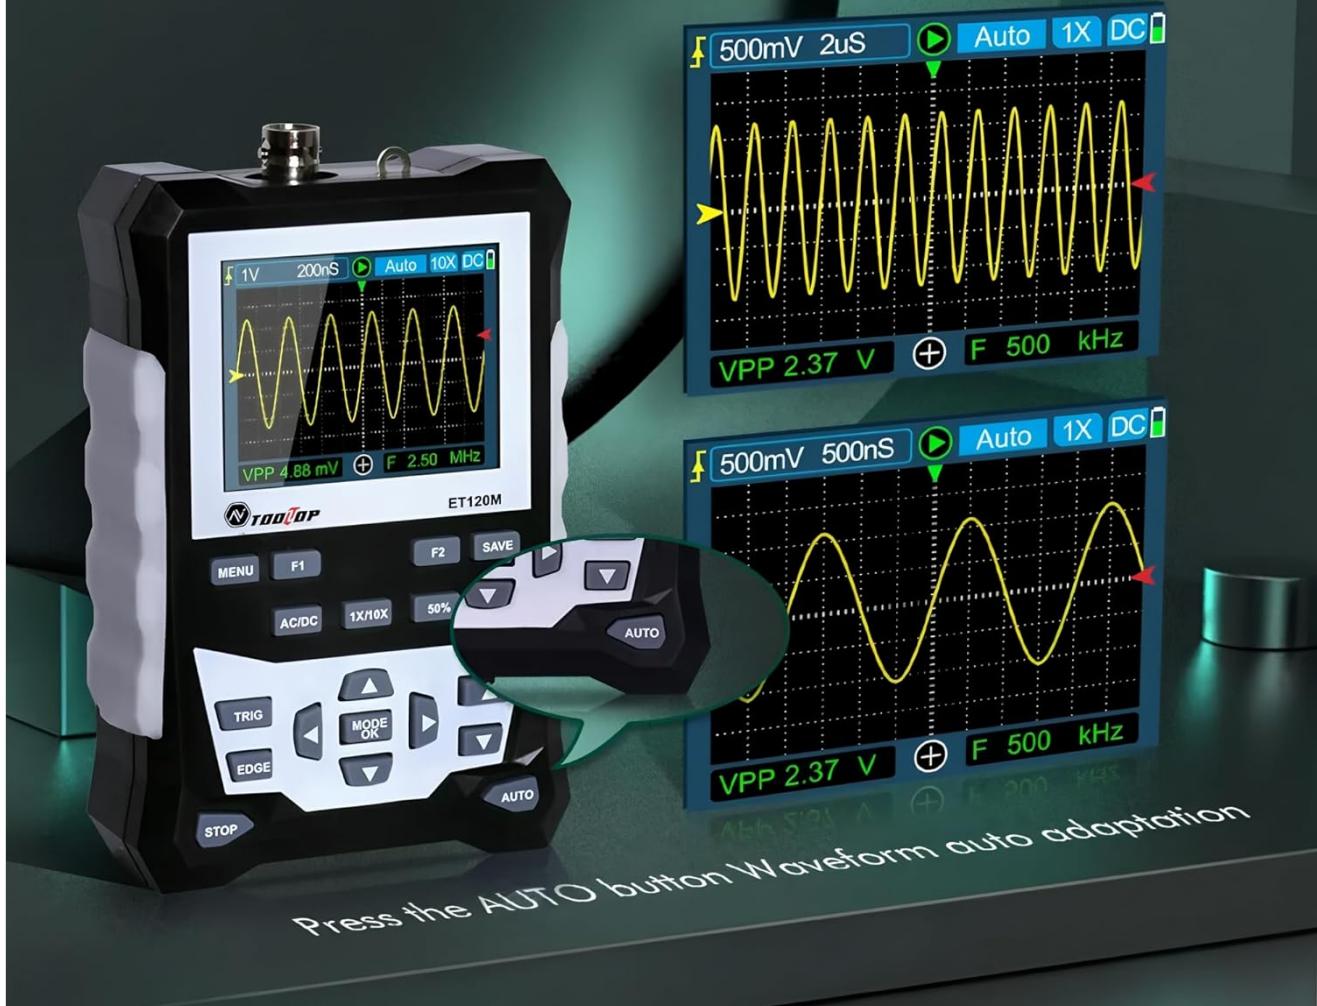


Figure 6.1: Auto Waveform Adaptation

6.4. Parameter Measurement

The device can automatically measure 12 different waveform parameters. Access these measurements through the menu system. Parameters include Peak-to-Peak Voltage (Vpp), Root Mean Square Voltage (Vrms), Average Voltage (Vavg), Peak Voltage (Vp), Maximum Voltage (Vmax), Minimum Voltage (Vmin), Frequency (F), Period (T), Positive Pulse Width (T+), Negative Pulse Width (T-), Positive Duty Cycle (Du+), and Negative Duty Cycle (Du-).

120MHz

WAVEFORM BANDWIDTH



500MS/s

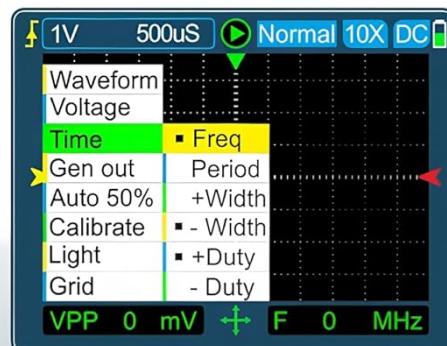
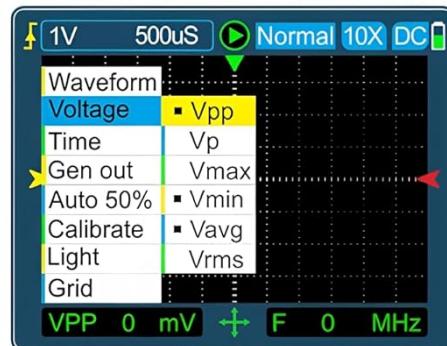


Figure 6.2: Automatic Measurement Functions

6.5. Square Wave Signal Output

The ET120M can generate square wave signals at specific frequencies. Navigate to the signal output function in the menu to select between 1kHz, 10Khz, 100Khz, and 1MHz output frequencies. This feature is useful for testing circuits.

120Mhz Auto Oscilloscope

1MHz Square Wave Signal Output



Figure 6.3: Square Wave Signal Output Function

6.6. Waveform Storage and Recall

The device can store up to 2500 DSO waveforms. Use the **SAVE** button to store the current waveform. Stored waveforms can be browsed via thumbnails for easy recall and analysis.

WAVEFORM OUTPUT

Square wave signal output



Figure 6.4: Waveform Storage and Browsing

6.7. Adjusting Waveform Parameters

You can manually adjust various waveform display parameters to fine-tune your measurements:

- **Time Base:** Adjusts the horizontal scale (time per division).
- **Amplitude (Vertical Sensitivity):** Adjusts the vertical scale (volts per division).
- **Trigger Slope:** Sets the trigger to rising or falling edge.
- **Trigger Level:** Sets the voltage level at which the waveform is triggered.

120MHz Waveform Bandwidth

12 measurement functions



Figure 6.5: Adjusting Waveform Display Parameters

7. MAINTENANCE

7.1. Cleaning

To clean the device, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild detergent can be used, ensuring no liquid enters the device. Do not use abrasive cleaners or solvents.

7.2. Storage

When not in use for extended periods, store the oscilloscope in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to store it in the provided cloth bag to protect it from dust and scratches.

7.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing for a long time, charge the battery to approximately 50% every few months.

8. TROUBLESHOOTING

If you encounter issues with your ET120M oscilloscope, refer to the following common problems and solutions:

- **Device does not power on:** Ensure the battery is charged. Connect the USB charging cable and try again.
- **No waveform displayed:** Check probe connection. Ensure the probe is properly connected to the circuit under test. Adjust vertical sensitivity and time base settings. Try the AUTO function.
- **Unstable waveform:** Adjust the trigger level and trigger slope. Ensure the trigger mode is appropriate for the signal.
- **Inaccurate measurements:** Verify probe attenuation setting (1X/10X) matches the device setting. Perform a probe compensation if necessary (refer to advanced operation in a full manual).

For persistent issues, contact TOOLTOP customer support.

9. SPECIFICATIONS

9.1. General Specifications

Display	320x240 LCD screen
Display Area	50mm x 40mm
Backlight	White, brightness adjustable
Impedance	x1: 1MΩ / x10: 10MΩ
Battery	18650 lithium battery (built-in)
Auto Shutdown	No operation for 15 minutes
Waveform Storage	2500 DSO waveforms
Size	124mm x 80mm x 35mm
Operating Conditions	0°C ~ +40°C; <75%RH
Storage Conditions	-10°C ~ +60°C; <90%RH

9.2. Oscilloscope Specifications

 
Analog Bandwidth	120MHz
Maximum Real-time Sampling Rate	500MSps
Vertical Resolution	8 bits
Vertical Accuracy	±(5% + 0.2div)
Auto Zero Reference	During DC measurement
Trigger Level	±3.8div (0.1div per step)
Trigger Position	±6div (0.1div per step)
Cursor Function	ΔV, Δt, 1/Δt


Nonlinearity	±1 bits
Coupling Method	DC/AC
Division Vertical	±3.8 Horizontal: 12
Time Base Range	6ns/div ~ 50s/div
Time Base Accuracy	±(0.01%+0.1div)
Scan Mode	Auto/Single/Normal
Trigger Slope	Rising / Falling
Record Length	12div
Auto Configuration	Automatically set time base and vertical amplitude
Automatic Measurement Functions	Vpp, Vrms, Vavg, Vp, Vmax, Vmin, F, T, T+, T-, Du+, Du-
Vertical Sensitivity Range	x1: 50mV/div ~ 10V/div; x10: 500mV/div ~ 100V/div

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact TOOLTOP customer service directly. Keep your purchase receipt as proof of purchase.

Related Documents - ET120M

  	<p>TOOLTOP ET693C Handheld Thermal Imager Camera User Manual</p> <p>Comprehensive user manual for the TOOLTOP ET693C handheld thermal imager camera, detailing features, specifications, operation, analysis software, and precautions. Features 256*192 resolution, 512*384 Super IR, and industrial-grade precision.</p>
	<p>Digital Multimeters and Electronic Test Accessories Catalog</p> <p>Discover a wide selection of digital multimeters, clamp meters, oscilloscopes, battery testers, and essential electronic accessories. This catalog features products from leading brands like ANENG, UNI-T, BSIDE, Victor, and more, catering to various electrical and electronic testing needs.</p>
	<p>Tooltop ET692A Infrared Thermal Camera Instruction Manual</p> <p>This manual provides instructions for the Tooltop ET692A Infrared Thermal Camera, covering its overview, operating procedures, measurement principles, charging instructions, and technical specifications. It is designed for industrial use in fields such as fire fighting, archaeology, traffic, agriculture, and electronics manufacturing.</p>

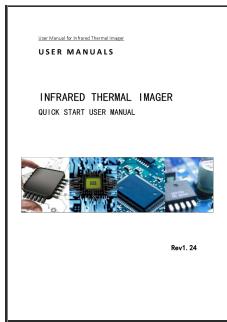

[TOOLTOP ET14C Infrared Thermal Imager Quick Start User Manual](#)

Comprehensive quick start user manual for the TOOLTOP ET14C Infrared Thermal Imager, covering safety instructions, technical specifications, operating procedures, system settings, and usage with upper computer software.

Documents - TOOLTOP – ET120M



[\[pdf\] User Manual](#)

MDS120M 20231213 cdr zenghuiwen User manual TOOLTOP ET120MTOOLTOP ET120M 500MS
s 120MHz Professional Digital Oscilloscope Laboratory Electrical Repair Auto Handheld Portable
OscilloscopeScf826e4126394be5896cdeb956eed35yae01 alicdn kf
Scf826e4126394be5896cdeb956eed35y |||
...
lang: score:20 filesize: 7.49 M page_count: 10 document date: 2023-12-14