

SuperVac KG0055985

SuperVac Refrigerator Button User Manual

Model: KG0055985

1. PRODUCT OVERVIEW

This manual provides instructions for the SuperVac Refrigerator Button, a replacement part designed for various Vestel, Regal, Seg, and Vestfrost refrigerator models. This button is an essential component for controlling internal refrigerator lighting and door signal systems.

Key Features

- **Easy Installation:** Designed for straightforward installation without requiring specialized technical knowledge, making it user-friendly.
- **Durable Material:** Manufactured from high-quality, long-lasting plastic to ensure extended product life.
- **Functional Design:** Engineered to integrate seamlessly with the refrigerator's internal lighting and door signal systems for reliable operation.

Compatible Models

This refrigerator button is compatible with a wide range of models from various brands. Please verify your refrigerator's model number against the list below:

- **Vestel Compatible Models:** SX4340B, EKOSB120, S1140A, H110A, EKOSBY90UTAB, EKOSBY90UTABBM, GTP455B, EKONF450G, EKONF450, EKONF480, NF480, NF450, NF480E, NF520, SC470YA, EKONF370, NF450G, RETRONFK350, RETRONFK350P, S1150A, S4250B, EKONF480G, RETRONF, BZPS1108W, BZPS1108WI, BZES1108WI, RETRONFK35, RETRON, RETRONFK, RETRO, MIRA365, BZPS2101W, MIRA345B, DIVA455, RT426A, R4260A, SX3341A, RT427A, S4350B, VBD455A, VBD1500, HY140, HY150, BZES1108WA, EKOSB90, EKOSB90STN, EKOSCY300, EKOSC250, SC250, EKOSCY300B, SK350, Retro.
- **Regal Compatible Models:** RGL4500NF, R2701, RGL4801E, RGL4800, RGL4500, RGL48, RGL4500S, RGL4801, 4700AYA, 4700SYA, 5201AKI, 5201, 3000LDSZ, R1100A, R1401A, RGL900BTU, COOL1191A, COOL1195A, COOL1195SABT, COOL1195BT, RGL900STN, VERA455A, R3410A, R3352B, RD455AENER, COOL3231A, COOL4302A, COOL3171, COOL2681, COOL4302SA, COOL1100BT, RGL1200B, RGL3000, RGL2500, 2500CK, RGL90U, 4800NF, 4501S.
- **Seg Compatible Models:** SRF120, SEG1110A, SNF45, SNF4500, SNF4500SA, SNF4800, SRF4531, SEG1140A, SEG1135A, BT1190A, RFCK4300AÇK, RF340ATK, SRF1100, BT1100A, SRF90ST, SRF2601, SRF2801, SBT90U, SRF2831.
- **Vestfrost Compatible Models:** VFBZD450, VFBZD45, VF4800NF, VF4700A, VFNF4500, VF1119ABT,

VF1430AÇK, RF1134, VF1119, VFR1323TK, VF110BT, VF1283, VF90BTST, VF1268, VF1268CK, VF90U, VFBZD120, VF3000CK.



Figure 1: Side view of the SuperVac refrigerator button, highlighting its two metal electrical prongs for connection.



Figure 2: Front view of the SuperVac refrigerator button, showing its white, ergonomic design.

2. SETUP AND INSTALLATION

This refrigerator button is designed for easy installation. However, if you are unsure about any step, it is recommended to consult a qualified appliance technician.

Safety Precautions

- Always disconnect the refrigerator from the main power supply before attempting any installation, repair, or maintenance to prevent electric shock.
- Wear appropriate safety gear, such as gloves, if necessary, to protect your hands.
- Ensure the new button is the correct replacement part for your specific refrigerator model to guarantee compatibility and proper function.

Installation Steps

1. **Step 1: Disconnect Power.** Unplug your refrigerator from the electrical outlet. This is a critical safety step.
2. **Step 2: Locate the Old Button.** Identify the existing refrigerator button that needs replacement. It is typically situated near the door frame or inside the refrigerator compartment, often activated by the door closing.
3. **Step 3: Remove the Old Button.** Carefully pry out or unclip the old button from its housing. A small, flat-head screwdriver may be useful for this. Observe how the old button is connected and oriented.
4. **Step 4: Disconnect Wiring.** Gently disconnect any electrical wires attached to the old button. It is advisable to take

a photograph of the wiring configuration before disconnecting to aid in reassembly.

- 5. **Step 5: Connect the New Button.** Attach the wires to the new SuperVac refrigerator button, ensuring they are connected correctly according to the previous configuration. The metal prongs should align with the connectors.
- 6. **Step 6: Insert the New Button.** Carefully push the new button into its designated slot until it clicks securely into place. Ensure it is flush with the surface and properly seated.
- 7. **Step 7: Restore Power.** Plug the refrigerator back into the electrical outlet.
- 8. **Step 8: Test Functionality.** Open and close the refrigerator door several times to test if the button activates the internal light and/or door signal system correctly. The light should turn on when the door is open and off when closed.

3. OPERATING INSTRUCTIONS

The SuperVac Refrigerator Button operates automatically in conjunction with the opening and closing of the refrigerator door. No manual interaction is required for its primary function.

- When the refrigerator door is opened, the button is released from its pressed state, which activates the internal refrigerator light and/or door signal system.
- When the refrigerator door is closed, the door presses the button, deactivating the internal refrigerator light and/or door signal system.

Ensure the button moves freely and is not obstructed by food items, containers, or ice buildup for proper and consistent operation.

4. MAINTENANCE AND CARE

To ensure the longevity and proper functioning of your SuperVac refrigerator button, follow these simple maintenance guidelines:

- **Cleaning:** Periodically wipe the button and its surrounding area with a soft, damp cloth. Use only mild soap and water if necessary. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the plastic material and finish.
- **Inspection:** Regularly check the button for any visible signs of wear, cracks, or physical damage. Ensure it moves smoothly without sticking or excessive resistance when pressed.
- **Obstruction:** Keep the area around the button clear of any food debris, liquid spills, or ice buildup that could impede its movement or cause it to stick.

5. TROUBLESHOOTING COMMON ISSUES

If you encounter problems with your SuperVac refrigerator button, refer to the following troubleshooting steps before seeking professional assistance:

Problem	Possible Cause	Solution
Refrigerator light does not turn on/off	Button stuck, faulty wiring, or bulb issue	Ensure the button moves freely. Disconnect power and re-check wiring connections. If the light bulb is also not working, check the bulb itself. If the issue persists after checking these, the button may need replacement.

Problem	Possible Cause	Solution
Door alarm not functioning	Button not fully engaging or alarm system fault	Ensure the button is properly seated and not obstructed. Check for any physical damage to the button or its housing. If the button functions correctly for the light, the alarm system itself might have an issue.
Button feels stiff or sticky	Dirt, debris buildup, or internal mechanism issue	Clean the button and its housing with a soft, damp cloth. Ensure no foreign objects are lodged around it. If the stiffness persists, the internal spring mechanism might be faulty, requiring replacement.

6. PRODUCT SPECIFICATIONS

- **Brand:** SuperVac
- **Model Number:** KG0055985
- **Part Number:** KG0055985
- **Package Contents:** 1 x Refrigerator button
- **Manufacturer:** General
- **Country of Origin:** Turkey
- **ASIN:** B0F5MZYNPV
- **First Available Date:** April 19, 2025

7. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance regarding your SuperVac Refrigerator Button, please refer to the retailer's return policy or contact the SuperVac customer support directly.

- **Return Policy:** This product is subject to a 30-day return policy from the date of purchase, as per the Amazon listing.
- **Seller:** Supervac

For further assistance or to explore other SuperVac products, please visit the [SuperVac Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question