

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [jojofuny](#) /

› [jojofuny 30W Mini Ceiling Fan with LED Light and Remote Control User Manual](#)

jojofuny QPW6304002SC263VF

jojofuny 30W Mini Ceiling Fan with LED Light and Remote Control User Manual

Model: QPW6304002SC263VF

INTRODUCTION

This manual provides instructions for the safe operation, installation, and maintenance of your jojofuny 30W Mini Ceiling Fan with LED Light and Remote Control. Please read this manual thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are present and in good condition upon unpacking.

- 1 x jojofuny Mini Ceiling Fan with LED Light
- 1 x Remote Control
- 1 x User Manual (this document)



Image: The jojofuny Mini Ceiling Fan with LED Light and its accompanying remote control.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply is disconnected at the circuit breaker before installation, cleaning, or maintenance.
- Do not operate the fan with a damaged cord or plug.
- Keep hands, hair, and loose clothing away from moving parts of the fan.
- This appliance is designed for indoor use only.
- Do not expose the fan to water or excessive moisture.
- Use only the remote control provided with the unit.

SETUP AND INSTALLATION

The jojofuny Mini Ceiling Fan is designed for easy installation into a standard E27 screw-in light socket.

1. **Power Off:** Ensure the power to the light fixture is turned off at the circuit breaker before beginning installation. This prevents electric shock.
2. **Screw In:** Carefully screw the fan light into a standard E27 light socket until it is secure. Do not overtighten.
3. **Power On:** Restore power at the circuit breaker.
4. **Test:** Use the remote control to test the fan and light functions.



Image: Close-up view of the E27 screw-in base for installation, alongside the remote control.



Image: A hand holding the fan light, illustrating its compact size and E27 screw-in base for easy handling.



Image: The mini ceiling fan installed and hanging from a ceiling fixture, ready for use.

OPERATING INSTRUCTIONS

The fan and light functions are controlled via the included remote control.

Remote Control Functions



Image: The remote control for the fan light, showing various buttons for light and fan speed adjustments.

- **Power On/Off:** Press the **OFF** button to turn off both the fan and light. Press any function button (e.g., light on, fan speed) to turn the unit on.
- **Light Control:**
 - **Brightness Adjustment:** Use the sun icon buttons (light up/down) to increase or decrease the light intensity.
 - **Color Temperature Adjustment:** Use the **WW** (Warm White), **NW** (Neutral White), and **W** (Cool White) buttons to change the light color temperature.
 - **Night Light Mode:** Press the moon icon button for a low-brightness, soft light setting.
- **Fan Speed Control:** Use the fan icon buttons (fan up/down) to adjust the fan speed to your preference.
- **Timer Function:** Set the fan/light to turn off automatically after 1 hour, 2 hours, or 4 hours using the respective buttons.



Image: A hand operating the remote control, demonstrating its use with the installed ceiling fan light.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan light.

- Cleaning:** Always disconnect power at the circuit breaker before cleaning. Wipe the fan and light surfaces with a soft, damp cloth. Do not use abrasive cleaners, harsh chemicals, or solvents, as these may damage the finish.
- Dust Removal:** Periodically remove dust from the fan blades and light cover to maintain efficient airflow and consistent light output. A soft brush or vacuum cleaner with a brush attachment can be used.
- Bulb Replacement:** The LED light source is integrated into the unit and is not user-replaceable. If the light fails, the entire unit may need servicing or replacement.

TROUBLESHOOTING

If you encounter any issues with your fan light, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Fan/Light does not turn on.	No power to the socket; Remote control battery is dead; Unit not screwed in properly.	Check circuit breaker and wall switch; Replace remote battery; Ensure unit is securely screwed into the E27 socket.
Fan operates, but light does not.	Light function is off on remote; Integrated LED failure.	Press the light ON button on the remote; Contact customer support if the integrated LED is faulty.
Remote control not responding.	Remote battery is dead or low; Obstruction between remote and fan; Remote not paired (if applicable).	Replace remote battery; Ensure clear line of sight to the fan; Refer to pairing instructions if the remote requires it (not typically for this model).
Fan is noisy or vibrates excessively.	Loose installation; Obstruction in fan blades; Damaged fan blades.	Ensure unit is securely installed in the socket; Check for and remove any obstructions; Inspect blades for damage.

SPECIFICATIONS

Detailed technical specifications for the jojofuny Mini Ceiling Fan with LED Light.

Feature	Detail
Brand	jojofuny
Model Number	QPW6304002SC263VF
Power Source	E27 Screw-in (Remote Control: Battery Powered)
Color	White
Product Dimensions	10.16"D x 10.16"W x 4.33"H (25.80cm x 25.80cm x 11.00cm)
Item Weight	0.72 Pounds (11.5 ounces)

Feature	Detail
Special Features	Lightweight, Remote Control, Adjustable Brightness, Adjustable Color Temperature, Silent Operation
Included Components	Fan Light, Remote Control

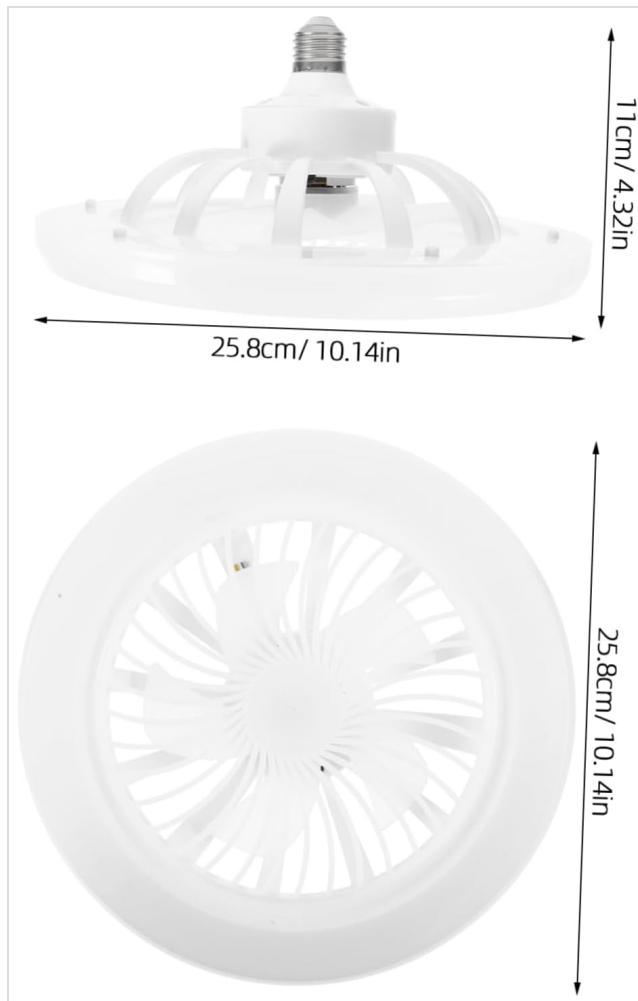


Image: Diagram showing the dimensions of the fan light: 25.8cm (10.14in) diameter and 11cm (4.32in) height.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact jojofuny customer service. Refer to your purchase documentation for specific warranty terms and conditions.

For further assistance or to explore other jojofuny products, please visit the official jojofuny store on Amazon: [jojofuny Amazon Store](#).