

[Manuals.plus](#) /

> [ZEXAPE](#) /

> ZEXAPE Cordless Stick Vacuum Cleaner (Model ZXP-HV-US-MA) for Makita 18V Battery - User Manual

ZEXAPE ZXP-HV-US-MA

ZEXAPE Cordless Stick Vacuum Cleaner

Model: ZXP-HV-US-MA | Compatible with Makita 18V Battery

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is designed for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Always remove the battery pack before cleaning or performing maintenance.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Ensure the filter is correctly installed before use.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

2. PACKAGE CONTENTS

Verify all components are present upon unboxing:

- Main Vacuum Unit (Motor & Dustbin)
- Extension Tube
- Motorized Floor Brush with LED Headlights
- Crevice Tool
- 2-in-1 Brush Tool
- Flexible Hose
- Wall Mount Bracket
- Power Adapter (for charging Makita 18V battery, if included with battery purchase)
- User Manual

3. SETUP

3.1 Battery Installation

This vacuum cleaner is designed for use with Makita 18V batteries (e.g., BL1860, BL1850, BL1840, BL1830, BL1815). **Battery is NOT included.**



Image: The main vacuum unit showing compatibility with various Makita 18V battery models. The battery slides into the designated slot at the base of the handle.

1. Ensure the Makita 18V battery is fully charged.
2. Align the battery with the battery slot on the main vacuum unit's handle.
3. Slide the battery firmly into place until it clicks, indicating a secure connection.

3.2 Assembly of Attachments

The 7-in-1 convertible design allows for various configurations:



Image: Various configurations of the vacuum cleaner, demonstrating its 7-in-1 convertible design for different cleaning tasks around the home and car.

1. **For Stick Vacuum Mode:** Connect the Extension Tube to the main vacuum unit. Then, attach the Motorized Floor Brush to the other end of the Extension Tube.
2. **For Handheld Mode:** Directly attach the Crevice Tool, 2-in-1 Brush Tool, or Flexible Hose to the main vacuum unit.
3. **For Extended Reach Handheld Mode:** Attach the Flexible Hose to the main vacuum unit, then connect the desired tool (Crevice Tool or 2-in-1 Brush Tool) to the end of the hose.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Suction Modes

The vacuum features a smart LED touchscreen for easy control.



Image: Close-up of the smart LED touchscreen on the main vacuum unit, showing power and suction mode controls.

1. Press the Power button on the LED touchscreen to turn the vacuum on.
2. Use the Mode button on the touchscreen to cycle through the three adjustable suction modes (15KPA, 25KPA, 35KPA).
3. The LED display will show the current suction mode and remaining battery level.
4. Press the Power button again to turn the vacuum off.

4.2 Using the Motorized Floor Brush

The motorized floor brush is equipped with LED headlights and a flexible swivel design.



Image: The motorized floor brush with green LED headlights illuminating dirt on a hard floor surface, demonstrating its effectiveness in low-light areas.

- Attach the motorized floor brush to the extension tube for floor cleaning.
- The LED headlights automatically activate when the vacuum is in use, helping to illuminate dust and debris in dark areas.
- The flexible swivel design (180° sideways, 90° up/down) allows for easy maneuvering around furniture and into tight spaces.
- Suitable for various surfaces including carpets, hardwood, and tiles.

4.3 Using Other Attachments

Utilize the specialized tools for targeted cleaning:



Image: The crevice tool being used to clean narrow gaps, such as between sofa cushions or in car interiors.

- **Crevice Tool:** Ideal for cleaning narrow gaps, corners, and hard-to-reach areas like car seats and cabinet interiors.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like upholstery, curtains, and keyboards, or retract the bristles for wider suction on flat surfaces.
- **Flexible Hose:** Extends reach for cleaning high areas, inside cars, or around obstacles without moving the main unit.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Emptying the Dustbin



Image: A hand pressing a button to release the bottom flap of the dustbin, allowing collected debris to fall directly into a trash can.

1. Ensure the vacuum is turned off and the battery is removed.
2. Hold the main unit over a trash bin.
3. Press the one-click release button on the dustbin to open the bottom flap and empty the contents.
4. Close the flap securely after emptying.

5.2 Cleaning the HEPA Filter

The multi-cyclonic filtration system includes a high-efficiency HEPA filter.



Image: Hands washing the HEPA filter under running water in a sink, demonstrating the ease of cleaning the filter element.

1. Twist and pull the dustbin assembly from the main unit.
2. Remove the HEPA filter from the dustbin.
3. Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under cold running water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a dryer or direct heat.
5. Reassemble the filter into the dustbin and attach the dustbin back to the main unit.

5.3 Cleaning the Brush Roll

The anti-tangle V-roller brush should be checked regularly for hair and debris.

ANTI-TANGLE

V-Roller Brush

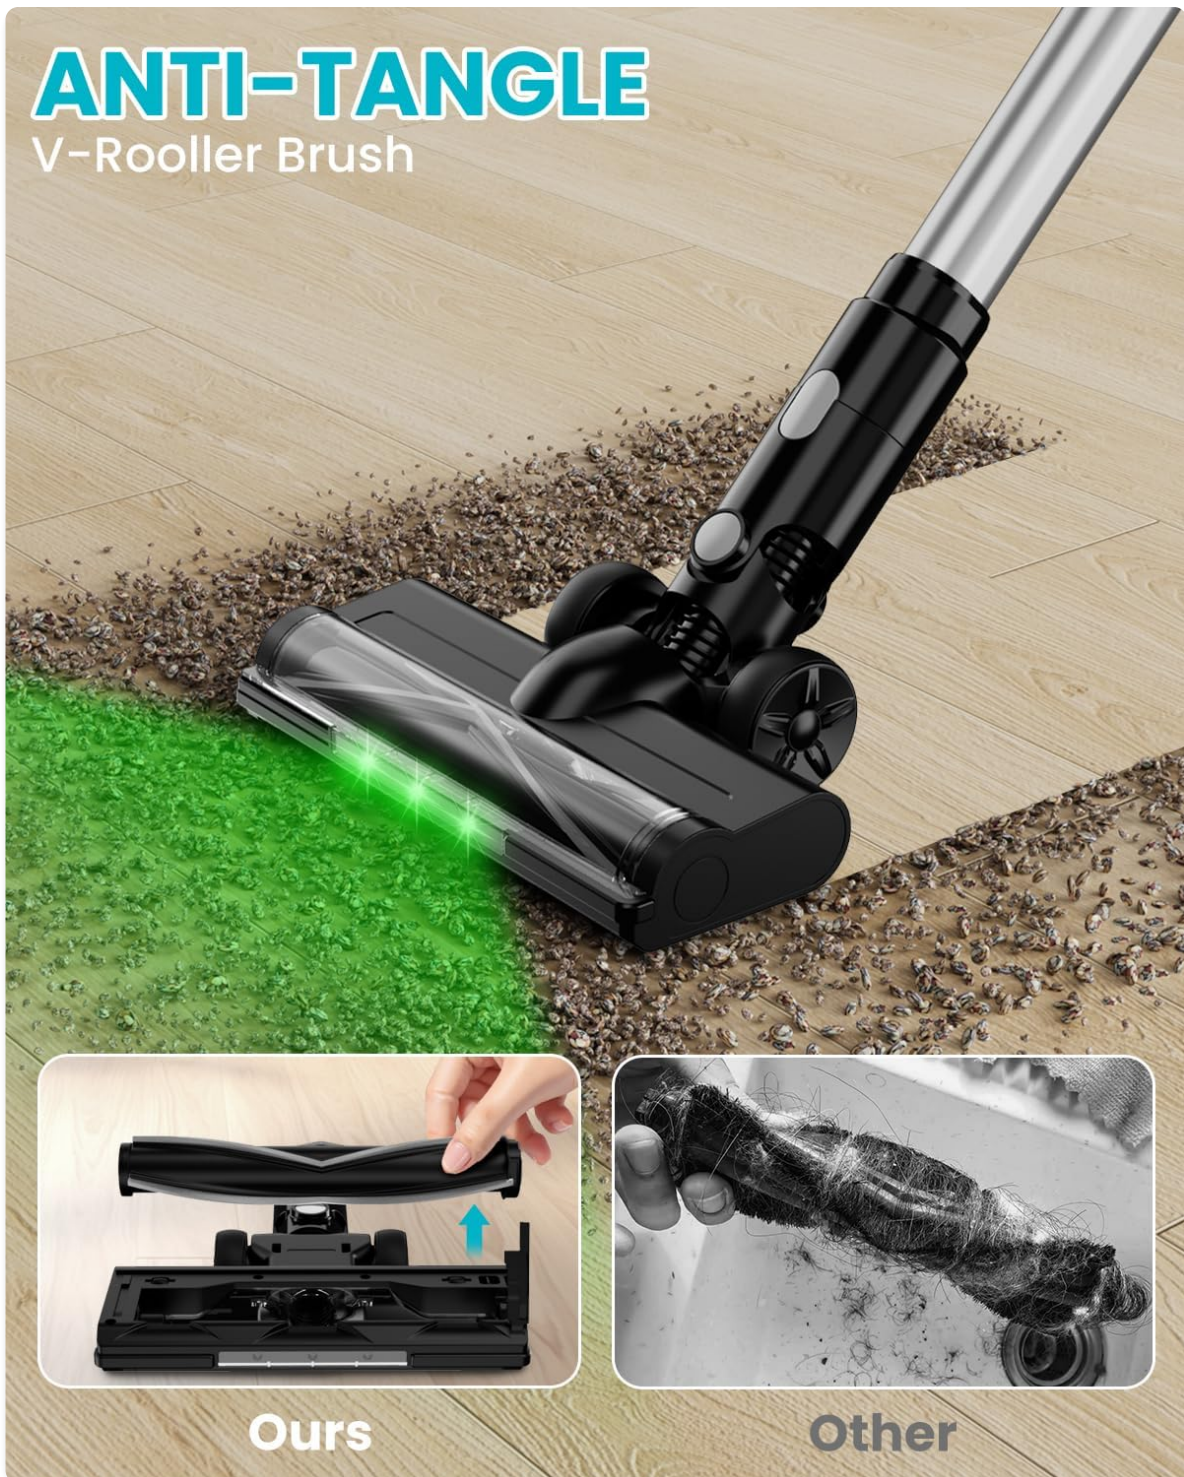


Image: A comparison showing the anti-tangle V-roller brush design versus a traditional brush roll with tangled hair, highlighting its maintenance benefits.

1. Ensure the vacuum is off and the battery is removed.
2. Detach the motorized floor brush from the extension tube.
3. Locate the release tab on the side of the brush head and open it to remove the brush roll.
4. Remove any tangled hair or debris from the brush roll and the brush head cavity.
5. Reinsert the clean brush roll and close the release tab securely.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not installed correctly or discharged	Ensure battery is clicked into place. Charge battery if needed.
Low suction power	Dustbin full, filter clogged, or brush roll tangled	Empty dustbin. Clean HEPA filter. Remove debris from brush roll.
Brush roll not spinning	Brush roll tangled or obstructed	Remove debris from brush roll. Check for obstructions in the brush head.
Unusual noise	Obstruction in nozzle, hose, or brush head	Turn off and remove battery. Inspect all parts for blockages and clear them.

7. SPECIFICATIONS

- **Brand:** ZEXAPE
- **Model Name:** ZXP-HV-US-MA
- **Power Source:** Compatible with Makita 18V Battery (Battery NOT Included)
- **Motor:** 350W Brushless Motor
- **Max Suction:** 35KPA (3 adjustable modes)
- **Filter Type:** HEPA Filter
- **Dustbin Capacity:** 0.8 Liters (800 Grams)
- **Special Features:** Cordless, LED Motorized Floor Brush, Smart Touch Screen, 7-in-1 Convertible Design
- **Product Dimensions:** 17.8"L x 11.5"W x 7.3"H
- **Item Weight:** 6.76 pounds

8. WARRANTY & SUPPORT

For warranty information, technical support, or replacement parts, please refer to the contact information provided with your purchase documentation or visit the official ZEXAPE website.