

Manuals.plus /

› Piudekei /

› Piudekei AKB75095307 Backlit Replacement Remote Control for LG Smart TVs User Manual

## Piudekei AKB75095307

# Piudekei AKB75095307 Backlit Replacement Remote Control for LG Smart TVs User Manual

Model: AKB75095307 | Brand: Piudekei

## INTRODUCTION

This manual provides comprehensive instructions for the Piudekei AKB75095307 Backlit Replacement Remote Control. This remote is designed as a universal replacement for various LG Smart TV models, including LCD, LED, HD, UHD, OLED, QNED, NanoCell, 4K, and 8K Series TVs. It offers full functionality and a convenient backlit feature for enhanced usability in low-light conditions.





Image: The Piudekei AKB75095307 Backlit Replacement Remote Control, showcasing its button layout.

## SETUP INSTRUCTIONS

The Piudekei AKB75095307 remote control is designed for immediate use without any complex programming or setup. Simply insert the required batteries, and it will be ready to operate your compatible LG TV.

### Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

**Note:** Batteries are not included with the remote control.

## Used directly without any settings

No programming or setup is required.



Image: The remote control positioned next to a TV screen, illustrating its direct usability without requiring setup.

## OPERATING INSTRUCTIONS

This remote control provides full functionality for your LG Smart TV, offering intuitive control over various features.

### Basic Functions

- **Power Button ( ):** Turns the TV on or off.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH PAGE ^/v):** Changes TV channels.
- **Number Buttons (0-9):** Directly input channel numbers or other numerical selections.
- **Directional Pad (Up, Down, Left, Right) and OK Button:** Navigate menus and confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.

### Backlight Feature

The remote control features a new design with backlit buttons, making it easy to see and operate in dark

environments. This is particularly useful for seniors or in dimly lit rooms.

- **Activation:** Clicking any button on the remote control will cause all buttons to light up.
- **Automatic Deactivation:** The backlight will automatically turn off after approximately 10 seconds of inactivity to conserve battery life.

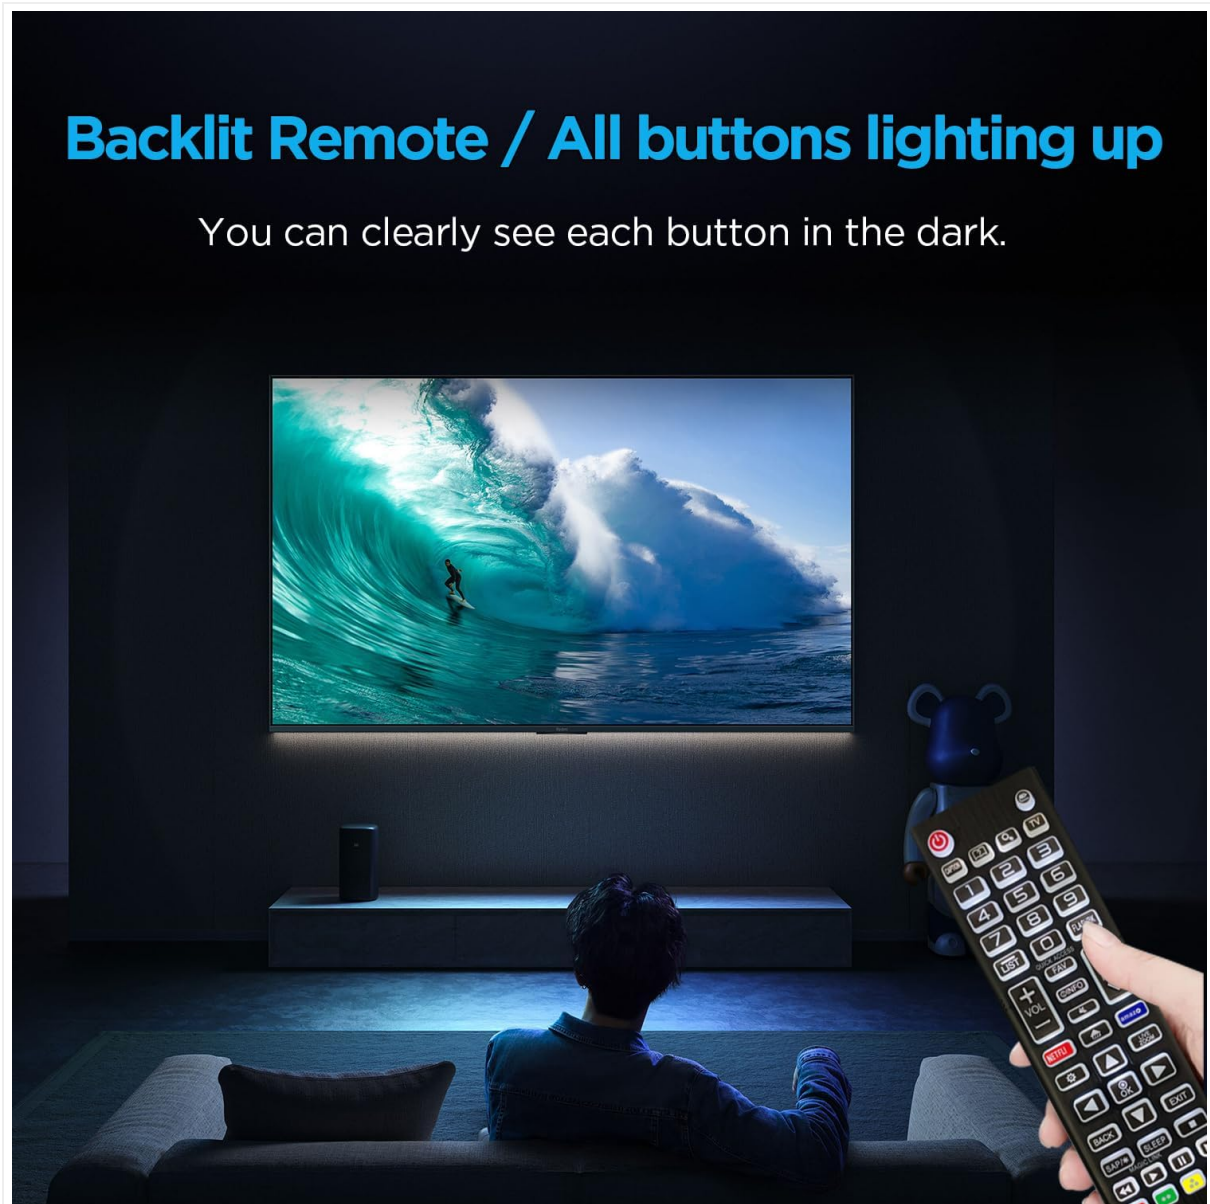


Image: A person holding the backlit remote control in a dark room, with the TV screen visible in the background, demonstrating the illuminated buttons.



## How to turn on/off the light

Clicking any button will cause all buttons on the remote control to light up and provide commands. After 10 seconds of inactivity, the remote control light will automatically turn off

**It's useful  
for Elderly  
for darkroom  
for bedroom**

Image: A close-up of the remote control with overlaid text explaining how the backlight activates and deactivates, highlighting its benefit for use in dark environments.

### Quick Access Shortcut Buttons

The remote includes dedicated buttons for quick access to popular streaming services and functions:

- **Netflix Button:** Directly launches the Netflix application.
- **Prime Video Button:** Directly launches the Amazon Prime Video application.
- **FAV (Favorites) Button:** Accesses your favorite channels or content.
- **Sleep Button:** Activates the TV's sleep timer function.



Image: The remote control with its four useful shortcut buttons (Netflix, Amazon, FAV, Sleep) highlighted, making streaming and TV control easier.

## MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

### Cleaning

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or buttons.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or the backlight dims significantly. Refer to the "Battery Installation" section for instructions.

## TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:** Ensure batteries are correctly inserted and not depleted. Replace batteries if necessary.
- **Backlight not working:** Check battery levels. The backlight activates with any button press and turns off after 10 seconds of inactivity.
- **Intermittent functionality:** Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- **Specific buttons not working:** Clean the remote control, especially around the affected buttons, to remove any debris.

If problems persist, please refer to the After-sale Service information provided in the Warranty and Support section.

## PRODUCT SPECIFICATIONS

---

|                           |  |
|---------------------------|--|
| <b>Brand</b>              | Piudekei   |
| <b>Model Number</b>       | AKB75095307  |
| <b>Product Dimensions</b> | 6.6 x 1.9 x 0.9 inches                             |
| <b>Item Weight</b>        | 1.76 ounces  |
| <b>Batteries Required</b> | 2 AAA batteries (not included)                     |
| <b>Special Feature</b>    | Backlit buttons                                    |
| <b>Color</b>              | Black  |
| <b>Compatible Devices</b> | LG Smart LCD LED HDTV UHD OLED 3D 4K 8K Series TVs |

## WARRANTY AND SUPPORT

---

Piudekei offers an unlimited return and refund service for 60 days from the date of purchase. This policy applies to any issues encountered with your universal remote replacement for LG smart TVs.

For further assistance or to report any problems, please contact our customer support team. Contact details can typically be found on the product packaging or the retailer's website where the product was purchased.