Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > ROCAM /
- > ROCAM Digital Calendar Clock CR1029 User Manual

ROCAM CR1029

ROCAM Digital Calendar Clock CR1029 User Manual

Model: CR1029

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your ROCAM Digital Calendar Clock CR1029. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Image: The ROCAM Digital Calendar Clock CR1029, showing its main display with the current day, time, and date. Below it are examples of different customizable display themes, including digital, analog, and calendar views.

PACKAGE CONTENTS

- ROCAM Digital Calendar Clock CR1029
- Power Adapter
- USB Cable
- User Manual



Image: A visual representation of the ROCAM Digital Calendar Clock CR1029 package contents, showing the clock unit, its power adapter, a USB cable, and the instruction manual.

SETUP

1. Powering On

- 1. Connect the USB cable to the clock and the power adapter.
- 2. Plug the power adapter into a standard electrical outlet.
- 3. The clock will power on automatically.

2. Initial Settings

Upon first use, you may need to configure basic settings such as language, time format, and date format.

- Language Selection: The clock supports 6 languages (English, French, German, Italian, Spanish, Japanese). Navigate to the language settings using the side buttons and select your preferred language.
- **Time and Date:** The clock features automatic Daylight Saving Time (DST) adjustment. You can manually set the time and date if needed through the settings menu.

Multi-language Support

Easily switch between 6 languages for date & time display.





Image: The ROCAM Digital Calendar Clock showing its multi-language support feature, with flags representing English, French, Italian, German, Spanish, and Japanese, and the clock's menu displaying language options.



Image: An illustration demonstrating the automatic Daylight Saving Time (DST) function of the ROCAM Digital Calendar Clock, showing how the time adjusts forward and backward by one hour.

OPERATING INSTRUCTIONS

1. Display Modes and Customization

The clock offers a 7-inch HD IPS display with superior color fidelity and a 178° wide view, ensuring clear visibility from various angles.

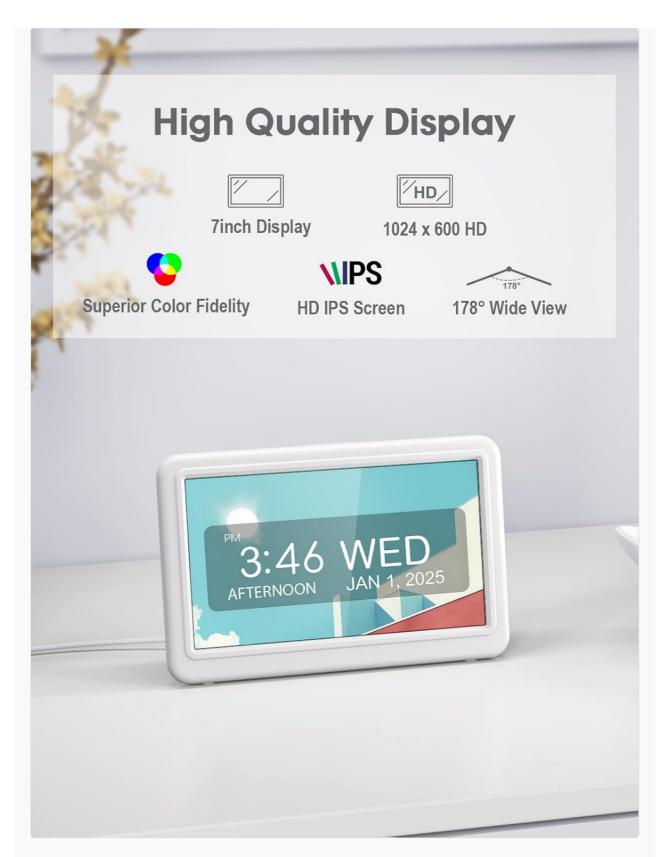


Image: The ROCAM Digital Calendar Clock showcasing its high-quality display features, including a 7-inch HD IPS screen with 1024x600 resolution, superior color fidelity, and a 178-degree wide viewing angle.

You can choose from 12 display styles, including analog, digital, or word-based formats, and customize colors to suit your preference.

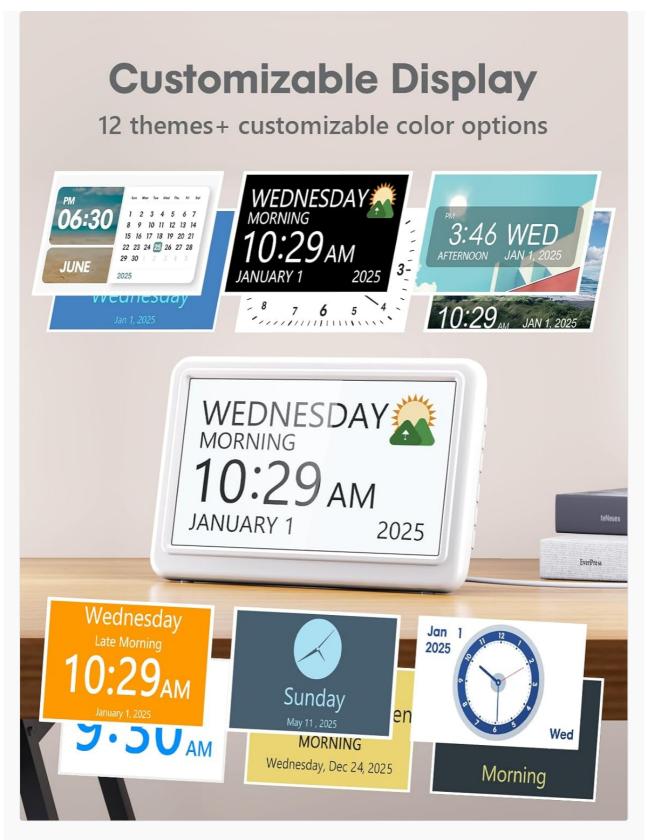


Image: The ROCAM Digital Calendar Clock illustrating its customizable display options, showing 12 different themes and color variations for presenting time, date, and day information.

2. Setting Alarms and Reminders

The clock supports up to 20 independent alarms and reminders. These can be customized for various daily routines, such as medication schedules or appointments.

- Navigate to the "Alarms" or "Reminders" section in the settings.
- Select an alarm slot and set the time, frequency (daily, weekly, etc.), and a custom message or icon.
- Choose from 18 alarm sounds and adjust the volume across 9 levels. A snooze function (3/6/9 minutes) is also available.

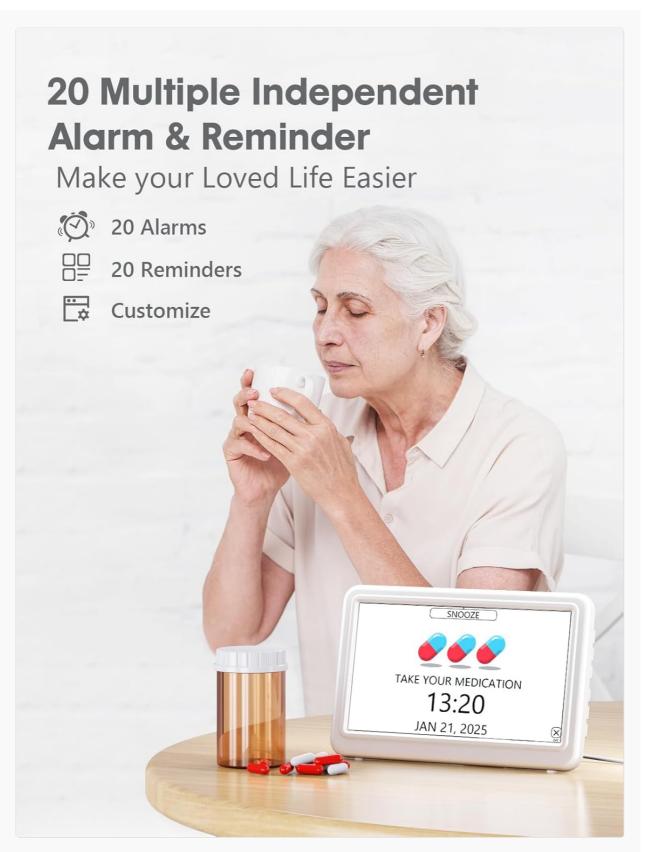


Image: The ROCAM Digital Calendar Clock showing a reminder for medication, with the text "Take Your Medication" and the corresponding time and date, designed to assist elderly users.

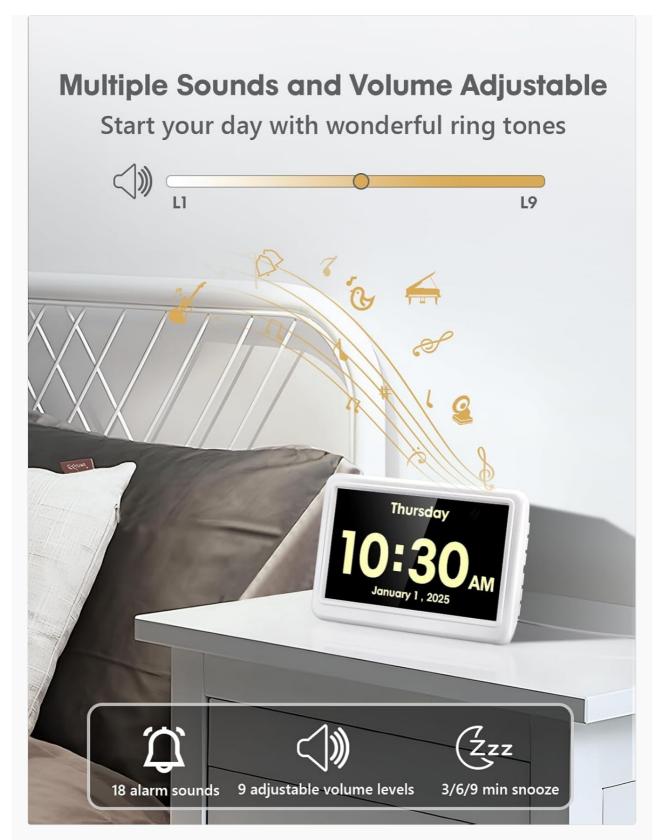


Image: The ROCAM Digital Calendar Clock on a bedside table, depicting its features for multiple alarm sounds and adjustable volume levels, with musical notes emanating from the clock.

3. Brightness and Night Mode

Adjust the screen brightness through 10 levels manually or set a timer for automatic adjustment. The "Nap" button allows you to turn off the screen completely for undisturbed sleep.

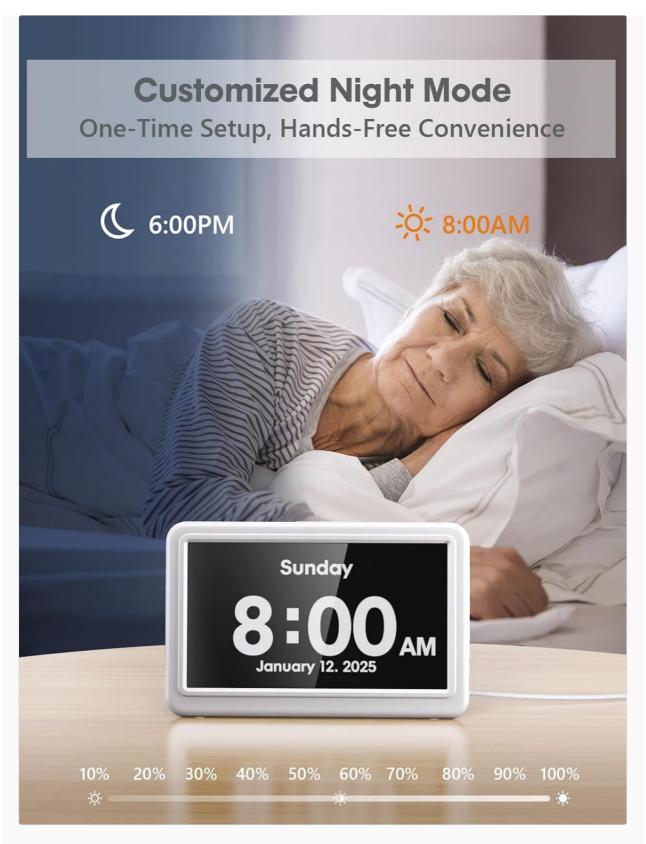


Image: The ROCAM Digital Calendar Clock illustrating its customized night mode feature, showing the clock with reduced brightness and a sleeping individual in the background, along with a brightness adjustment scale.

4. Digital Photo Frame Function

The clock can also function as a digital photo frame. Insert an SD card (SD/SDHC/SDXC, Max 64G) or a USB flash drive (Max 64G) to display your photos. Note that video playback is not supported, and not all image formats may be compatible.



Image: The ROCAM Digital Calendar Clock showcasing its digital photo frame capability, displaying a family photograph, with visual cues for SD card and USB flash drive compatibility.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the screen and body of the clock. Avoid abrasive cleaners or solvents.
- **Power:** Always use the provided power adapter. Disconnect power during electrical storms or when not in use for extended periods.
- Placement: Place the clock on a stable surface, away from direct sunlight, heat sources, and

excessive moisture.

• **Battery Backup:** The clock includes a battery backup feature to retain settings during power outages (AAA batteries not included).



Image: The ROCAM Digital Calendar Clock illustrating its battery backup function, showing how the time and settings are preserved even after a power interruption and subsequent reconnection.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|--|
| Clock does not power on. | Power adapter not connected or faulty. | Ensure the power adapter is securely connected to both the clock and a working power outlet. Try a different outlet. |
| Display is dim or too bright. | Brightness settings are incorrect. | Adjust the brightness levels in the settings menu. Check if Night Mode is active. |
| Alarms are not sounding. | Alarm is not set correctly or volume is too low. | Verify alarm settings and ensure the volume is set to an audible level. |
| Time or date is incorrect. | Manual setting error or DST not configured. | Check manual time/date settings. Ensure Auto-DST is enabled and configured for your region. |
| Photos not displaying from SD card/USB. | Incompatible format, card/drive not inserted correctly, or corrupted files. | Ensure files are in compatible image formats. Reinsert the SD card/USB drive. Check for file corruption. Max capacity 64GB. |

SPECIFICATIONS

Brand: ROCAMModel: CR1029Color: White

• Display: 7-inch HD IPS Screen (1024 x 600 resolution)

• **Dimensions (L x W x H):** 18.2 x 2.5 x 11.9 cm (7.17 x 0.98 x 4.69 inches)

• Weight: 322 grams (0.71 lbs)

• Material: Plastic

- Alarms: 20 independent alarms and reminders
- Alarm Sounds: 18 options, 9 volume levels, 3/6/9 min snooze
- Brightness: 10 adjustable levels (manual/timer)
- Languages: English, French, German, Italian, Spanish, Japanese
- **Special Features:** Calendar display, Large display, Automatic Daylight Saving Time, Adjustable brightness, Adjustable volume, Digital Photo Frame function (SD/USB up to 64GB)

WARRANTY AND SUPPORT

ROCAM products are designed for reliability and performance. For any questions, technical support, or warranty claims, please contact ROCAM customer service through the retailer's platform or the official ROCAM website. Please retain your proof of purchase for warranty purposes.

For further assistance, please visit: ROCAM Brand Store

© 2025 ROCAM. All rights reserved.

Related Documents - CR1029

