



[Manuals.plus](#) /

› [Elevon](#) /

› Elevon GYJ10-P10 Portable Clothes Dryer User Manual

## Elevon GYJ10-P10

# Elevon GYJ10-P10 Portable Clothes Dryer User Manual

Model: GYJ10-P10

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Elevon GYJ10-P10 Portable Clothes Dryer. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Elevon GYJ10-P10 is a compact, 3.5 cubic feet electric dryer designed for small spaces such as apartments, RVs, and dorms. It features a stainless steel tub and offers multiple drying modes.

## 2. SAFETY INFORMATION

**WARNING:** To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Clean the lint filter before each load.

- Ensure proper grounding of the appliance.

### 3. PRODUCT FEATURES

- **Energy Efficient Drying:** 1500W power with 3.5 cubic feet capacity for fast and energy-saving drying.
- **Multi-functional Care:** Offers various drying modes to suit different fabric types and load sizes, effectively removing odors.
- **Quiet Operation:** Operates at 58-62dB, minimizing disturbance.
- **Durable Construction:** Features a high-strength, corrosion-resistant white plate shell and plastic door cover, with a stainless steel diamond-patterned inner drum.
- **Flexible Installation:** Supports wall-mounted, stacked, or stand-alone placement. Compact dimensions (23.62" x 18.9" x 26.77") for small spaces.
- **Easy Access:** 170° door opening angle for convenient loading and unloading.

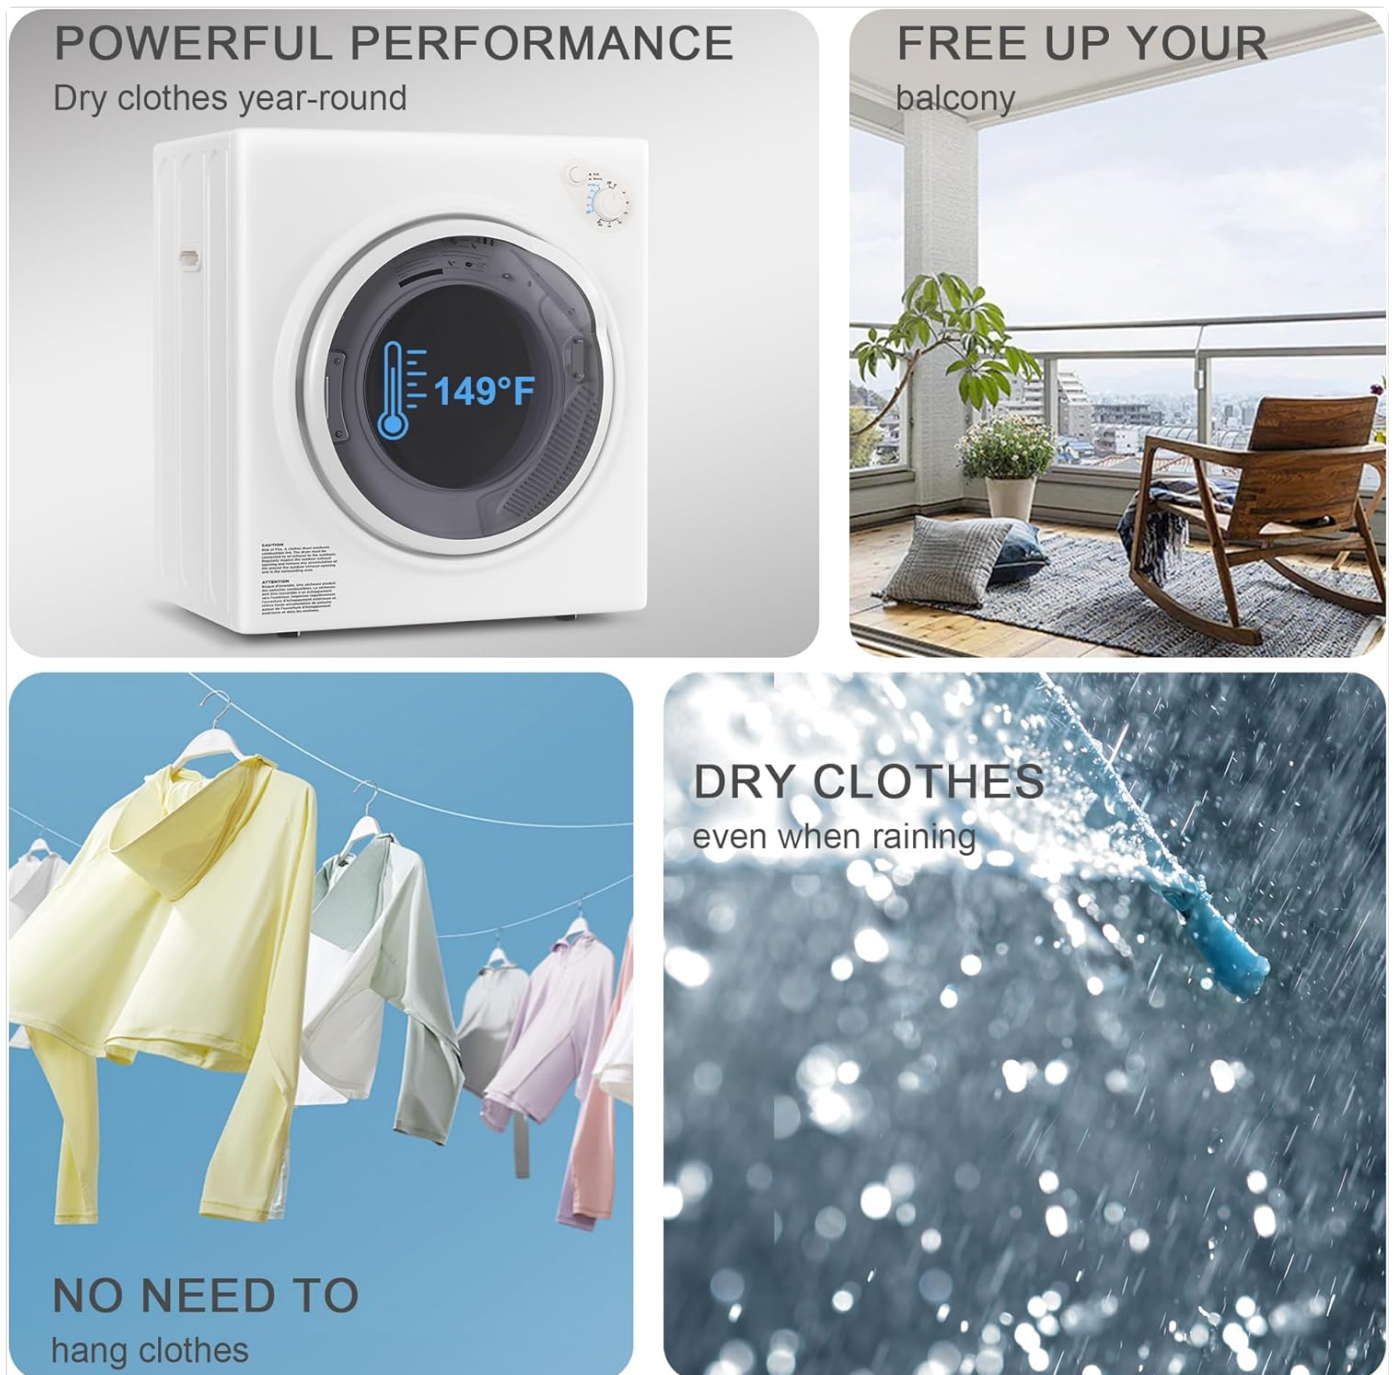 


Figure 3.1: Powerful drying performance for year-round use.

# POWERFUL AND FAST DRYING



Figure 3.2: Illustration of powerful and fast drying.

## 4. SETUP AND INSTALLATION

### 4.1 Unpacking

Carefully remove the dryer from its packaging. Inspect for any shipping damage. Ensure all accessories, including the exhaust pipe and any mounting brackets, are present.

### 4.2 Placement Options

The Elevon GYJ10-P10 dryer offers versatile installation to fit your space:

- **Freestanding:** Place the dryer on a level, stable surface.
- **Wall-mounted:** Use the included bracket to mount the dryer securely to a wall. Ensure the wall can support the dryer's weight.
- **Stacking:** The dryer can be stacked on top of a compatible washing machine. Refer to the stacking kit instructions (if applicable, sold separately).

- **Side-by-side:** Place the dryer next to a washing machine or other appliance.

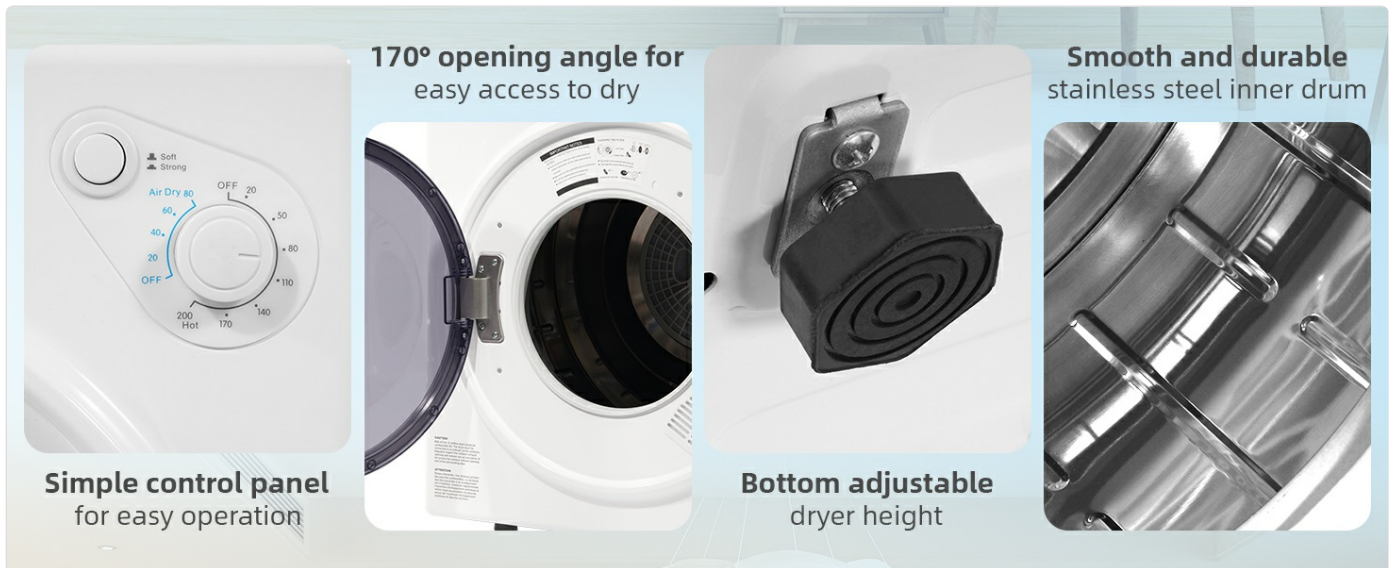 


Figure 4.2.1: Multiple mounting options for the dryer.

# MULTIPLE MOUNTING OPTIONS

Suitable for homes and apartments



Freestanding



Wall-mounted(Bracket Included)



Side by side



Stacking

Figure 4.2.2: Visual examples of dryer installation types.

## 4.3 Electrical Connection

Connect the dryer to a grounded electrical outlet as specified in the safety guidelines. Ensure the voltage and current match the dryer's requirements.

## 4.4 Ventilation

Proper ventilation is crucial for efficient drying and safety. Connect the exhaust pipe to the dryer and direct it to an outdoor vent. Ensure the exhaust path is clear and unobstructed.

## REFERENCE NUMBER OF DRYING PIECES FOR DIFFERENT CLOTHES

T-shirts x 15



Four-piece Bed Sets x 1



Towels x 30



Down Jackets x 2



Figure 4.4.1: Dryer components including exhaust pipe connection.

## 5. OPERATING INSTRUCTIONS

### 5.1 Loading Clothes

Open the dryer door (170° opening angle for easy access). Load clothes into the stainless steel drum. Do not overload the dryer; ensure clothes have room to tumble freely for optimal drying.



Figure 5.1.1: Loading clothes into the dryer.

## 5.2 Selecting Drying Modes and Timer

Use the control knob to select the desired drying mode and time. The dryer offers the following modes:

- **Cool Down:** 0-20 minutes (for cooling clothes after a cycle).
- **Anti-Wrinkle:** 30-60 minutes (to reduce wrinkles).
- **Air Dry:** 0-80 minutes (no heat, for delicate items or freshening).
- **Warm:** 60-150 minutes (for general drying).
- **Hot:** 150-200 minutes (for heavy fabrics or larger loads).

Additionally, select the heat intensity: **Soft** for silk, nylon, linen, and other delicate materials; **Strong** for large sizes or quantities of clothes.

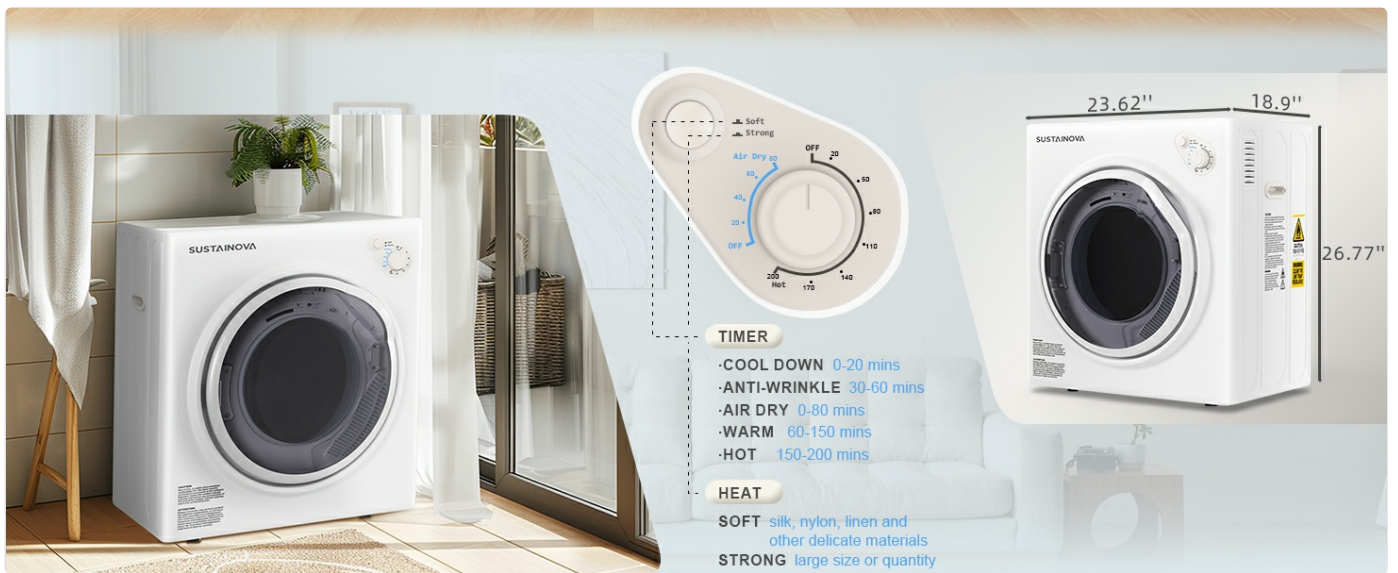 


Figure 5.2.1: Dryer control panel with mode and timer settings.



Figure 5.2.2: Detailed view of the drying mode selector.

## 5.3 Starting and Stopping

After selecting the desired settings, the dryer will begin operation. The dryer features an automatic stop function when the door is opened during a cycle for safety.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your dryer.

### 6.1 Cleaning the Lint Filter

Clean the lint filter before or after every load. A clogged lint filter reduces drying efficiency and can be a fire hazard. The dryer features a multi-filtration system including an air inlet filter, inner cylinder filter, and air outlet filter. These can be cleaned with a soft brush or vacuum.

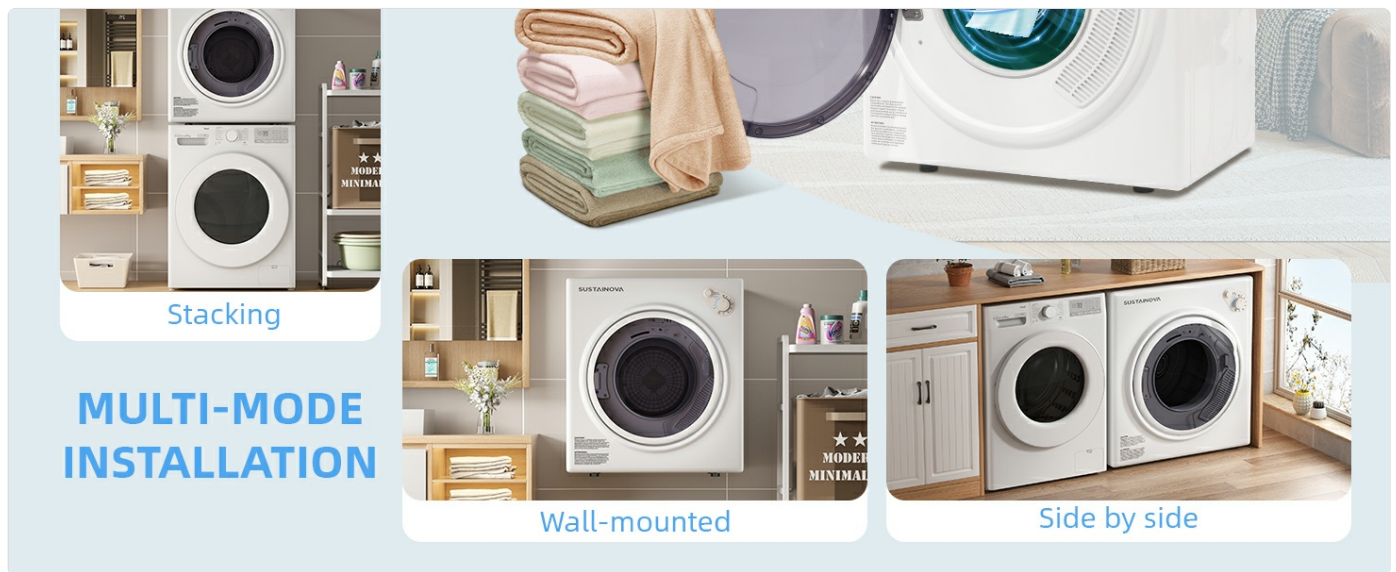 


Figure 6.1.1: Multi-filtration system and cleaning.

### 6.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

### 6.3 Cleaning the Drum

Periodically wipe the interior of the stainless steel drum with a damp cloth. For stubborn residues, a mild detergent solution can be used, followed by a thorough rinse and dry.

## 7. TROUBLESHOOTING

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged; circuit breaker tripped; door not fully closed.	Ensure power cord is securely plugged in. Check circuit breaker. Close door firmly.
Clothes not drying properly	Lint filter clogged; exhaust vent obstructed; dryer overloaded; incorrect drying mode selected.	Clean lint filter. Check and clear exhaust vent. Reduce load size. Select appropriate drying mode and time.
Dryer is noisy	Foreign objects in drum; dryer not level.	Check drum for loose items. Ensure dryer is on a level surface.

Problem	Possible Cause	Solution
Dryer stops during cycle	Door opened; overheating protection activated.	Close door. Allow dryer to cool down, then restart. Check for blocked vents.

## 8. SPECIFICATIONS

Feature	Detail
Brand Name	Elevon
Model Info	GYJ10-P10
Item Weight	50.7 pounds
Package Dimensions (L x W x H)	29.72 x 27.17 x 20.87 inches
Product Dimensions (L x W x H)	23.62" x 18.9" x 26.77"
Capacity	3.5 Cubic Feet
Part Number	QD-SUS-DRYER3
Form Factor	Front Load
Color	Black/White
Access Location	Front Load
Certification	ETL
Material Type	Plastic, Stainless Steel
Included Components	Clothes Dryer
Rated Power	1500W
Noise Level	58-62dB



Figure 8.1: Dryer dimensions and capacity.

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your purchase or contact Elevon customer service. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please visit the official Elevon website or contact their customer support channels.