



Manuals.plus /

› MYSTILUCK /

› MYSTILUCK Kids Camera X8D Instruction Manual

MYSTILUCK X8D

MYSTILUCK Kids Camera X8D Instruction Manual

Model: X8D

1. INTRODUCTION

The MYSTILUCK Kids Camera X8D is a versatile digital camera designed for children, offering instant black and white photo printing, 1080P HD video recording, and a variety of creative features. This manual provides detailed instructions to help you and your child get the most out of this device.

2. WHAT'S IN THE BOX

- 1x MYSTILUCK Kids Camera X8D
- 3x Thermal Printer Paper Rolls
- 1x Lanyard
- 1x 32GB SD Card
- 1x USB Type-C Charging Cable
- 1x User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.

3.1 Front View



Figure 1: Front view of the MYSTILUCK Kids Camera X8D, highlighting the main lens, flash, and shutter button.

3.2 Rear View



Figure 2: Rear view of the camera, displaying the LCD screen, navigation buttons, and print output slot.

3.3 Side View (Ports and Slots)



Figure 3: Side view of the camera, indicating the USB Type-C charging port and the Micro SD card slot.

4. SETUP

4.1 Charging the Camera

Before first use, fully charge the camera. Connect the provided USB Type-C cable to the camera's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge typically takes 2-3 hours and provides 4-5 hours of continuous use.

4.2 Inserting the SD Card

The camera comes with a 32GB Micro SD card for storing digital photos and videos. Locate the SD card slot on the side of the camera and gently insert the card until it clicks into place. Ensure the card is inserted correctly to avoid damage.

4.3 Loading Thermal Paper

The camera uses ink-free thermal printing paper. To load a new roll:

1. Open the paper compartment cover on the bottom of the camera.
2. Insert a thermal paper roll, ensuring the paper feeds from the bottom and the end of the roll extends slightly out of the slot. Refer to the diagram inside the compartment for correct orientation.
3. Close the cover securely.



Figure 4: Step-by-step guide for loading thermal paper into the camera.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button (usually located on the top or side) for a few seconds to turn the camera on or off.

5.2 Navigation

Use the directional buttons (up/down/left/right) to navigate through the menu options on the LCD screen. Press the 'OK' button to confirm a selection.

5.3 Taking Photos

Select the 'Photo' mode from the main menu. Frame your shot using the LCD screen. Press the shutter button (usually a dedicated button on top) to capture the image. Photos can be printed instantly or saved to the SD card.

5.3.1 Selfie Mode

The camera features a rotatable lens. Rotate the lens 180 degrees to face forward for taking selfies. Select 'Selfie Mode' from the menu if available, or simply use the standard photo mode with the rotated lens.

5.3.2 Filters and Stickers

In photo mode, use the directional buttons to cycle through 15 creative scene filters and 16 fun stickers/frames to add artistic effects to your pictures before capturing them.

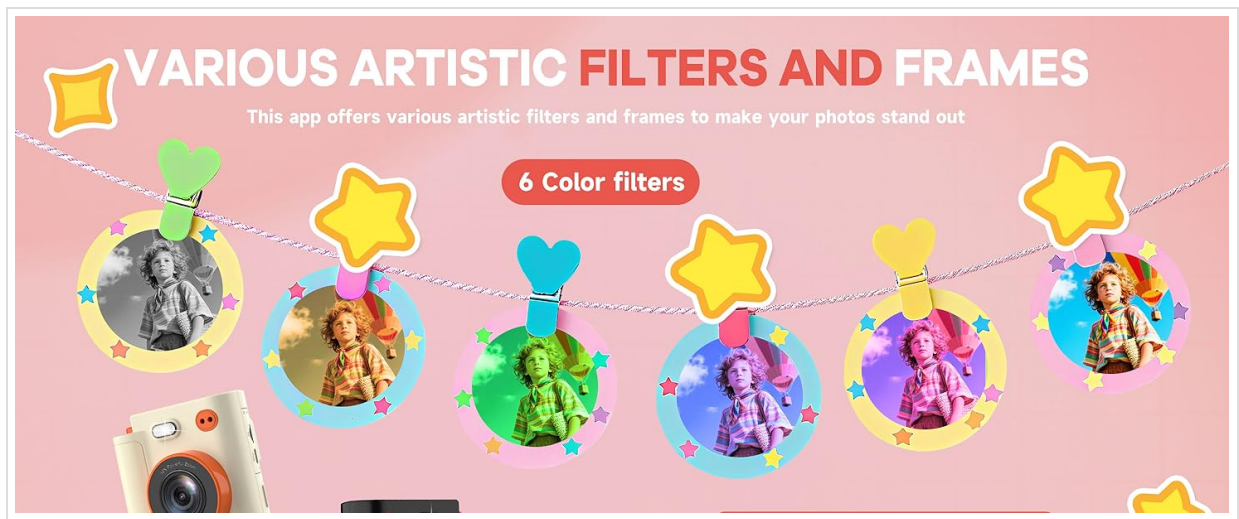


Figure 5: Examples of creative filters and frames for photos.

5.3.3 Digital Zoom

The camera supports up to 16X digital zoom. Use the designated zoom buttons (often up/down arrows) to adjust the zoom level before taking a photo.

5.3.4 Burst Mode and Time-Lapse

Access 'Burst Mode' for capturing multiple photos in quick succession, or 'Time-Lapse' mode to record a series of images over time, creating a sped-up video effect.

5.4 Recording Videos

Select 'Video' mode from the main menu. Press the shutter button to start recording and again to stop. Videos are recorded in 1080P HD quality and saved to the SD card.

5.5 Instant Printing

After taking a photo, the camera can instantly print a black and white version. Ensure thermal paper is loaded. You can usually toggle instant printing on/off in the settings or via a dedicated print button.

Your browser does not support the video tag.

Video 1: Demonstration of instant photo printing from the MYSTILUCK Kids Camera X8D.

5.6 Games

The camera includes several built-in entertainment games. Select 'Games' from the main menu to access and play them.

5.7 MP3 Playback

If MP3 audio files are loaded onto the SD card, select 'Music' or 'MP3' from the main menu to play them through the camera's built-in speaker.

6. MAINTENANCE

6.1 Cleaning

Wipe the camera's exterior with a soft, dry cloth. Do not use liquid cleaners or solvents. Keep the lens clean for optimal image quality.

6.2 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the SD card if storing for extended periods.

6.3 Thermal Paper Storage

Store thermal paper rolls in a cool, dark place to preserve their quality and prevent premature fading.

7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect to a power source using the USB-C cable.
- **Cannot take photos/videos:** Check if the SD card is inserted correctly and has sufficient storage space.
- **Printing issues (blank prints, faded prints):** Verify that the thermal paper is loaded correctly (refer to Figure 4) and that the roll is not empty. Adjust printing density in settings if prints are too light.
- **Poor image quality:** Ensure the camera lens is clean and free from smudges. Check lighting conditions.
- **Sound issues (MP3 playback):** Ensure MP3 files are correctly loaded onto the SD card. Check volume settings.

8. SPECIFICATIONS

Feature	Detail
Brand	MYSTILUCK
Model Name	X8D
Video Resolution	1080p
Digital Zoom	16x
Photo Sensor Resolution	30 MP
Memory Storage Capacity	32 GB (SD Card included)
Connectivity Technology	USB Type C
Battery Life	2-3 hours continuous use (Type-C charging)
Special Features	Instant Print, Selfie Mode, Games, MP3 Playback, Filters, Burst Mode, Time-Lapse, Shockproof

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The MYSTILUCK Kids Camera X8D comes with a 1-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please refer to the contact information provided in your product packaging or visit the official MYSTILUCK website.

