

[Manuals.plus](#) /

› [MYSTILUCK](#) /

› MYSTILUCK Instant Print Camera for Kids Model X8D User Manual

MYSTILUCK X8D

MYSTILUCK Instant Print Camera for Kids

MODEL X8D USER MANUAL

1. INTRODUCTION

This manual provides detailed instructions for the MYSTILUCK Instant Print Camera for Kids, Model X8D. Please read this manual carefully before using the product to ensure proper operation and to maximize its features. Keep this manual for future reference.



Image: The MYSTILUCK Instant Print Camera, a compact digital camera designed for children.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1x Instant Print Camera
- 3x Printer Paper Rolls
- 1x Lanyard
- 1x 32GB SD Card
- 1x USB Type-C Cable

3. SETUP

3.1. Charging the Camera

Before first use, fully charge the camera using the provided USB Type-C cable. Connect the cable to the camera's Type-C port and the other end to a compatible USB power adapter (not included) or computer.

Safe & Cost Effective Printing Paper



Our



\$0.08 per paper



124 papers a roll



Friendly material to store



Clear pictures



Other



\$0.9 per paper



20 sheets a pack

Take pictures whenever you want,
and let the happiness continue

Image: The camera displaying its Type-C charging port and physical dimensions.

3.2. Inserting the SD Card

Locate the SD card slot on the side of the camera. Gently insert the included 32GB SD card into the slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.

3.3. Loading Print Paper

The camera uses thermal paper for instant black and white prints. Follow these steps to load the paper:

1. Open the paper compartment cover on the bottom of the camera.
2. Insert a roll of thermal print paper into the compartment, ensuring the paper feeds from the bottom and the end is slightly exposed.
3. Close the paper compartment cover securely.



Image: A visual guide demonstrating the three steps for loading thermal print paper into the camera.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

4.2. Navigation and Menu

Use the directional buttons and the OK button on the camera's display to navigate through the menu options, select modes, and adjust settings.

4.3. Taking Photos

Select the 'Photo' mode from the main menu. Frame your shot using the screen and press the shutter button to capture an image. The camera supports 30 MP photo resolution.

Multifunction Instant Camera



----- Gifts as well as toys for ages 8-13 -----

Selfie
Mode

Printing
Photos

Type-c
Battery

1080P
Video

16X
Zoom

Time-lapse

Burst
Shoot

Filter &
Sticker

Puzzle
Game

MP3
Music

Image: The camera showcasing its multifunctionality, including photo and video capabilities.

4.4. Recording Videos

Switch to 'Video' mode. Press the shutter button to start recording and press it again to stop. The camera records in 1080P HD resolution.

Easy To Install Long-Lasting Use



1
Open the paper
compartment
cover



2
Install the print
Paperroll



3
Pull out 2cm of
paper then close
the cover

4
hours
of use



1300mAh

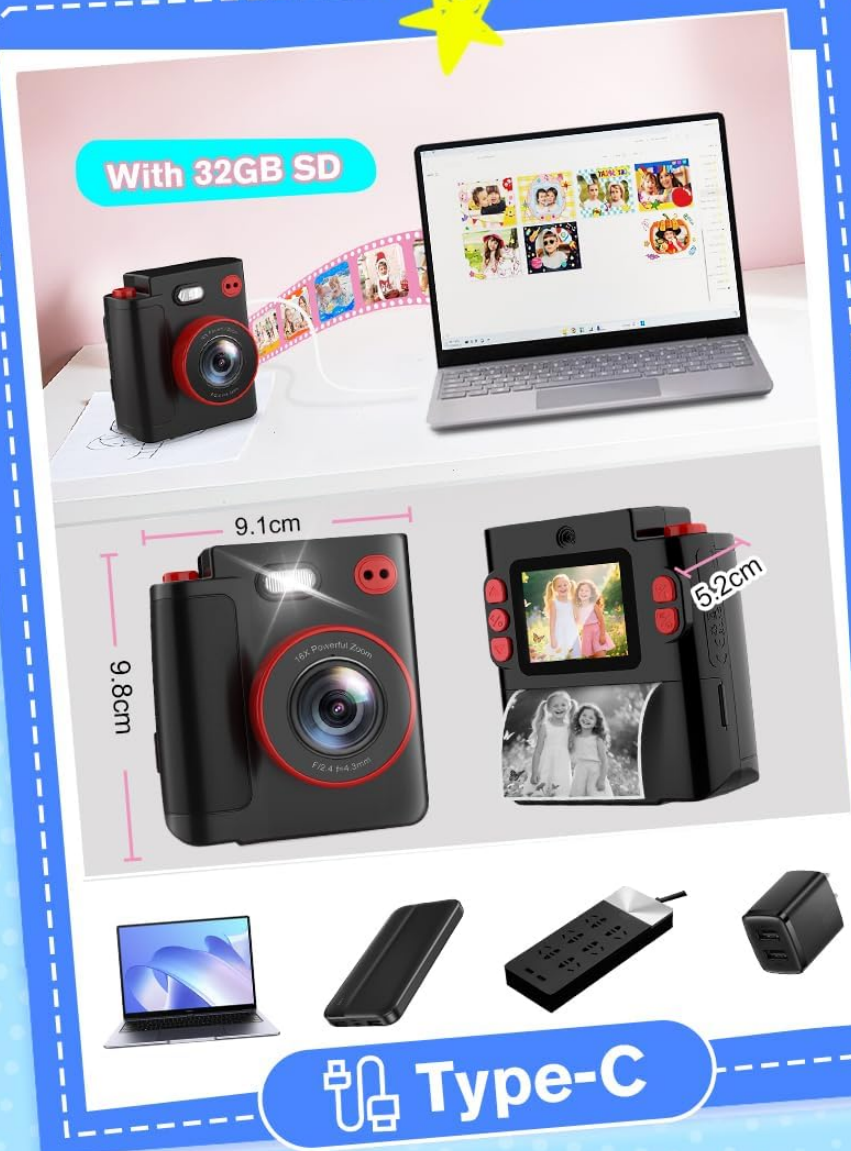


Image: The camera in use, demonstrating its 1080P HD video recording and 16X digital zoom features.

4.5. Instant Printing

After taking a photo, you can choose to print it instantly. The camera will produce a black and white thermal print. The paper is ink-free and safe for children.



Image: A child using the camera, illustrating the instant printing feature and options for customizing prints.

4.6. Selfie Mode

Activate selfie mode to take photos of yourself or with friends. The camera features dual front and rear cameras for versatility.

4.7. Filters and Stickers

Enhance your photos with 15 creative scene filters and 16 fun stickers available in the camera's settings. These can

be applied before or after taking a picture.

4.8. Games

The camera includes built-in puzzle games for entertainment. Access them through the 'Games' option in the main menu.

4.9. MP3 Playback

The camera supports MP3 playback. Load your favorite music files onto the SD card and access them via the 'MP3' option.

4.10. Zoom Function

Utilize the 16X digital zoom feature to get closer to your subjects. Use the designated zoom buttons to adjust the magnification.

4.11. Time-Lapse and Burst Mode

Experiment with time-lapse photography to capture sequences over time, or use burst mode for rapid continuous shooting.

Your browser does not support the video tag.

Video: An official MYSTILUCK video demonstrating the Instant Print Camera for Kids, highlighting its features and suitability as a gift.

5. MAINTENANCE

5.1. Cleaning

To clean the camera, use a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device. Keep the lens and screen free from dust and fingerprints.

5.2. Replacing Print Paper

When the print paper runs out, replace it with new thermal paper rolls. Extra paper can be purchased separately (search B0F488ZHHH on Amazon).

1080P HD Video

Burst shooting

16x Digital Zoom

Image: The camera with its thermal paper rolls, illustrating the cost-effectiveness of the included paper.

6. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB Type-C cable.
- **Cannot take photos/videos:** Check if the SD card is inserted correctly and has sufficient storage space.
- **Printing issues:** Verify that the thermal paper is loaded correctly and that there is enough paper remaining. Ensure the paper compartment is closed properly.

- **Poor print quality:** The camera prints in black and white using thermal technology. Ensure the paper is not old or damaged.
- **Screen frozen:** Try restarting the camera by holding down the power button. If unresponsive, allow the battery to drain completely and then recharge.

7. SPECIFICATIONS

Feature	Description
Brand	MYSTILUCK
Model Name	X8D
Maximum Webcam Image Resolution	30 MP
Video Resolution	1080p
Optical Zoom	8 x
Digital Zoom	2 x (advertised as 16X in feature bullets, clarifying based on spec)
Screen Size	2 Inches
Special Feature	Instant Printing
Memory Storage Capacity	32 GB (SD Card included)
Battery Cell Type	Lithium Polymer
Battery Average Life	2-3 Hours (from feature bullets)
Connectivity Technology	USB Type-C

8. WARRANTY AND SUPPORT

The MYSTILUCK Instant Print Camera Model X8D comes with a **2-year manufacturer's warranty**. For any support inquiries, please refer to the official [MYSTILUCK Store on Amazon](#) or contact customer service as indicated in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F5Q1XVVP>

More documents and user manuals: <https://manuals.plus/>