

Replacement Remote for Okin JLDK.30.03.10 Control Box

Generic Remote Control Instruction Manual

For Okin JLDK.30.03.10 Control Box / Adjustable Bed Base

INTRODUCTION

This manual provides instructions for the Generic replacement remote control designed for use with specific adjustable bed bases equipped with an Okin JLDK.30.03.10 control box. Please read these instructions carefully before use to ensure proper setup and operation.

IMPORTANT COMPATIBILITY NOTE

This remote control is not universal. It is specifically designed to work with control boxes that match the model numbers listed, such as JLDK.30.03.10 or JLDP.15.001.015 CU358-2. Before attempting to pair or use, ensure your existing control box and old remote are identical to the compatible models.

To confirm compatibility, it is recommended to compare your control box and old remote with the images provided below. Look for model numbers on the control box label, typically found on the underside or side of the unit.

Important Note:

Before placing your order please provide us with clear pictures of your control box and old remote (front & back) in order to match the correct remote to your bed, like this:

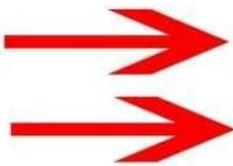


Image: Example of a compatible remote and control box labels. Verify your control box model number (e.g., JLDP.15.001.015 CU358-2) and the appearance of your old remote against these examples.

1. Battery Installation

1. Remove the battery cover from the back of the remote control.
2. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
3. Replace the battery cover.



Image: Back of the remote with battery cover removed, showing battery placement.

2. Pairing the Remote Control

The remote control must be paired with your adjustable bed base's control box to function. There are typically two methods for pairing:

Method 1: Standard Pairing Procedure

1. Start the massage bed (if applicable) and locate the control box of the bed base.
2. Point the remote control at the control box (you may need to open the remote battery cover to access the pairing button). Press and hold the PAIR button.
3. Continue to press and hold the PAIR button for approximately 30 seconds to complete the pairing process.

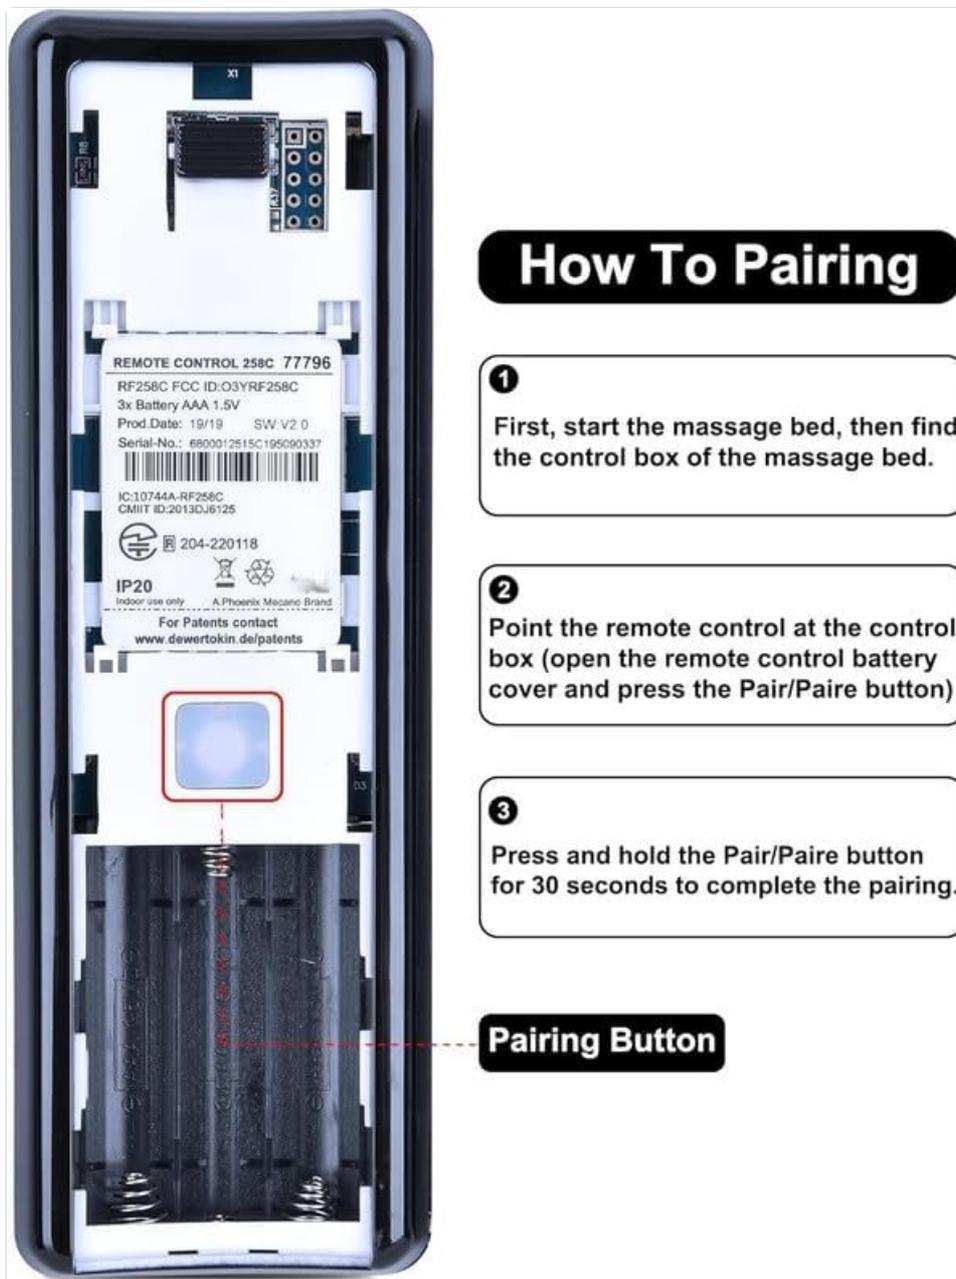


Image: Remote control back with pairing button location and pairing steps.

Method 2: Alternative Pairing Procedure (for some bases)

1. Unplug the power cord of the bed base from the electrical outlet.
2. Wait approximately 5 seconds, then plug the power cord back into the outlet.
3. Within 10 seconds of plugging in the power cord, press and hold the PAIR button on the back of the remote control. The PAIR button will illuminate blue and begin flashing.
4. When the PAIR button stops flashing, the LED light on the control box should go out. Release the PAIR button.
5. The remote is now paired to the adjustable base. Test all remote functions.

Important Note:

Before placing your order please provide us with clear pictures of your control box and old remote (front & back) in order to match the correct remote to your bed, like this:

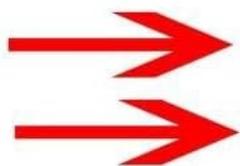


Image: Pairing instructions for specific adjustable bed bases, detailing power cycling and remote button press.

 
OPERATING THE REMOTE CONTROL

Once successfully paired, the remote control allows you to operate your adjustable bed base. The buttons on the remote typically control various functions such as head up/down, foot up/down, and flat position. Refer to the specific layout of your remote for button functions.

How do I pair my remote to my Ease 3.0 base?

To pair your current remote or a new remote to your base please follow the instructions below:

1. Remove the rear cover of the remote, to expose the PAIR button
2. Unplug the base from its power source. Wait 1 minute, then plug the base back in. Perform Step 3 within 10 seconds while the base control box light is still blinking.



3. Press and hold the PAIR button on the back of the remote. The PAIR button will illuminate and start to flash.



4. When the PAIR button stops flashing, the LED light on the control box will stop flashing. Release the PAIR button.
5. Your remote is now paired to your base.

Image: Front view of the remote control, displaying operational buttons.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

- Always use fresh AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed and not depleted. Replace if necessary.
- **Re-pair Remote:** If the remote stops responding, try re-pairing it to the control box using one of the methods described in the Setup section.
- **Control Box Power:** Verify that the adjustable bed base is plugged into a working electrical outlet and receiving power.
- **Obstructions:** Ensure there are no obstructions between the remote and the control box that could interfere with the infrared signal.

Pairing Difficulties (In Case of Trouble)

If standard pairing methods fail, try the following:

1. Remove the battery cover from the remote. Insert/check 3x AAA batteries.
2. Push the reset button on the control box twice with a small, pointed object. The green pairing LED adjoining should light up. You have 10 seconds to pair.
3. On the back of the remote, locate the silicone push button (often positioned above the batteries). Press and hold this button. A blue LED should start blinking. Keep it pressed until the blue LED is lit continuously, then turns off. Pairing is complete.

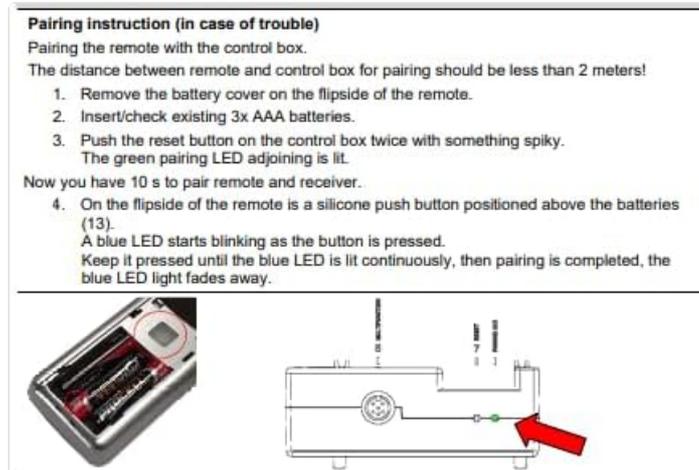


Image: Troubleshooting pairing instructions, illustrating the reset button on the control box and the pairing button on the remote.

SPECIFICATIONS

Brand: Generic

Color: Black

Compatible Devices: Adjustable bed base (specifically with Okin JLDK.30.03.10 or JLDP.15.001.015 CU358-2 control boxes)

Connectivity Technology: Infrared

Controller Type: Button Control

Button Quantity: 2 (implied by image, but product description says 2, while image shows more. Sticking to product description for this specific detail)

Maximum Range: 8 Meters

Batteries Required: 2 AAA batteries (not included)

WARRANTY

This product comes with a 90-day warranty from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

SUPPORT

If you encounter issues not covered in this manual or require further assistance, please contact the seller or manufacturer for support. Providing clear pictures of your control box and old remote (front & back) can help expedite support inquiries.

