

TANALAZ K71Pro

TANALAZ K71Pro Karaoke Machine User Manual

Model: K71Pro

1. INTRODUCTION

Thank you for purchasing the TANALAZ K71Pro Karaoke Machine. This portable and versatile system is designed to provide an enjoyable singing experience for all ages, featuring wireless microphones, dynamic LED lights, and various voice effects. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.



Image: The TANALAZ K71Pro Karaoke Machine, showcasing the main speaker unit, two wireless microphones, and the dedicated microphone base.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Karaoke Machine Speaker
- 2 x Wireless Microphones
- 1 x Microphone Base/Holder
- 1 x USB Type-C Charging Cable
- 1 x User Manual
- 1 x AAA Battery (included for initial use)

BEST PRESENT FOR KIDS AND FAMILY

Gift Package Makes it Good Choice for Your Families and Friends



Image: A visual representation of all items included in the TANALAZ K71Pro package, including the speaker, microphones, base, cable, and box.

3. PRODUCT OVERVIEW

Speaker Unit

- **Power Button:** Press and hold to turn on/off.
- **Volume Controls:** Buttons for increasing and decreasing speaker volume.
- **Mode Button:** Cycles through input modes (Bluetooth, AUX, TF Card).
- **LED Lights:** Dynamic lighting effects around the top of the speaker.
- **Charging Port:** USB Type-C port for charging.
- **TF Card Slot:** For playing music directly from a TF (microSD) card.

- **AUX Port:** For wired audio input.

Wireless Microphones

- **Power Button:** Press and hold to turn on/off.
- **Volume Controls:** Buttons for increasing and decreasing microphone volume.
- **Voice Changer Button:** Cycles through 5 different voice effects.

Microphone Base

- Provides a stable and organized storage solution for the two wireless microphones.
- Designed to prevent microphones from falling and ensures easy access.



Image: The TANALAZ K71Pro speaker alongside its two wireless microphones securely placed in their dedicated base.

4. SETUP

4.1 Charging the Devices

Before first use, fully charge the karaoke machine speaker and both wireless microphones.

1. Connect the supplied USB Type-C charging cable to the charging port on the speaker unit.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light on the speaker will illuminate during charging and turn off when fully charged.

4. For the microphones, insert the AAA battery (included) into each microphone. The microphones are powered by AAA batteries and do not charge via the base.

The speaker's built-in 1200mAh battery provides approximately 4-6 hours of use on a full charge.

4.2 Powering On/Off

- **Speaker:** Press and hold the power button on the speaker until you hear a prompt or see the LED lights activate.
- **Microphones:** Press and hold the power button on each microphone until the indicator light turns on.
- To power off, repeat the process for both the speaker and microphones.

4.3 Microphone Pairing

The wireless microphones are designed to automatically pair with the speaker unit when both are powered on. If pairing does not occur automatically, ensure both devices are charged and within close proximity, then power cycle them.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Connection

The speaker is equipped with Bluetooth 5.3 technology for stable and fast wireless connection.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing light or voice prompt).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "K71Pro" from the list.
4. Once connected, you will hear a confirmation sound from the speaker.



Image: The TANALAZ K71Pro demonstrating its wide compatibility, connecting to laptops, tablets, and smartphones via Bluetooth, AUX, and TF card.

5.2 AUX/TF Card Connection

- **AUX Input:** Connect an audio device (e.g., MP3 player, computer) to the speaker's AUX port using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode or you may need to press the Mode button.
- **TF Card Playback:** Insert a TF (microSD) card with your desired music files into the TF card slot on the speaker. The speaker will automatically begin playing music from the card.

5.3 Playing Music and Singing

- Once connected via Bluetooth, AUX, or TF card, start playing your desired karaoke tracks or music from your connected device.
- Adjust the speaker's volume using the volume buttons on the speaker unit.
- Adjust the microphone volume using the volume buttons on each wireless microphone.
- Sing into the microphones to hear your voice amplified through the speaker.

6. VOICE CHANGER FEATURES

The wireless microphones feature 5 different voice effects to add fun to your singing. Press the voice changer button on the microphone to cycle through the following modes:

- **Original Voice:** Your natural voice.
- **Female Voice:** Changes your voice to a higher pitch.
- **Male Voice:** Changes your voice to a lower pitch.
- **Monster Voice:** A deep, distorted voice effect.
- **Baby Voice:** A high-pitched, childlike voice effect.



Image: Illustration of the five voice changer modes available on the TANALAZ K71Pro: Monster, Female, Original, Baby, and Male voices.

7. PARTY LIGHTING MODE

The speaker unit features dynamic LED lights that change colors, creating an immersive and festive atmosphere for your karaoke sessions or parties. The lights automatically activate when the speaker is powered on and can cycle through various patterns and colors.



Image: The TANALAZ K71Pro speaker displaying its dynamic lighting effects, including colored running water, monochrome alternation, gradient, color breathing, and monochromatic breathing modes.

8. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- Keep the device away from water, moisture, and direct sunlight.
- Store the karaoke machine and microphones in a cool, dry place when not in use.
- If not using for an extended period, remove batteries from the microphones to prevent leakage.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker	Speaker is off; Low battery; Volume too low; Incorrect input mode; Bluetooth not connected.	Ensure speaker is on; Charge speaker; Increase volume; Press Mode button to select correct input; Reconnect Bluetooth.
Microphone not working	Microphone is off; Low battery in microphone; Microphone not paired.	Ensure microphone is on; Replace AAA batteries; Power cycle microphone and speaker to re-pair.
Bluetooth connection unstable	Device too far from speaker; Interference.	Move device closer to speaker (within 10 meters); Avoid obstacles between devices; Turn off other Bluetooth devices.
Voice changer not working	Incorrect button pressed; Microphone issue.	Ensure you are pressing the dedicated voice changer button; Check microphone battery.

10. SPECIFICATIONS

- **Model Number:** K71Pro
- **Brand:** TANALAZ
- **Color:** Dark Blue
- **Item Weight:** 1.1 pounds (0.5 kg)
- **Product Dimensions:** 7.87 x 7.87 x 2.95 inches (20 x 20 x 7.5 cm)
- **Speaker Dimensions:** 3.7 x 3.14 x 3.42 inches (9.4 x 8 x 8.7 cm)
- **Microphone Dimensions:** 5.51 inches (14 cm) length, 1.57 inches (4 cm) diameter
- **Speaker Battery:** 1200mAh (built-in)
- **Microphone Battery:** 1 x AAA battery per microphone (included)
- **Power Source:** Battery Powered
- **Voltage:** 5 Volts
- **Connector Type:** USB Type-C
- **Speaker Count:** 1
- **Special Feature:** Portable

MINI PORTABLE DESIGN

With Hand Strap You Can Take it Any Where You Want



*Only Can Work as Microphone Base No Charging Function

Image: Detailed dimensions of the TANALAZ K71Pro speaker and microphones, highlighting its mini portable design.

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided by your retailer or visit the official TANALAZ store on Amazon. Keep your purchase receipt for any warranty claims.

© 2025 TANALAZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question