

[Manuals.plus](#) /

› [Jazmm](#) /

› Jazmm Bluetooth AM FM Radio User Manual

Jazmm 939

Jazmm Portable Bluetooth AM FM Radio User Manual

Model: 939

INTRODUCTION

Thank you for purchasing the Jazmm Portable Bluetooth AM FM Radio. This device combines classic radio functionality with modern connectivity, offering AM/FM radio, Bluetooth streaming, and MP3 playback via USB or SD card. Its compact design, powerful speaker, and long-lasting rechargeable battery make it an ideal audio companion for various activities. This manual provides detailed instructions to help you set up, operate, and maintain your radio for optimal performance.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using this product to ensure safe operation and prevent damage.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight, heat sources, and open flames.
- Use only the specified charging cable and power adapter (if applicable) to charge the battery.
- Dispose of batteries properly according to local regulations.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Jazmm Portable Bluetooth AM FM Radio (Model 939)
- USB-C Charging Cable
- Wrist Strap
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your radio.



Image: Front view of the Jazmm Portable Bluetooth AM FM Radio, showing the LCD display, speaker, control buttons, and a side view of the charging port and antenna.

The radio features a clear LCD display, intuitive button controls for tuning and mode selection, a powerful front-facing speaker, and a retractable antenna for improved reception. On the side, you'll find the USB-C charging port, volume controls, and a power button. A foldable stand is integrated for desktop use, and a detachable wrist strap is included for portability.

SETUP

Charging the Battery

Before first use, fully charge the radio's built-in 1200mAh rechargeable battery.

1. Connect the provided USB-C charging cable to the charging port on the side of the radio.
2. Connect the other end of the USB-C cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator on the LCD display will show charging status. A full charge typically takes 2-3 hours.

4. Once fully charged, the battery icon will indicate full, and the radio offers up to 7 hours of continuous playtime (varies by volume).



Image: Illustration of the radio connected to a USB-C charger, highlighting the 1200mAh battery and charging duration.

Attaching the Wrist Strap

For enhanced portability and security, attach the included wrist strap to the designated loop on the radio.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, press and hold the **Power** button until the LCD screen illuminates.
- To power off, press and hold the **Power** button again until the screen turns off.

Volume Control

Use the **+** and **-** buttons on the side of the radio to adjust the volume level.

Radio Mode (AM/FM)

The radio supports both AM and FM bands with excellent reception.

1. Press the **BAND** button to switch between FM and AM bands.
2. **Manual Tuning:** Use the **<** and **>** buttons to manually tune to a specific frequency.
3. **Auto Scan & Presets:**
 - Press the **MEMO/SCAN** button to initiate an auto-scan. The radio will automatically scan and save available stations (up to 99 AM and 99 FM presets).
 - Once stations are saved, use the **CH-** and **CH+** buttons to navigate through the preset stations.
 - To manually save a station, tune to the desired frequency, then press and hold the **MEMO/SCAN** button until the preset number flashes, then use **CH-/CH+** to select a preset slot and press **MEMO/SCAN** again to confirm.
4. **Antenna:** Extend the telescopic antenna for optimal FM reception. For AM reception, the internal antenna is usually sufficient, but rotating the radio may improve signal.

AM FM Radio With Best reception

Powerful DSP chip and long antenna can receive stable signal reception



Image: Visual representation of the radio's AM/FM reception capabilities, showing frequency ranges and signal strength.

Auto Scan and Up to **198 Preset Stations**

99 AM Preset Stations



99 FM Preset
Stations



Auto
Scan



LCD Digital
Frequency

Come with wrist strap



Image: Close-up of the radio's display showing auto-scan and preset station functionality, with various preset numbers indicated.

Bluetooth Mode


Connect your smartphone or other Bluetooth-enabled devices to stream audio wirelessly.

1. Press the **MP3/BT/EQ** button repeatedly until "BT" appears on the LCD display, indicating Bluetooth mode.

2. The radio will enter pairing mode, and the Bluetooth icon will flash.
3. On your device, enable Bluetooth and search for "AM939" in the list of available devices.
4. Select "AM939" to pair. Once connected, the Bluetooth icon on the radio's display will stop flashing.
5. You can now play audio from your connected device through the radio.

3 Ways to Listen Your Favorite Music

Easily connect and play wireless music

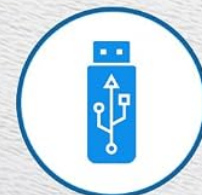

USB Mode



TF Mode



Bluetooth 5.3



Image: Visual guide demonstrating the three playback modes: Bluetooth, USB, and TF (SD) card, with a phone wirelessly connected to the

radio.

USB/SD Card MP3 Player Mode

Play MP3 audio files directly from a USB flash drive or SD (TF) card (up to 32GB).

1. Insert a USB flash drive into the USB port or an SD card into the TF card slot.
2. Press the **MP3/BT/EQ** button repeatedly until "USB" or "TF" appears on the LCD display. The radio will automatically start playing MP3 files.
3. Use the < and > buttons to skip tracks.
4. The radio supports auto-resume playback, picking up where you left off.

EQ Modes (Equalizer)

Customize your audio experience with 6 preset equalizer modes.

- In any playback mode (Radio, Bluetooth, USB/SD), press the **MP3/BT/EQ** button (short press) to cycle through the EQ modes: Pop, Rock, Jazz, Classic, Vocal, Flat.
- Select the mode that best suits your listening preference.

5W Large Speaker

Powerful sound with 6 EQ stereo effects



Image: Depiction of the radio's 5W speaker and the six available EQ modes for sound customization.

Headphone Jack

For private listening, connect standard 3.5mm headphones to the headphone jack on the side of the radio.

- When headphones are connected, audio will automatically switch from the speaker to the headphones.

- Adjust volume using the + and - buttons.

Supports 3.5mm Stereo Headphone Output

Enjoy your music without interruption



Image: A user enjoying music privately with headphones connected to the radio's 3.5mm stereo headphone output.

Sleep Timer

Set the radio to automatically shut down after a specified period.

- While the radio is on, press the **Sleep Timer** button (if available, or refer to specific button on device if not labeled).
- Cycle through the available sleep timer options: 10, 30, 60, or 90 minutes.
- The radio will automatically power off after the selected time.

Sleep Timer

10-30-60-90min auto shutdown

(Come with desktop bracket)

10min 30min 60min 90min

Image: Scene depicting the radio on a bedside table, illustrating the sleep timer function with options for 10, 30, 60, and 90 minutes auto shutdown.

MAINTENANCE

- **Cleaning:** Wipe the radio's surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the radio for an extended period, charge it to about 50% every few months.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not turn on.	Battery is depleted.	Charge the radio fully using the USB-C cable.
Poor radio reception.	Antenna not extended (FM); weak signal; interference.	Extend the telescopic antenna fully for FM. Try rotating the radio for AM. Move away from electronic devices that may cause interference. Perform an auto-scan.
Bluetooth device cannot connect.	Radio not in Bluetooth pairing mode; device too far; already connected to another device.	Ensure the radio is in Bluetooth mode ("BT" flashing). Make sure your device's Bluetooth is on and within range (approx. 10 meters). Disconnect from other Bluetooth devices.
No sound from USB/SD card.	Incorrect mode; unsupported file format; corrupted files; card/drive not inserted correctly.	Ensure the radio is in USB or TF mode. Verify files are MP3 format. Reinsert the USB drive/SD card. Try a different USB drive/SD card.
Sound distortion.	Volume too high; weak signal; audio source issue.	Lower the volume. For radio, try to improve reception. Check the audio source if using Bluetooth/USB/SD.

SPECIFICATIONS

Brand	Jazmm
Model Number	939
Dimensions (L x W x H)	6.6 x 2.8 x 12.7 cm
Weight	157 g
Battery	1200mAh Rechargeable (included)
Charging Time	Approx. 2-3 hours
Playtime	Up to 7 hours (varies by volume)
Connectivity	Bluetooth 5.0, USB, SD Card, 3.5mm Auxiliary
Speaker Output	5W
Radio Bands	AM/FM
Preset Stations	Up to 198 (99 AM + 99 FM)

Supported Media	MP3 from USB/SD card (up to 32GB)
Color	Black

WARRANTY AND SUPPORT

Jazmm offers a **12-month warranty** on this AM/FM radio. If you encounter any issues or require assistance, please contact our customer service team. We are committed to providing **24/7 world-class customer service** to ensure your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the official Jazmm website.

© 2025 Jazmm. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

- How do I replace the battery in the Jazmm 939 Portable Bluetooth AM FM Radio?**

The Jazmm 939 Portable Bluetooth AM FM Radio comes with a built-in 1200mAh rechargeable battery. The user manual states, "Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel."...

[Read full answer](#)
- How do I change the Jazmm 939 AM radio from 10kHz intervals (America) to 9kHz intervals (Australia)?**

Based on the available manual for the Jazmm 939, there are no specific instructions provided for switching the AM

frequency step between 9kHz and 10kHz. Most digital radios of this type use a hidden...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0F5QDXHJQ>

More documents and user manuals: <https://manuals.plus/>